


Instruction Manual

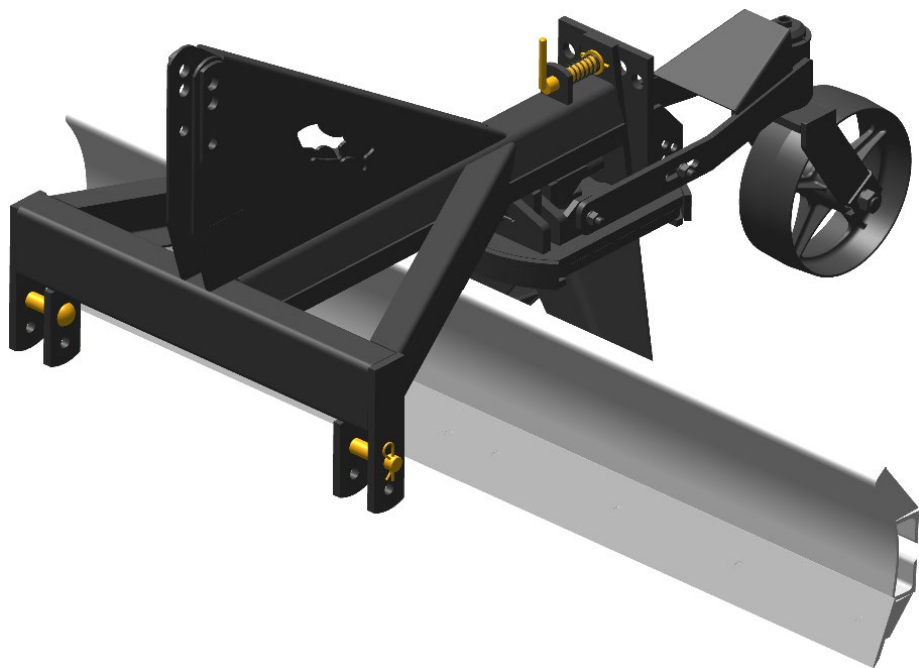

LT

Reversible Rear Blade

 **BALDAN**

■ Presentation

We appreciate your preference and congratulate you for the Excellent choice you have just made, as you have purchased a product manufactured with **BALDAN**



IMPLEMENTOS AGRÍCOLAS S/A.

This manual will guide you through the procedures that are necessary since its acquisition until the operating procedures of use, safety and maintenance.

BALDAN guarantees that it delivered this implement to the reseller complete and in perfect condition.


The resale is accountable for the custody and maintenance during the period it was in its power, and also for assembly, retightening, lubrication and overhaul.

In technical delivery, the dealer should guide the user customer regarding maintenance, security, their obligation to possible technical assistance, the strict observance of the warranty and reading the instructions manual.

Any request for technical assistance under warranty must be made to the dealer where it was purchased.

We reiterate the need for careful reading of the warranty certificate and the observance of all items in this manual, because doing so will increase the life of your implement.

Instruction Manual

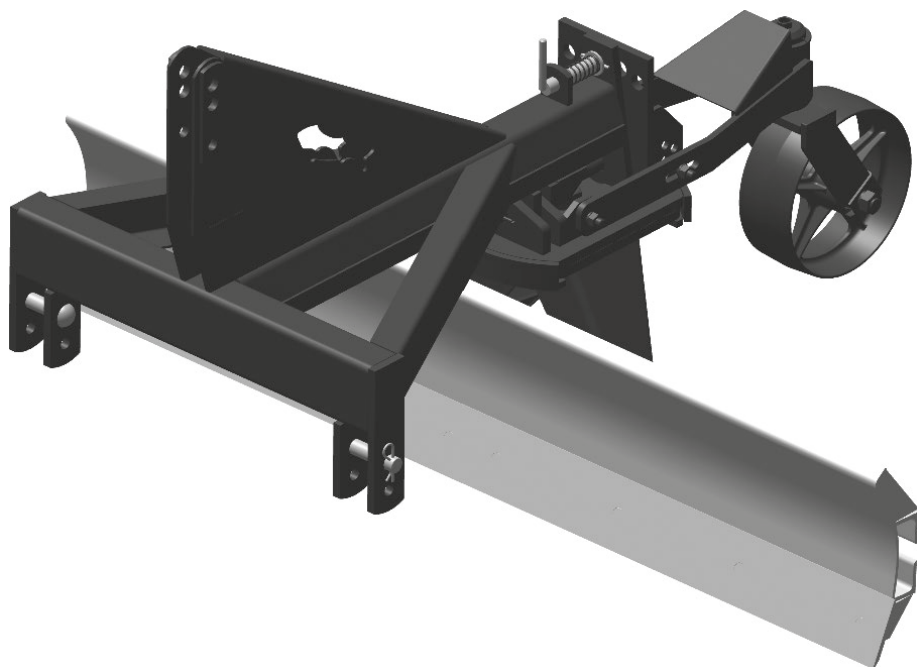

LT

Reversible Rear Blade

BALDAN IMPLEMENTOS AGRÍCOLAS S/A.
CNPJ: 52.311.347/0009-06
Insc. Est.: 441.016.953.110



Scan the QR Code on the nameplate of your equipment and access this instruction Manual online.

 **BALDAN**

▪ Index

BALDAN WARRANTY	07
GENERAL INFORMATION	08
<i>To owner</i>	<i>08</i>
SAFETY STANDARDS	09
<i>To operator</i>	<i>09 - 12</i>
WARNINGS	13 - 14
COMPONENTS.....	15
<i>LT - Reversible Rear Blade</i>	<i>15</i>
DIMENSIONS	16
<i>LT - Reversible Rear Blade</i>	<i>16</i>
SPECIFICACIONES.....	17
<i>LT - Reversible Rear Blade</i>	<i>17</i>
ASSEMBLY	18
<i>Planer assembly.....</i>	<i>18</i>
<i>Assembly the height control bracket (optional).....</i>	<i>19</i>
HITCH.....	20
<i>Tractor hitch</i>	<i>20</i>
ADJUSTMENTS	21
<i>Planer centralization.....</i>	<i>21</i>
<i>Planer levelling</i>	<i>22</i>
<i>Horizontal angle adjustment of the blade.....</i>	<i>23</i>
<i>Vertical blade angle adjustment</i>	<i>24</i>
<i>Cutting depth adjustment</i>	<i>25</i>
<i>Height control support adjustment</i>	<i>25</i>
<i>Lateral adjustment of the blade.....</i>	<i>26</i>
MAINTENANCE	27
<i>Recommendations for operation.....</i>	<i>27</i>
<i>General recomendation</i>	<i>27</i>
<i>Lubrication.....</i>	<i>27</i>
<i>Table of greases and equivalents.....</i>	<i>28</i>
<i>Lubricate every 8 hours of work.....</i>	<i>28</i>
<i>Cares</i>	<i>29</i>
<i>General cleaning</i>	<i>30</i>
<i>Planer conservation - Part I</i>	<i>30</i>
<i>Planer conservation - Part II.....</i>	<i>30 - 31</i>
OPTIONAL.....	32
<i>Optional accessories</i>	<i>32</i>
IDENTIFICATION.....	33
<i>Identification plate.....</i>	<i>33</i>

▪ Index

<i>Product identification</i>	<i>34</i>
NOTES.....	35
CERTIFICATE.....	36
<i>Certificate of warranty</i>	<i>36 - 42</i>

▪ **Baldan Warranty**

BALDAN IMPLEMENTOS AGRÍCOLAS S/A guarantees the normal operation of the implement to the dealer for a period of 6 (six) months from the date of delivery on the resale invoice to the first end consumer.

During this period, **BALDAN** undertakes to remedy defects in materials and/or workmanship of its responsibility, being labor, freight and other expenses the dealer's responsibilities.

During the warranty period, the request and replacement of any defective parts must be made to the regional dealer, who will send the defective part for analysis at **BALDAN**.

When such procedure is not possible and the reseller has exhausted its resolution capacity, it will request support from **BALDAN's** Technical Assistance, through a specific form distributed to resellers.

After analyzing the replaced items by **BALDAN's** Technical Assistance, and concluding that it is not a warranty, then the costs related to the replacement will be the responsibility of the dealer;

as well as expenses for material, travel including accommodation and meals, accessories, used lubricant and other expenses arising from the call for Technical Assistance, and the company **BALDAN** is authorized to make the respective billing on behalf of the reseller.

Any repair made to the product that is within the warranty period by the dealer, will only be authorized by **BALDAN** upon prior presentation of a quote describing parts and labor to be performed.

This term excludes the product that undergoes repairs or modifications by officials who do not belong to the **BALDAN** dealer network, as well as the application of non-genuine parts or components to the user's product.

This guarantee will become null when it is determined that the defect or damage is resulting from improper product use, failure to follow instructions or the inexperience of the operator.

It is agreed that this warranty does not cover tires, deposits of polyethylene, cardans, hydraulic components, etc., which are equipment guaranteed by their manufacturers.

Manufacturing and or material defects, object of this warranty term, will not constitute, under any circumstances, reason for purchase and sale contract termination, or compensation of any nature.

Baldan reserves the right to change and/or improve the technical characteristics of its products, without prior notice, and without obligation to do so with previously manufactured products.

▪ General Information

• To owner

BALDAN IMPLEMENTOS AGRÍCOLAS S/A, is not responsible for any damage caused by accident from use, transport or in improper or incorrect storage of your implement, whether by negligence and / or inexperience of anyone.

Only people who have full knowledge of the tractor and the implement must make the transport and the operation thereof

BALDAN is not responsible for any damage caused in unpredictable situations or others to implement's normal use.

Improper handling of this equipment can result in serious or fatal accidents. Before putting the equipment into operation, carefully read the instructions contained in this manual. Make sure that the person responsible for the operation is instructed in the correct and safe handling. Also make sure the operator has read and understood the product instruction manual.

ATTENTION

NR-31 - SAFETY AND HEALTH AT WORK IN AGRICULTURE, LIVESTOCK FORESTRY, LOGGING AND AQUACULTURE.

This Regulatory Standard is to establish the principles to be observed in the organization and in the workplace, consistent with planning and development of agricultural, livestock, forestry, logging and aquaculture activities with safety and health, environment of Work.

MR. OWNER OR EQUIPMENT OPERATOR.

Read and follow carefully the provisions of NR-31.

More information, visit the website and read in full the NR-31.
<http://portal.mte.gov.br/legislacao/normas-regulamentadoras-1.htm>

▪ Safety Standards

- To operator



THIS SYMBOL INDICATES AN IMPORTANT SAFETY WARNING. IN THIS MANUAL, WHENEVER YOU FIND IT, CAREFULLY READ THE FOLLOWING MESSAGE AND BE AWARE OF THE POSSIBILITY OF PERSONAL INJURY.



ATTENTION



Read the instruction manual carefully for recommended safety practices.



ATTENTION



Only start operating the tractor when you are properly accommodated and with the seat belt fastened.




ATTENTION



Do not transport people on the tractor or inside or on the equipment.



ATTENTION

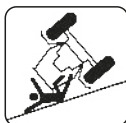

There is a risk of serious injury from tipping over when working on slopes. Do not use excessive speed.



ATTENTION



Do not work with the tractor if the front is without enough ballast for the rear equipment. If there is a tendency to lift, add weights or weights to the front or front wheels.



ATTENTION



Before doing any maintenance on your equipment, make sure it is properly stopped. Avoid getting run over.

▪ Safety Standards

! ATTENTION FOLLOW ALL RECOMMENDATIONS, WARNINGS AND SAFE PRACTICES RECOMMENDED IN THIS MANUAL, UNDERSTAND THE IMPORTANCE OF YOUR SAFETY. ACCIDENTS CAN LEAD TO DISABILITY OR EVEN DEATH. REMEMBER, ACCIDENTS CAN BE AVOIDED!

! ATTENTION




Do not make adjustments with the LT in operation. When doing any work on the LT, turn off the tractor first. Use proper tools.

! ATTENTION




When looking for a possible leak in the hoses, use a piece of cardboard or wood, never use your hands. Avoid incising fluid into the skin.

! ATTENTION

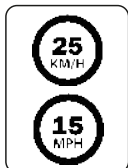


When transporting the LT, do not exceed a speed of 25 km/h or 15 MPH, avoiding the risk of damage and accidents.

! ATTENTION

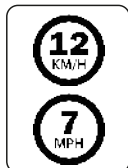

When working with the LT, do not exceed the speed of 12 km/h or 7 MPH, avoiding the risk of damages and accidents.

! ATTENTION

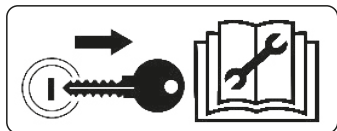

Remove the ignition key before performing any maintenance on the LT. Protect yourself from possible injury or death caused by an unforeseen departure of the LT. If the LT is not properly engaged, do not start the tractor.

! ATTENTION



• Improperly disposing of waste affects the environment and ecology, as it will be polluting rivers, canals or the soil. Find out about the correct way to recycle or dispose of waste.

PROTECT THE ENVIRONMENT!

▪ Safety Standards



ATTENTION

FOLLOW ALL RECOMMENDATIONS, WARNINGS AND SAFE PRACTICES RECOMMENDED IN THIS MANUAL, UNDERSTAND THE IMPORTANCE OF YOUR SAFETY. ACCIDENTS CAN LEAD TO DISABILITY OR EVEN DEATH. REMEMBER, ACCIDENTS CAN BE AVOIDED!



ATTENTION



Always keep the access and work places clean of residues such as oil or grease, as they can cause accidents.



ATTENTION



Before starting work on or transporting the LT, check it for people or obstructions.

▪ Safety Standards

• PPE Equipment

! ATTENTION | DO NOT WORK WITH THE LT WITHOUT PUTTING THE PPE (SAFETY EQUIPMENT) ON BEFORE. IGNORING THIS WARNING COULD CAUSE HEALTH DAMAGE, SERIOUS INJURY OR DEATH.

When performing certain procedures with the LT, put the following PPE (Safety Equipment) below:







 
 













! IMPORTANT

The safety practice must be carried out at all stages of work with the LT, thus avoiding accidents such as impact from objects, falls, noise, cuts and ergonomics; that is, the person responsible for operating the LT is subject to internal and external damage to his or her body.












🔍 OBSERVATION | All PPE (Security Equipment) must have a certificate of authenticity.



▪ Warnings

-  When operating the LT, do not allow people to stand too close or on top of it.
-  When carrying out any maintenance service, use PPE equipment.
-  Do not wear clothes that are too loose as they could get tangled in the LT.
-  When starting the tractor engine, be properly seated in the operator's seat and aware of complete knowledge of the correct and safe handling of both the tractor and the LT. Always place the gearshift lever in the neutral position, disconnect the control gear from the power take-off and place the hydraulic controls in the neutral position.
-  Do not start the tractor engine indoors, without adequate ventilation, as the exhaust gases are harmful to health.
-  When maneuvering the tractor to hitch the LT, make sure you have the necessary space and that no one is too close, always maneuver at idle and be prepared to brake in an emergency.
-  Do not make adjustments while the LT is running.
-  When working on sloping terrain, proceed with care, always seeking to maintain the necessary stability. In case of unbalance start, reduce the acceleration, turn the wheels to the slope side of the terrain and never raise the LT.
-  Always drive the tractor at speeds compatible with safety, especially when working on rough terrain or on slopes, keep the tractor always engaged.
-  When driving the tractor on roads, keep the brake pedals interlocked.
-  Do not operate the tractor with a light rear. If the rear tends to lift, add more weight to the rear wheels.
-  When leaving the tractor, place the gearshift lever in neutral and apply the parking brake. Never leave the LT hitched to the tractor in the raised position of the hydraulic system.
-  Any and all maintenance on the LT must be carried out with the same stop and with the tractor turned off.
-  Do not travel on highways, especially at night. Use warning signs throughout the route.
-  If you need to travel with the LT on the highways, consult the traffic authorities.
-  Do not allow the use of the LT by people who have not been trained, that is, who do not know how to operate it correctly.
-  Do not transport or operate the LT near obstacles, rivers or streams.
-  The transport of people in self-propelled machines and implements is prohibited.
-  Alterations of the original characteristics of the LT are not authorized, as they may alter safety, functioning and affect its useful life.

▪ Warnings


-  Do not allow anyone, especially children, to be near or on the plane while it is being transported, operated or stored.
-  Carefully read all safety information contained in this manual and in the LT.
-  Read or explain all procedures in this manual to the operator who cannot read.
-  Always check that the LT is in perfect working condition. In case of any irregularity that may interfere with the functioning of the LT, arrange for proper maintenance before any work or transport.
-  The maintenance and especially the inspection in risk areas of the LT, must only be done by a trained or qualified worker, observing all safety guidelines. Before starting maintenance, disconnect all drive systems from the LT.
-  Periodically check all components of the LT before using it.
-  Depending on the equipment used and the working conditions in the field or in maintenance areas, precautions are necessary. Baldan has no direct control over precautions, so it is the owner's responsibility to put in place safety procedures while working with the LT.
-  Check the minimum tractor power recommended for the LT. Only use a tractor with power and ballast compatible with the load and topography of the land.
-  When transporting the LT, travel at speeds compatible with the terrain and never above 25 km/h, this reduces maintenance and consequently increases the life of the LT.
-  Alcoholic beverages or some medications can cause loss of reflexes and alter the operator's physical condition. Therefore, never operate this LT under the use of these substances.
-  Read or explain all the procedures in this manual to the user who cannot read.

If in doubt, contact the After Sales.
Telephone: 0800-152577 / E-mail: posvenda@baldan.com.br

▪ **Components**


• **LT - Reversible Rear Blade**

1. Framework
2. Planer
3. Blade
4. Horizontal and vertical inverter
5. Hitch pin
6. Height control support

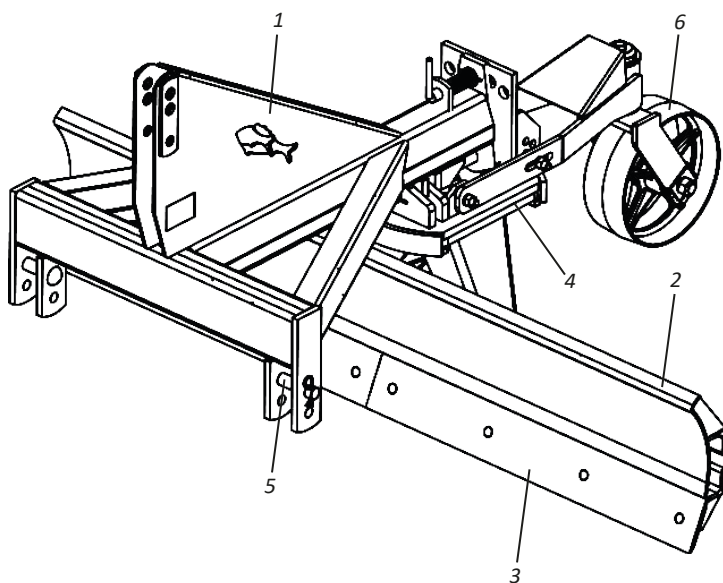

▪ Dimensions

• LT - Reversible Rear Blade

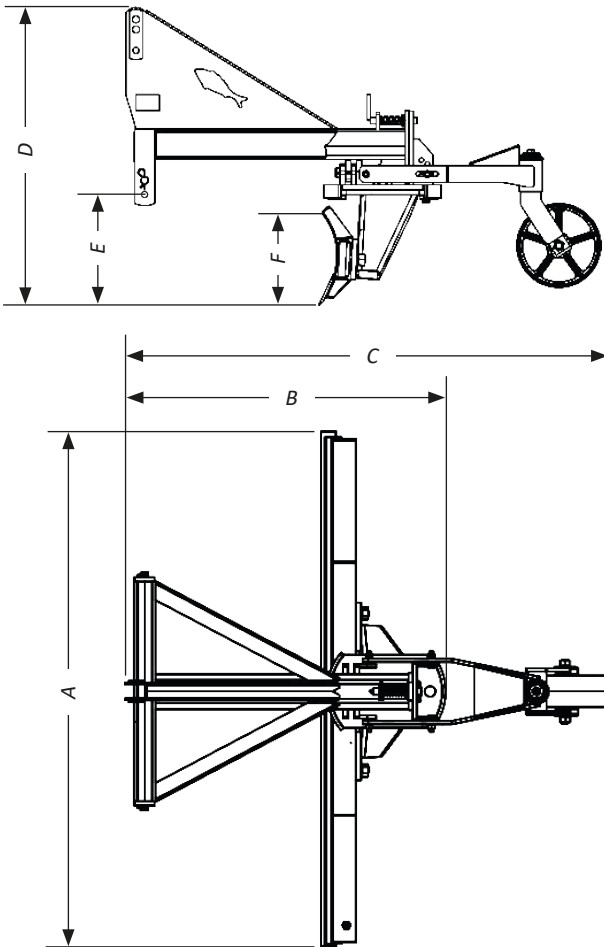

Model	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (mm)
LT	1500	1200	1800	1133	422	346
	1900	1200	1800	1133	422	346
	2100	1200	1800	1296	639	456
	2200	1200	1800	1136	425	347
	2300	1200	1800	1136	425	347
	2400	1200	1800	1291	635	453

▪ Specifications

• LT - Reversible Rear Blade

Model	Cutting width (mm)	Blade Height (mm)	Approximate weight (Kg)	Tractor power (HP)
LT	1500	380	233	60 à 70
	1900	380	248	60 à 70
	2100	490	310	60 à 70
	2200	380	264	70 à 100
	2300	380	272	70 à 100
	2400	490	325	70 à 100

Horizontal slope 0° - 20° - 40° - 180°

Vertical slope 0° - 12° - 24°

Recommended working maximum speed 12km/h

Recommended transportation maximum speed 25km/h

Baldan reserves the right to change and/or improve the technical characteristics of its products, without prior notice, and without obligation to do so with previously manufactured products.

Technical specifications are approximate and reported under normal working conditions.

IT INTENDED USE

- **LT** was developed to work in various situations of road conservation, secondary roads, irrigation channel building, among others.
- **LT** should only be driven and started by a properly instructed operator.

USE NOT ALLOWED OF IT

- To avoid damages, severe accidents or death, do NOT transport people on any part of **LT**.
- It is NOT to use **LT** to push other implements or accessories.
- **LT** should NOT be used by an inexperienced operator who does not knows all the driving, command and operation techniques.

▪ Assembly

To facilitate loading and transport, the **LT** leaves the factory semi-assembled. To assemble it, follow the instructions on the following pages:

⚠ The assembly of **LT** shall be performed by the dealer, by trained, skilled and qualified personnel for this work.


⚠ Before beginning the assembly of **LT**, look for a good place that facilitates the identification of the parts and their assembly.

⚠ Do not use loose clothing because they may get trapped in the **LT**.

• Planer assembly

In order to assemble the planer (1) of **LT**, proceed as follows:

01 - Attach the planer (1) to the support (2) attaching it with pressure washers (3) and nuts (4).

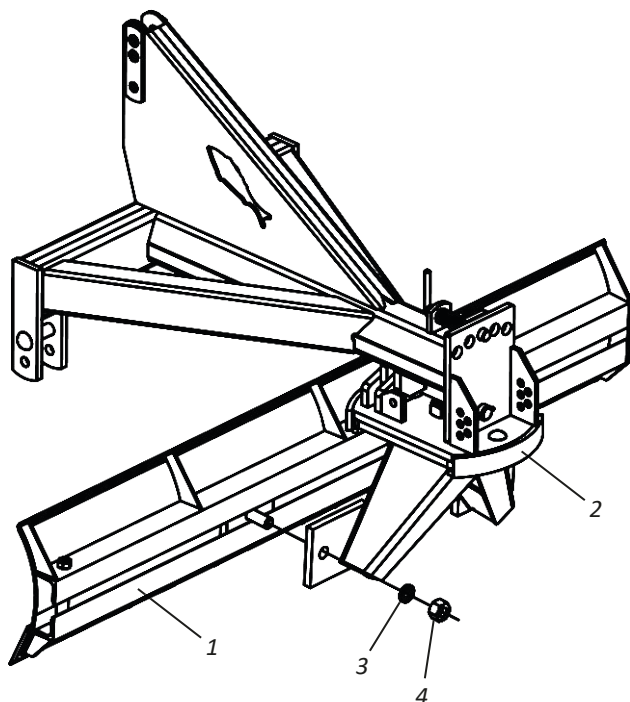


▪ Assembly

• Assembly the height control bracket (optional)

To mount the height control support (1) on the LT, proceed as follows:

- 01** - Attach the height control support (1) to the frame (2) fixing through the screws (3), flat washers (4), lock washers (5) and nuts (6).

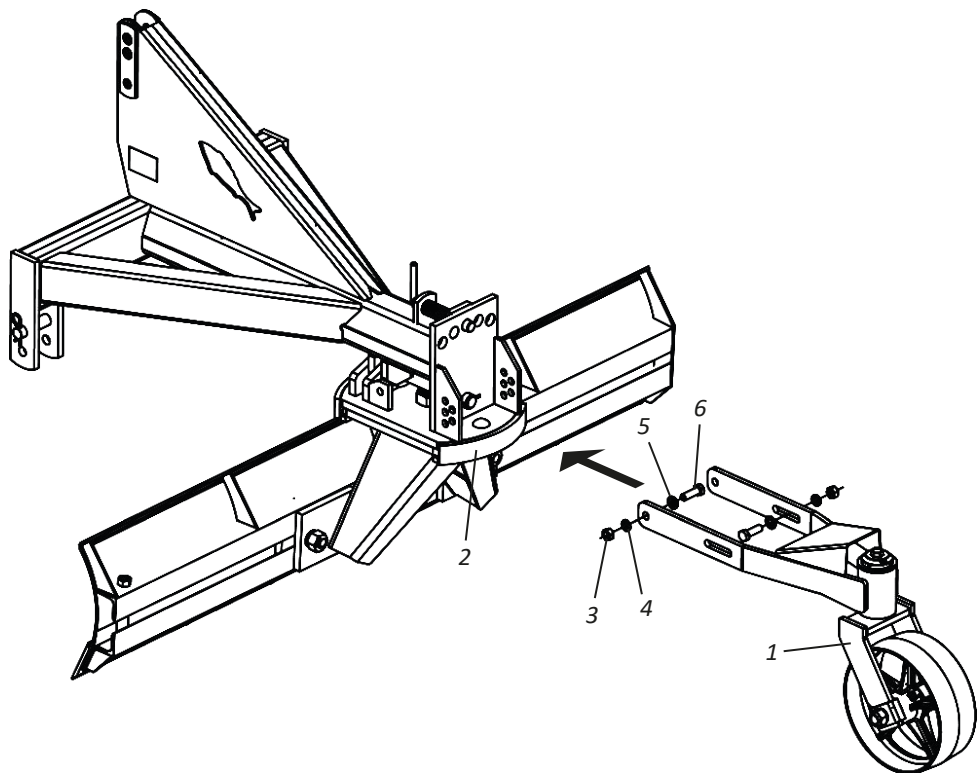


The height control support (1) is not included with the LT, however, it can be purchased optionally as per page 32.

▪ Hitch

• Tractor hitch

To couple **LT**, proceed as follows:

- 01** - Slowly approach the tractor to the **LT** (1) in reverse, being aware when to use the brakes. Use the hydraulic position control lever as you approach the **LT**, leaving the left inferior arm (2) at the level of **LT**'s hitch.
- 02** - Put the pin (3) in **LT**'s hitch and lock it with the lock (4).
- 03** - Then, couple the 3rd point (5) to the tractor and **LT** (1).
- 04** - To finish, couple the right inferior arm (6) that has up and down movements through the levelling handle (7) to the **LT** (1) attaching it with the pin (8) and lock (9).

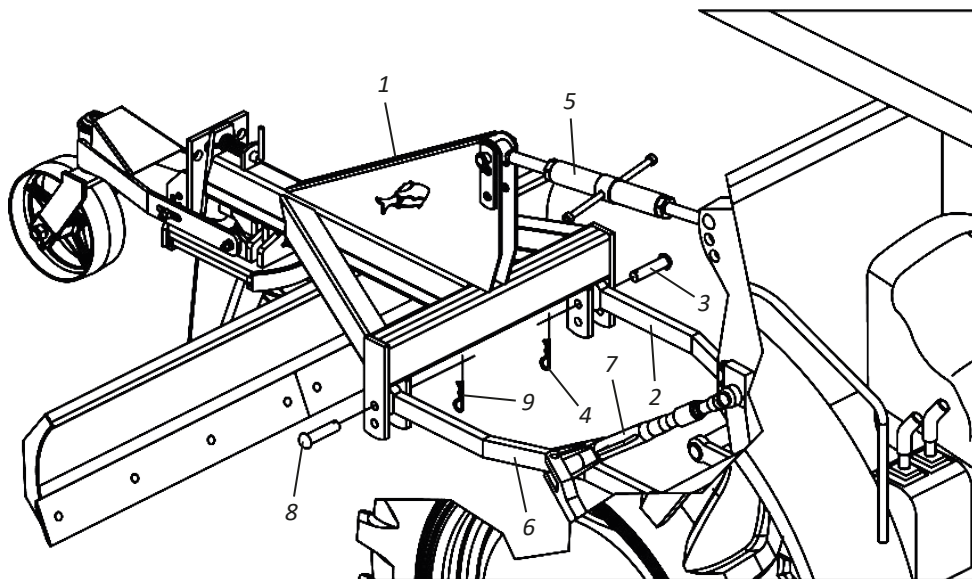

OBSERVATION


When coupling **LT**, look for a safe and easily accessible place. Always use low gear with low acceleration.

▪ Adjustments

• Planer centralization

To center the **LT** relative to the longitudinal axis of the tractor, proceed as follows:

- 01** - Align the superior hitch of the planer with the 3rd point of the tractor, checking that the distances "**A**" of inferior hydraulic arms are equal to the tractor tires. The lower arms should be level with each other.

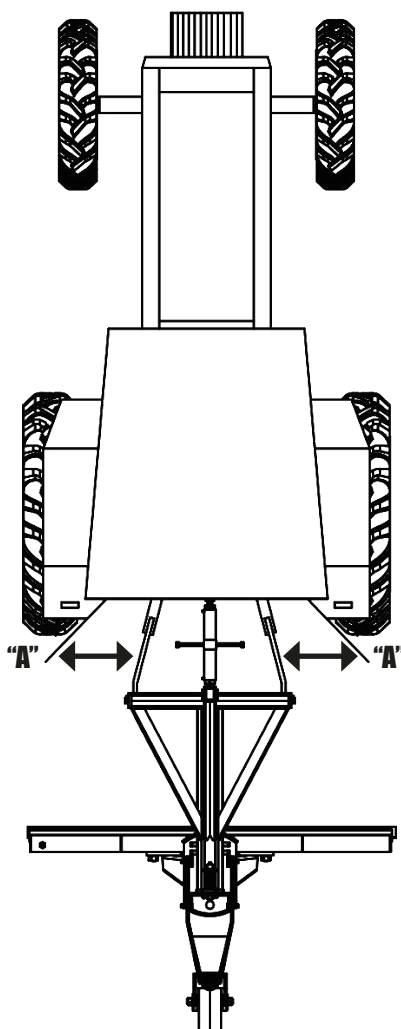


▪ Adjustments

• Planer levelling

To level the **LT**, proceed as follows:

- 01** - First, the tractor must be in a flat location.
- 02** - Next, level the **LT** in the transversal direction (width) through the levelling handle (1) of the right inferior arm of the hydraulic hitch. Note that the "A" measures should be equal.
- 03** - Then, perform the longitudinal levelling (length). This levelling is performed through the 3rd-point hitch (2). Note that the **LT** blade should be parallel to the ground.

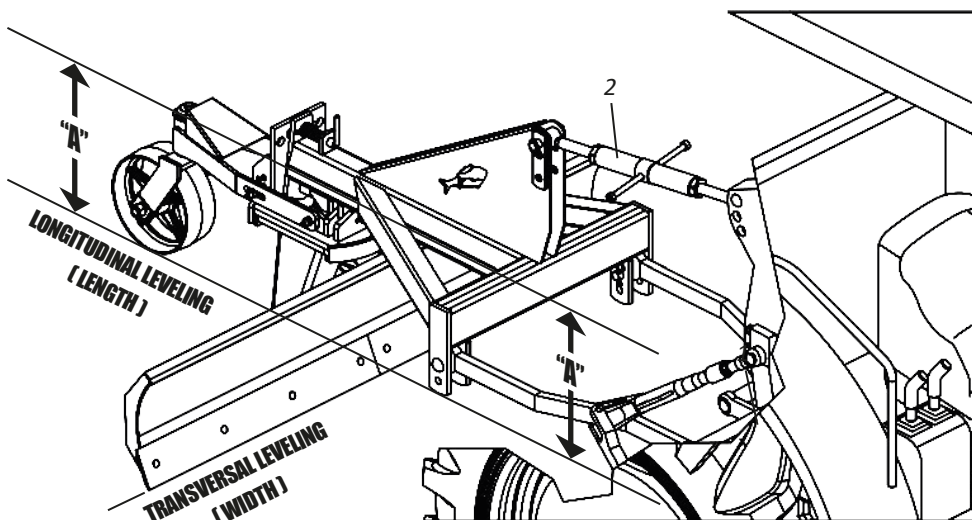

ATTENTION

When lifting the **LT** for maneuvering, check the tractor instruction manual to make sure the weight necessary to avoid affecting the stability and handling of the tractor and planer assembly. If the weight distribution is not correct, serious accidents can occur, causing even death. Baldan is not responsible for the incorrect use of the **LT**.

▪ Adjustments



• Horizontal angle adjustment of the blade

The **LT** blade has horizontal cutting angle adjustment that through the inverter holes allow horizontal adjustments of 0°, 20°, 40° and 180° (half turn) left or right. To adjust the horizontal cutting angle of the blade, proceed as follows:

- 01** - Release the cotter pin (1) and remove the pin (2).
- 02** - Then turn the inverter (3) to the desired angle.
- 03** - Then reinsert the pin (2) lock it with the cotter pin (1).

ATTENTION

The horizontal angle of the blade should be adjusted so that the ground is turned over in front of the blade, reducing the resistance of the ground by moving it in greater quantity.

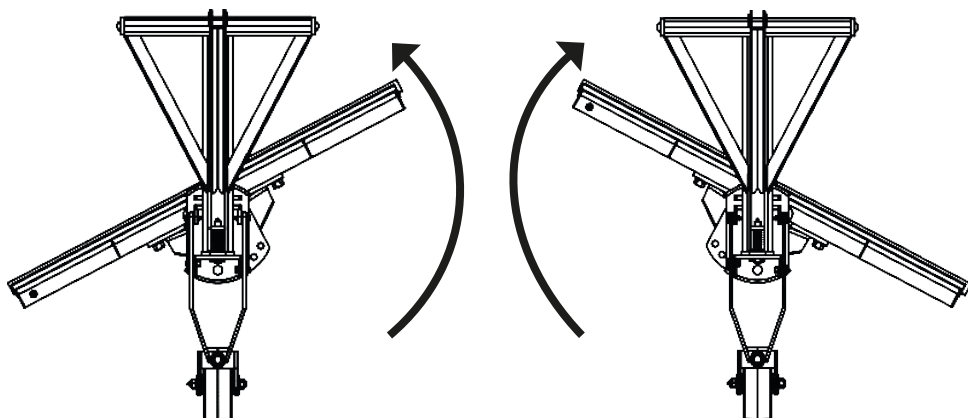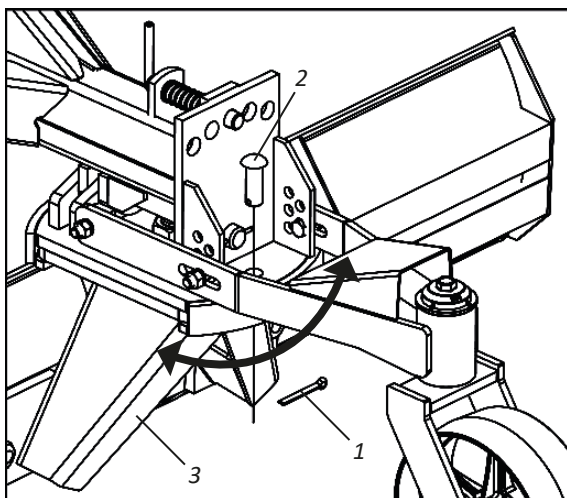

OBSERVATION


The illustrations above show the **LT** in the horizontal position to perform work such as earth moving, leveling, landfills, etc. The **LT** has 360° rotation and can work normally in reverse.

▪ Adjustments

• Vertical blade angle adjustment


The **LT** blade has vertical cutting angle adjustment that through the inverter holes allow vertical adjustments of 0°, 12° and 24° to left or right. To adjust the vertical cutting angle of the blade, proceed as follows:

- 01** - Pull the pin (1) in the direction indicated by compressing the spring.
- 02** - Then turn the reverser (2) to the desired angle.
- 03** - Then release the pin (1) to lock the reverser (2).

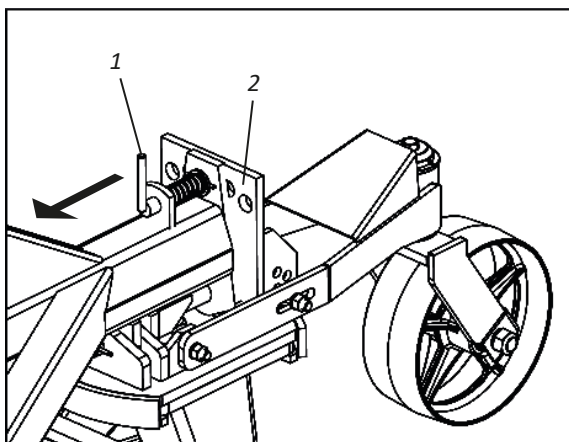

ATTENTION

Local working conditions will determine the best angle at which the planer should work. Increasing the angle will increase the resistance of the earth on the blade, so you should adjust the angle enough to move the earth without too much resistance.

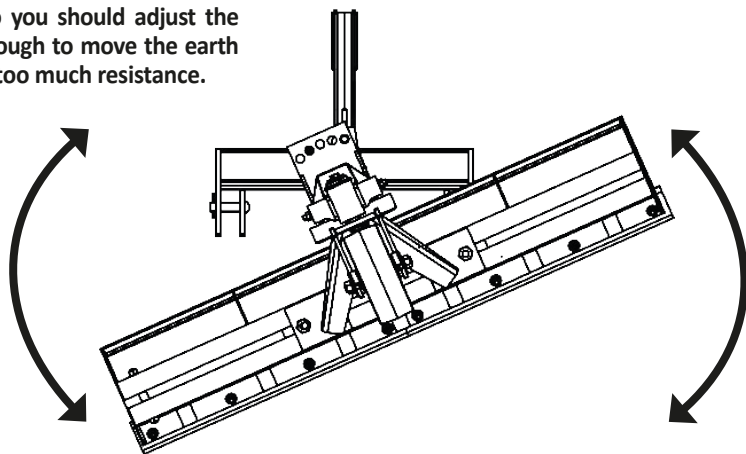

OBSERVATION

The illustrations above show the **LT** in an upright position to perform jobs such as contouring, grooving, shallow trenching, etc.

▪ Adjustments

• Cutting depth adjustment

The cutting depth of the **LT** will depend on the conditions of the work site and the power of the tractor used, however, when the **LT** is mounted with the height control support (**optional**), this will also influence the cutting depth and can be adjusted.




ATTENTION

During **LT** displacement, the volume of soil must not overflow the blade.

• Height control support adjustment

The **LT** when purchased with the height control support (**optional**) can be adjusted through this the cutting depth. To adjust the height control support, proceed as follows:

- 01** - Loosen the nut (1), lock washer (2), flat washer (3) and remove the bolt (4).
- 02** - Then adjust the depth wheel (5) through the holes in the reverser (6).
- 03** - Then replace the bolt (4), flat washer (3), lock washer (2) and nut (1) locking the depth wheel (5).

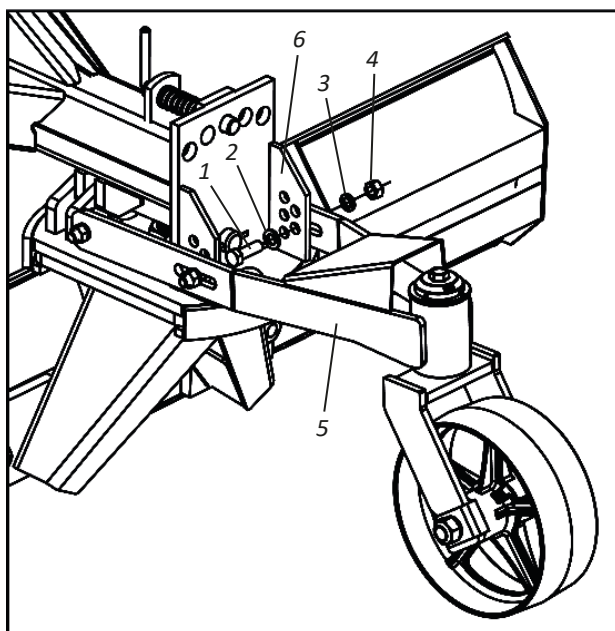

▪ Adjustments



• Lateral adjustment of the blade

The **LT** blade can be mounted laterally about 300 mm left or right for working close to fences, walls, trees, etc. To perform the lateral adjustment of the blade, proceed as follows:

01 - Loose the nuts (1) and pressure washers (2).

02 - Next, adjust the position of the blade (3).

03 - Then tighten the nuts (1) and pressure washers (2).

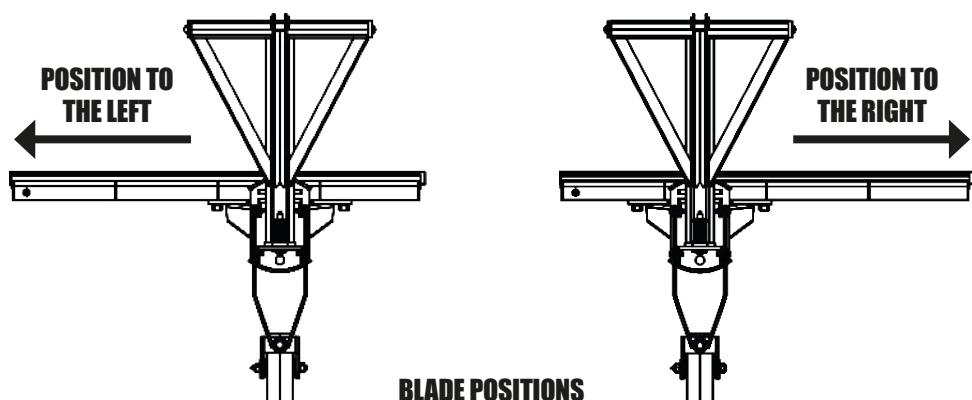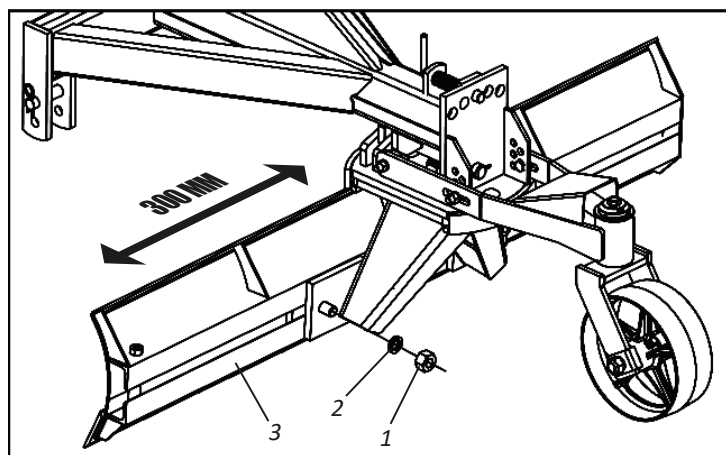

ATTENTION

When adjusting the blade, DO NOT exceed 300 mm to the right or left.

▪ **Maintenance**

• **Recommendations for operation**

The preparation of **LT** and tractor will allow that you save time and have a better result in works on the field. The following suggestions may be useful for you.

GENERAL RECOMMENDATION

- 01** - Before starting to work, thorough review the **LT**. In this review, it is necessary to lubricate all the points, to retighten the nuts and screws, to check the locking the pins and cotter pins.
- 02** - Make sure that the **LT** operator is trained and qualified for the jobs.
- 03** - Adjust the tractor according to the content of the instruction manual, always using front and rear weights to stabilize the equipment.
- 04** - Always couple to the tractor in low gear and very carefully.
- 05** - When transporting the **LT**, always keep it level.
- 06** - Observe the transport speed specified on page 10. We do not advise speeding to avoid possible damage to **LT**.
- 07** - **LT** has several adjustments, but only local conditions can determine the best adjustment.
- 08** - During work, do not allow people, children or animals to remain within the radius of rotation of the **LT** blade.
- 09** - When performing any maintenance on the **LT**, the motor must be switched off.

In case of doubts, never operate or handle **LT**, refer to Post-Sales.
Telephone: 0800-152577/ E-mail: posvenda@baldan.com.br

• **Lubrication**

Lubrication is essential for a good performance and greater durability of the moving parts of the **LT**, contributing to saving maintenance costs.

Before starting the operation, carefully lubricate all grease fittings, always observing the lubrication intervals on the next page. Ensure the quality of the lubricant, regarding its efficiency and purity, avoiding using products contaminated by water, earth and other agents.

■ Maintenance

• Table of greases and equivalents

Manufacturer	Type of recommended grease
Petrobrás	Lubrax GMA-2
Atlantic	Litholine MP 2
Ipiranga	Ipiflex 2
Castrol	LM 2
Mobil	Grease MP
Texaco	Marfak 2
Shell	Alvania EP 2
Esso	Multi H
Bardahl	Maxlub APG-2EP
Valvoline	Palladium MP-2
Petronas	Tutela Jota MP 2 EP
	Tutela Alfa 2K
	Tutela KP 2K

ATTENTION

If there are manufacturers and/or equivalent brands that are not listed in the table, consult the manufacturer's technical manual.


• Lubricate every 8 hours of work

ATTENTION

When lubricating LT, do not exceed the amount of new grease. Put an enough amount.

OBSERVATION

Remember that the depth wheel is optionally purchased.

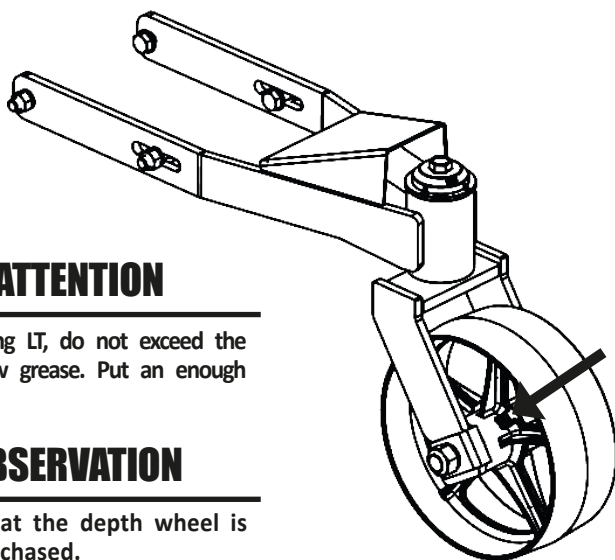

▪ Maintenance

• Cares

- 01** - Before each work, check the condition of all pins, locks, screws and nuts. Where necessary, retighten them.
- 02** - The displacement speed should be carefully controlled according to the land conditions.
- 03** - **LT** is used in several applications, requiring knowledge and attention during its handling.
- 04** - Only local conditions can determine the best method of operation of **LT**.
- 05** - When assembling or disassembling any part of **LT**, employ proper methods and tools.
- 06** - Retighten screws and nuts daily during the first week of use. The retighten periodically.
- 07** - Switch off the tractor completely before any maintenance on the **LT**.
- 08** - Observe the lubrication intervals carefully in the various lubrication points of **LT**.
- 09** - Respect the lubrication intervals.
- 10** - After all maintenance precautions, store the **LT** in a safe and adequate place.
- 11** - Always check if the parts have wears. If there is a need for replacement, always demand Baldan original parts.



IMPORTANT

Proper and periodical maintenance are necessary to guarantee a long useful life of **LT**.

▪ Maintenance

• General cleaning

- 01** - When storing **LT**, perform a general cleaning and thoroughly wash with water only. Make sure the paint has not worn out, if this has happened, give a general coat, apply the protective oil and fully lubricate the **LT**. Do not use burned oil or other abrasive.
- 02** - Lubricate the **LT** Completely. Check all moving parts of **LT**, if they present wears or gaps, make the required adjustment or replace the parts, leaving the **LT** ready for the next work.
- 03** - Replace all adhesives, especially those about warnings, that are damaged or missing. Make everyone aware of the importance and risks of accidents when instructions are not followed.
- 04** - After all maintenance precautions, store your **LT** in a plain surface, covered and dried location, away from animals and children.
- 05** - We recommend to wash the **LT** with water only on the beginning of works.



ATTENTION | Do not use abrasives or chemical products to wash **LT**, it may damage its painting and adhesives.

• Planer conservation - Part I

To extend the life and appearance of the **LT** for longer, please follow the instructions below:

- 01** - Wash and clean all **LT** components during and at the end of the work season.
- 02** - Use neutral products to clean the **LT** following the safety and handling guidelines provided by the manufacturer.
- 03** - Always carry out maintenance during the periods indicated in this manual.


• Planer conservation - Part II

The practices and precautions below if adopted by the owner or operator make the difference for the conservation of **LT**.

- 01** - Be careful when performing high-pressure washing;
- 02** - Use only NEUTRAL detergent and water (pH equal to 7);
- 03** - Apply the product, following the manufacturer's instructions strictly, on the wet surface and in the correct sequence, respecting the time of application and washing;

▪ Maintenance

- 04 - Stains and dirt not removed with the products must be removed with the aid of a sponge.
- 05 - Enxágue a máquina com água limpa para remover todos os resíduos de produtos químicos.
- 06 - Do not use: - Detergents with a basic active principle (pH greater than 7) can attack/stain the grid paint.
- **Detergents with acidic active principle (pH less than 7), act as a stripper/zinc remover (protection of parts against oxidation).**

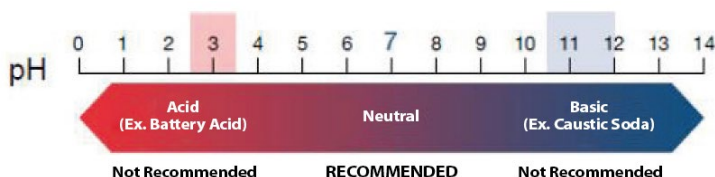

- 07 - Let the machine dry in the shade, so that water does not accumulate in its components. Drying too quickly can cause stains on your paint.
- 08 - After drying, lubricate all chains and grease fittings according to the recommendations in the operator's manual.
- 09 - Spray the entire machine, especially the zinc-coated parts, with protective oil, following the manufacturer's application guidelines. The protector also prevents the adherence of dirt in the machine, facilitating subsequent washing.
- 10 - Observe the curing time (absorption) and application intervals as recommended by the manufacturer.



ATTENTION

Do not use any other type of oil to protect the grid (used hydraulic oil, "burnt" oil, diesel oil, castor oil, kerosene, etc.).



IMPORTANT

We recommend the following protective oils:

- Bardahl: Protective Agro 200 or 300
- ITWChemical: Zoxol DW - Series 4000




OBSERVATION

Ignoring the conservation measures mentioned above may result in the loss of the warranty for painted or zinc-coated components that present possible oxidation (rust).

▪ Optional

• Optional accessories

The LT has an option that can be purchased according to the work need.

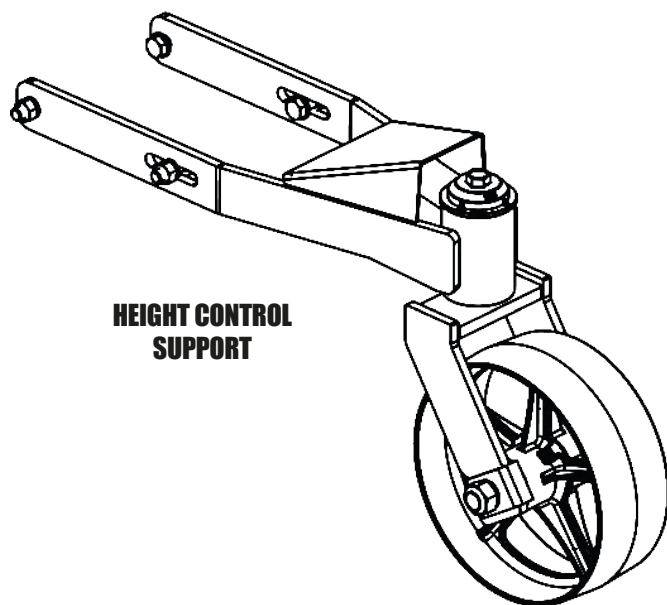

▪ Identification

• Identification plate

To see the parts catalog or to request technical assistance from Baldan, always inform model (1), serial number (2) and date of manufacture (3), which is on your LT nameplate.



ATTENTION

The drawings contained in this Instruction Manual are for illustrative purposes.



CONTACT

In case of doubt, never operate or handle your equipment without consulting the After Sales.
Telephone: 0800-152577
e-mail: posvenda@baldan.com.br



PUBLICATIONS

Código: 60550107484 | CPT: LT05622A



▪ Identification

• Product Identification

Make the correct identification of the data below, to always have information about the life of your equipment.

Owner: _____

Resale: _____

Farm: _____

City: _____

State: _____

Certificate No. of warranty: _____

Implement: _____

Serial No.: _____

Purchase date: _____

Invoice: _____

BALDAN IMPLEMENTOS AGRÍCOLAS S/A ensures the dealer normal performance of the implement for a period of six (6) months as of the delivery date on the retail invoice to the first final consumer. During this period, **BALDAN** undertakes to repair defects in material and/or of manufacture of its liability, including labor, freight and other expenses of the dealer's liability.

In the warranty period, request and replacement of eventual defective parts shall be made to the dealer of the area, who will submit the faulty piece for **BALDAN** analysis. When this procedure is not possible and the resolving capacity of the dealer is exhausted, the dealer will request the support of **BALDAN Technical Assistance** through a specific form distributed to dealers. After analyzing the replaced items by Baldan Technical Assistance, and concluding that it is not a warranty, then the dealer will be responsible for the costs related to the replacement; as well as material expenses, travel including accommodation and meals, accessories, lubricant used and other expenses arising from the call out to Technical Assistance, and Baldan company is authorized to carry the respective invoice in the name of the resale. Any repair carried in the product within the dealer warranty deadline will only be authorized by **BALDAN** upon previous budget presentation describing parts and work to be performed.

The product is excluded from this term if it is repaired or modified by representatives not belonging to the **BALDAN** dealer network, as well as the application of non-genuine parts or components to the user's product. This warranty is void where it is found that the defect or damage is caused by improper use of the product, failure to follow instructions or inexperience of the operator.

It is agreed that this warranty does not cover tires, polyethylene tanks, cardan, hydraulic components, etc., which are equipment guaranteed by their manufacturers. Manufacturing and/or material defects, object of this warranty term, will not constitute, under any circumstances, grounds for termination of a purchase agreement, or for indemnification of any nature.

BALDAN reserves the right to change and/or perfect the technical characteristics of its products, without previous notice, and without obligation to proceed in the same way with the products previously manufactured.

▪ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sales organization, inspected in all its parts according to the manufacturer's prescriptions.

DELIVERY SERVICE: The user has been informed of the current warranty terms and instructed on the use and maintenance precautions.

I confirm that I was informed about the terms of existing warranty and instructed on the use and proper maintenance of the implement.

Implement: _____ Serial number: _____

Date: _____ Invoice no.: _____

Resale: _____

Phone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Phone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Date of Sale: _____

Signature / Stamp of Resale _____

1st counterpart - Owner

▪ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sales organization, inspected in all its parts according to the manufacturer's prescriptions.

DELIVERY SERVICE: The user has been informed of the current warranty terms and instructed on the use and maintenance precautions.

I confirm that I was informed about the terms of existing warranty and instructed on the use and proper maintenance of the implement.

Implement: _____ Serial number: _____

Date: _____ Invoice no.: _____

Resale: _____

Phone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Phone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Date of Sale: _____

Signature / Stamp of Resale _____

2st counterpart - Resale

▪ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sales organization, inspected in all its parts according to the manufacturer's prescriptions.

DELIVERY SERVICE: The user has been informed of the current warranty terms and instructed on the use and maintenance precautions.

I confirm that I was informed about the terms of existing warranty and instructed on the use and proper maintenance of the implement.

Implement: _____ Serial number: _____

Date: _____ Invoice no.: _____

Resale: _____

Phone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Phone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Date of Sale: _____

Signature / Stamp of Resale _____

3rd counterpart - Manufacturer (Please send completed within 15 days)

1.74.05.0059-5

AC MATÃO
ECT/DR/SP

RESPONSE CARD

NOT REQUIRED SEAL

SEAL WILL BE PAID BY:



BALDAN IMPLEMENTOS AGRÍCOLAS S/A.

Av. Baldan, 1500 | Nova Matão | CEP: 15993-900 | Matão-SP | Brasil

Phone: (16) 3221-6500 | Fax: (16) 3382-6500

www.baldan.com.br | email: sac@baldan.com.br

Export: Phone: +55 (16) 3221-6500 | Fax: +55 (16) 3382-4212 | 3382-2480

email: export@baldan.com.br



Avenida Baldan, 1500
Nova Matão
15.993-900
Matão/SP - Brasil
sac@baldan.com.br
export@baldan.com.br

+55 16 3221 6500
baldan.com.br