


Instruction Manual

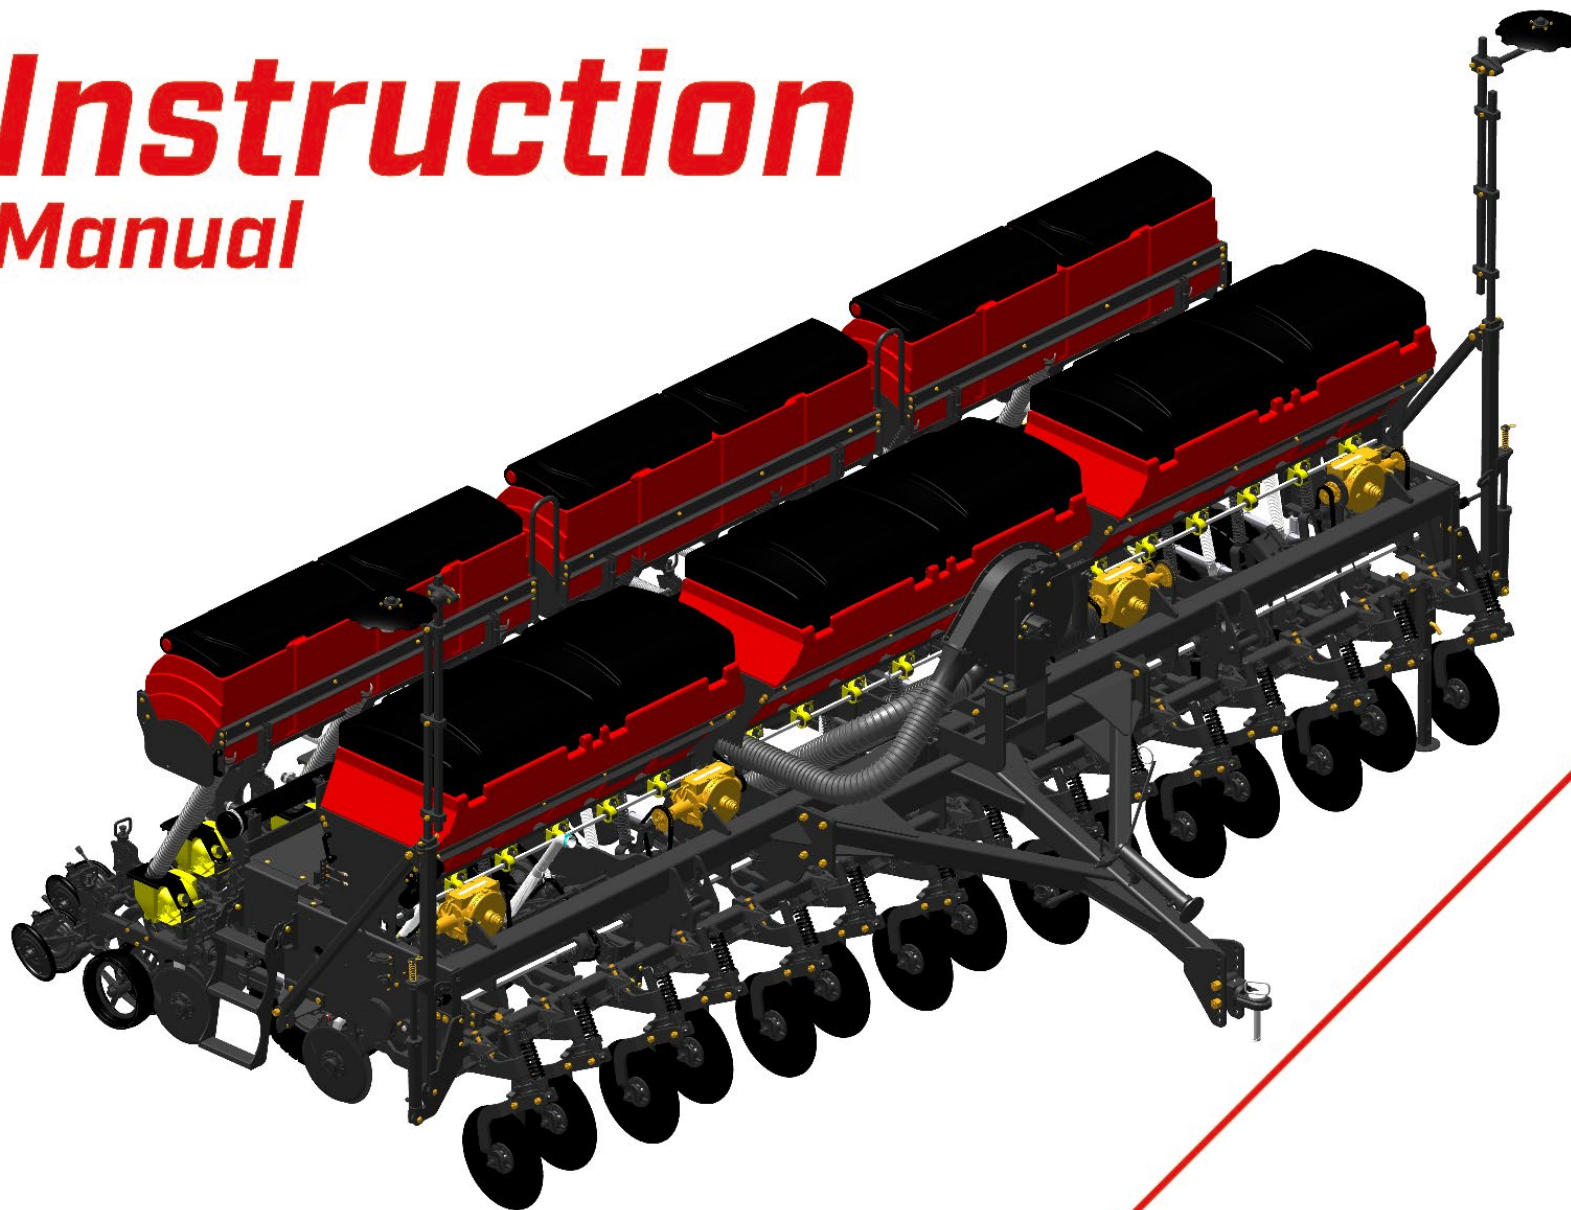

PP SOLO AIR 3rd SEED BOX - VSET

Precision Row Crop Planter

 **BALDAN**

▪ Presentation

We thank you for preference and congratulate you on the the excellent choice you have just made, as you have purchased a product made with **BALDAN IMPLEMENTOS AGRÍCOLAS S/A** technology.

This manual will guide you through the procedures necessary; from purchase to operating, safety and maintenance procedures.

BALDAN warrants that it has delivered this implement to the retailer complete and in perfect condition.

The retailer was responsible for the custody and conservation during the period in its possession, as well as for the assembly, retightening, lubrication, and overhaul.


At the technical delivery, the retailer should advise the user customer about maintenance, safety, their obligations in any technical assistance, the strict observance of the warranty term and the reading of the instruction manual.

Any warranty service claim should be made to the retailer where the implement was purchased.

We reiterate the need for careful reading of the warranty certificate and compliance with all items in this manual, as doing so will increase the life of your implement.



Instruction Manual

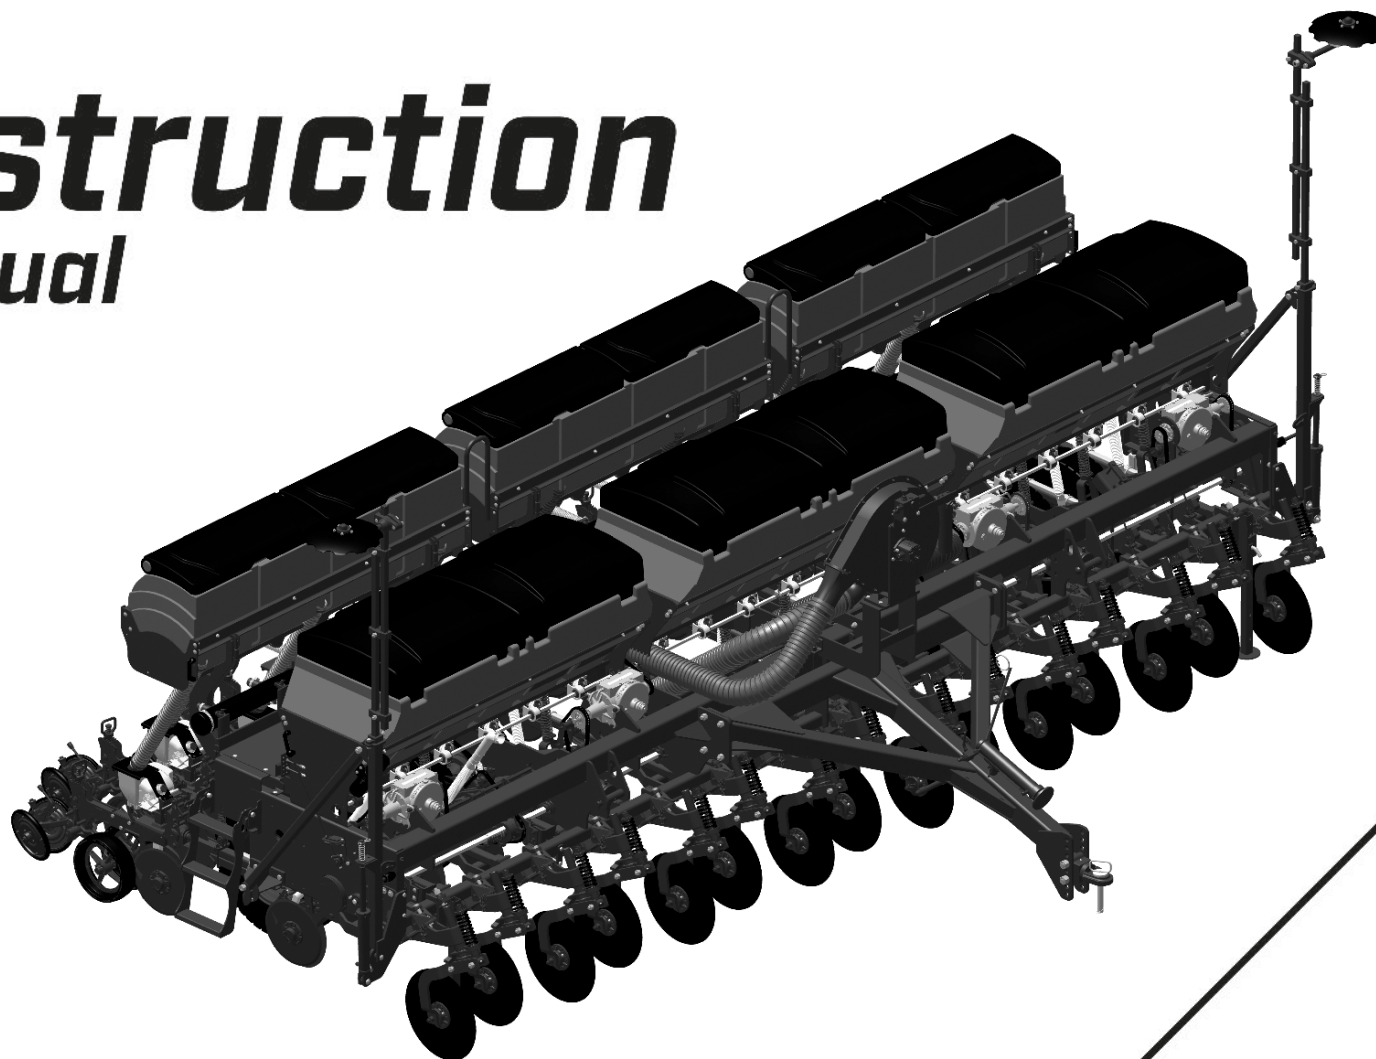

PP SOLO AIR 3rd SEED BOX - VSET

Precision Row Crop Planter

BALDAN IMPLEMENTOS AGRÍCOLAS S/A.
CNPJ: 52.311.347/0009-06
Insc. Est.: 441.016.953.110



Scan the QR Code on the
identification plate of your
device and access this
Instruction Manual online.

 **BALDAN**

■ Index

BALDAN WARRANTY	10
GENERAL INFORMATION	11
<i>To the owner</i>	<i>11</i>
SAFETY RULES.....	12
<i>To the operator</i>	<i>12 - 15</i>
WARNINGS	16 - 17
COMPONENTS	18
<i>PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter.....</i>	<i>18</i>
DIMENSIONS	19
<i>PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter.....</i>	<i>19</i>
SPECIFICATIONS	20
<i>PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter.....</i>	<i>20</i>
ASSEMBLY	21
<i>Assembly of the coupling header (Models 4000/4500)</i>	<i>21</i>
<i>Assembly of the coupling header (Models 5000/5500)</i>	<i>22</i>
<i>Assembly of the coupling header (Models 6500/7500)</i>	<i>23</i>
<i>Assembly of the compactor wheels</i>	<i>24</i>
<i>Assembly of the lines.....</i>	<i>24</i>
<i>Assembly the conductive seed hoses</i>	<i>25</i>
<i>Assembly of the hydraulic system without line marker (Models 4000/4500).....</i>	<i>26</i>
<i>Assembly of the hydraulic system with line marker (Models 4000/4500)</i>	<i>27</i>
<i>Assembly of the hydraulic system without line marker (Models 5000/5500).....</i>	<i>28</i>
<i>Assembly of the hydraulic system with line marker (Models 5000/5500)</i>	<i>29</i>
<i>Assembly of the hydraulic system without line marker (Models 6500/7500).....</i>	<i>30</i>
<i>Assembly of the hydraulic system with line marker (Models 6500/7500)</i>	<i>31</i>
<i>Assembly of the line marker cutting disc</i>	<i>32</i>
HITCH.....	33
<i>Tractor hitch (Models 4000/4500)</i>	<i>33</i>
<i>Tractor hitch (Models 5000/5500)</i>	<i>34</i>
<i>Tractor hitch (Models 6500/7500)</i>	<i>35</i>
TRANSPORTATION	36
<i>Preparing for transport</i>	<i>36</i>
WORK	37
<i>Preparing for work</i>	<i>37 - 38</i>

■ Index

Using the ladder	38
SPACING	39
Line spacing	39
Spacing tables in milimeters	40
ADJUSTMENTS	41
Line markers adjustment	41
Adjustment of line marker discs	42
Adjusting the line marker bar	42
Ratchet adjustment	43
Vacuum meter	44
Turbine	44
Regulation of the continuous flow system	45
SYSTEM	46
Kits and discs for crops	46
Installation to distributor VSET 2 - Precision Planting	47
Installation of kit for crop	48 - 50
Seed container set	51 - 52
Maintenance	53
Troubleshooting	54 - 56
VSET 2 Crop guide	57
SEED DISPENSING SYSTEM	58
Speed Box	58
Regulation for seed dispensing	58
SEED dispensing table	59 - 60
FERTILIZER DISPENSING SYSTEM	61
Fertisystem fertilizer conductor	61
Speed Box	62
Regulation for fertilizer dispensing	62
FERTILIZER dispensing table	63 - 64
CALCULATION	65
Practical calculation for fertilizer dispensing	65
TRIMMING SYSTEM	66
Mechanical trimming system	66
Hydraulic trimming system (Optional)	66

▪ Index

PLANTING LINES	67
<i>Planting line models</i>	67
ADJUSTING THE LINES.....	68
<i>Adjusting the cutting disc depth</i>	68
<i>Adjusting the cutting disc pressure</i>	68
<i>Adjusting the ridge opening and fertilizer position in the soil</i>	69
<i>Ridger attack angle adjustment</i>	69
<i>Adjusting the smaller ridger for greater or lesser mismatch (Optional)</i>	70
<i>Adjusting the ridger with depth wheel (Optional)</i>	70
<i>Adjustment of compacting wheels for ridger or double disc (Optional)</i>	71
<i>Double disc cleaners adjustment</i>	72
<i>Adjusting the oscillating depth wheel</i>	72
<i>Adjusting the "V" compactor wheel</i>	73 - 74
<i>Adjusting the oscillating depth wheel angle</i>	74
<i>Opening adjustment of the oscillating depth wheel</i>	75
<i>Adjustment of fertilizer depth and pressure in the seed lines</i>	76
<i>Oscillating cart with protection ring (Optional)</i>	76
<i>Vacuum pressure in the dosers</i>	77
OPERATIONS.....	78
<i>Wheels mounting and articulating system</i>	78
<i>Recomendations for operation</i>	79
MAINTENANCE	80
<i>Tire pressure</i>	80
<i>Lubrification.....</i>	81
<i>Centralized lubrification system</i>	81
<i>Lubrification every 10 hours of work.....</i>	82 - 84
<i>Lubrification every 30 hours of work.....</i>	84
<i>Lubrification every 60 hours of work.....</i>	85
<i>Lubrification every 200 hours of work</i>	86
<i>Chain tension</i>	86
<i>Batcher transmission chain tensioning.....</i>	87
<i>Oscillating stretcher</i>	87
<i>Batcher disc replacement</i>	88
<i>Batcher maintenance or replacement</i>	89 - 90

▪ Index

Operational maintenance	91 - 92
Fertisystem batcher accessories	93
Endless spring	93
Level regulator "Cross Cover"	93
Maintenance or replacement of the Fertisystem dosing spring	94
Fertisyste batcher maintenance tube	95
Fertisystem batcher blocker tube	96
Springs and caps (optional) - Fertisystem batcher	96
Cleaning the Fertisystem doser	97
Changing tires	98
Care	99
Care during planting	99
General cleaning	100
Seeder conservation	101 - 102
OPTIONAL	103
Optional accessories	103 - 106
MANUAL PM 400 - OPTIONAL	107
PM 400	107
Monitor overview	107
Navigation keys	108 - 109
Settings keys	110 - 112
Installation and configuration	113 - 114
Setting the planter	115 - 116
Setting the travel speed	116 - 117
Setting the accessories	118 - 119
Setting the seed population	120
Setting auxiliary modes	121
Speed, area and distance	121
Seed count	122
Setting the display - Top half of the operation screen	123
Number of functions to display	124
Setting the display - Lower half of the operation screen	125
Indicator type to display	126
Setting the measurement system, display, lighting and alarm volume	127

▪ Index

Setting the security password	127 - 128
General information on function monitoring	128 - 133
Alarm types.....	133 - 136
Troubleshooting.....	137 - 140
MANUAL ETD (ELECTRONIC DOSING TABLE) - OPTIONAL	141
Presentation	141
Assembling the magnets on the main shaft	142
Assembling the speed sensor	142
Speed sensor installation	143
Identification	143
Settings menu	144
Sensor calibration	144
Machine	145
Sensor calibration	145
Seed rate	146 - 148
Fertilizer rate	149
Total calculation	149
Calibrate fertilizer	150 - 151
F3 Hobbs meter	151
F4 Hectometer	152
Settings menu	152 - 153
Sensor calibration	153
Machine	154
Time above maximum speed	155
IDENTIFICATION.....	156
Identification plate	156
Product identification.....	156
NOTES.....	157
CERTIFICATE.....	158
Certificate of warranty.....	158 - 160

▪ Baldan Warranty

BALDAN IMPLEMENTOS AGRÍCOLAS S/A ensures the dealer normal performance of the implement for a period of six (6) months as of the delivery date on the retail invoice to the first final consumer.

During this period, **BALDAN** undertakes to repair defects in material and/or of manufacture of its liability, including labor, freight and other expenses of the dealer's liability.

In the warranty period, request and replacement of eventual defective parts shall be made to the dealer of the area, who will submit the faulty piece to **BALDAN** analysis.

When this procedure is not possible and the resolving capacity of the dealer is exhausted, the dealer will request the support of **BALDAN** Technical Assistance through a specific form distributed to dealers.

After analyzing the replaced items by **BALDAN** Technical Assistance, and concluding that it is not a warranty, then the dealer will be responsible for the costs related to the replacement; as well as material expenses, travel including accommodation and meals, accessories, lubricant used and other expenses arising from the call out to Technical Assistance, and **BALDAN** company is authorized to carry the respective invoice in the name of the resale.

Any repairment carried in the product within the dealer warranty deadline will only be authorized by **BALDAN** upon previous budget presentation describing parts and workforce to be executed.

The product is excluded from this term if it is repaired or modified by representatives not belonging to the **BALDAN** dealer network, as well as the application of non-genuine parts or components to the user's product.

This warranty is void where it is found that the defect or damage is caused by improper use of the product, failure to follow instructions or inexperience of the operator.

It is agreed that this warranty does not cover tires, polyethylene tanks, cardan, hydraulic components, etc., which are equipment guaranteed by their manufacturers.

Manufacturing and/or material defects, object of this warranty term, will not constitute, under any circumstances, grounds for termination of a purchase agreement, or for indemnification of any nature.

BALDAN reserves the right to change and/or perfect the technical characteristics of its products, without previous notice, and without obligation to proceed in the same way with the products previously manufactured.

▪ General Information

• To the owner

BALDAN IMPLEMENTOS AGRÍCOLAS S/A is not responsible for any damaged caused by accident due to usage, transportation, or in the improper or incorrect transportation of its implement, whether by negligence and/or inexperience of any person.

Only people with complete knowledge of the tractor and the implement should carry their transportation and operation.

BALDAN is not responsible for any damaged caused in unpredictable or unrelated situations to the normal use of the implement.

The incorrect handling of this equipment may result in severe or fatal accidents. Before running the equipment, carefully read the instructions contained in this manual. Make sure that the person responsible for the operation is instructed as the correct and safe handling. Also make sure that the operator has read and understood the instructions manual of the product.

ATTENTION

NR-31 - SAFETY AND HEALTH AT WORK IN AGRICULTURE, LIVESTOCK FARMING, FORESTRY, FOREST EXPLORATION AND AQUACULTURE.

This Regulatory Standard has the purpose of establishing precepts to be observed in the organization and work environment, compatible to the planning and development of agriculture, livestock, forestry, forest exploitation and aquaculture with safety and health and work environment.

MR. OWNER OR OPERATOR OF THE EQUIPMENT.

Read and carefully comply with provisions of NR-31.

For more information, refer to the site and read NR-31 in full.
<http://portal.mte.gov.br/legislacao/normas-regulamentadoras-1.htm>

▪ Safety rules

• To the operator



THIS SYMBOL INDICATES IMPORTANT SAFETY WARNING. IN THIS MANUAL, WHENEVER YOU FIND IT, READ THE FOLLOWING MESSAGE CAREFULLY AND PAY ATTENTION TO THE POSSIBILITY OF PERSONAL ACCIDENTS.

ATTENTION



Carefully read the instructions manual to learn about the recommended safety practices.

ATTENTION




Only start to operate the tractor when you are properly seated and with the seat belt locked.

ATTENTION



Do not perform adjustments while the seeder is in operation. When performing any service on the seeder, switch off the tractor first. Use appropriate tools.

ATTENTION

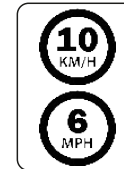


When transporting the seeder, do not exceed 10 Km/h or 6 MPH, avoiding risks of injury and accident.

ATTENTION



Do not transport people on the tractor or over the equipment.

ATTENTION

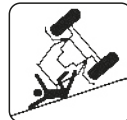

There are risks of severe injuries due to tipping when working in sloped terrains. Do not over speed.

ATTENTION



When checking hoses for leaks, use a piece of cardboard or wood, never use your hands. Avoid incision of fluid in the skin.

ATTENTION



When working with the seeder, do not exceed 5 to 6 Km/h or 3 to 4 MPH, avoiding risks of injury and accidents.

ATTENTION



Do not work with the tractor if the front has insufficient ballast to the rear equipment. Should there be a trend to lift, add weights or ballasts to the front or the front wheels.

ATTENTION



Before performing any maintenance in your equipment, make sure it is properly stopped. Avoid being run over.

ATTENTION



Always maintain places of access and work free of residues such as oil or grease to prevent accidents.

ATTENTION



Before working on or transporting the seeder, check for people or obstructions near the machine.

▪ Safety rules

ATTENTION

FOLLOW ALL RECOMMENDATIONS, WARNINGS AND SAFE PRACTICES RECOMMENDED IN THIS MANUAL, UNDERSTAND THE IMPORTANCE OF YOUR SAFETY. ACCIDENTS MAY LEAD TO DISABILITY OR INCLUDING DEATH. REMEMBER, ACCIDENTS CAN BE AVOIDED!


ATTENTION



Avoid heating parts near fluid lines.

Heating can lead to material brittleness, rupture, and leakage of pressurized fluid, which can cause burns and injuries.

ATTENTION

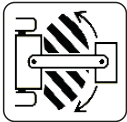

Keep the articulation area free while the seeder is in operation. In sharp turns, keep the tractor wheels from touching the header.

ATTENTION



Improper waste disposal affects the environment and ecology as it will pollute rivers, canals, or the soil. Find out how to properly recycle or dispose of waste.

PROTECT THE ENVIRONMENT!

ATTENTION



Avoid accidents caused by the intermittent action of line markers.

When activating the seeder, check if there are people under line markers on in their action area.

ATTENTION



Be careful when handling the sowing support foot, as there is a risk of accidents.

ATTENTION



Always stay away from the active elements of the seeder (discs) they are sharp and cause accidents.

When servicing discs, wear safety gloves in your hands.

ATTENTION



Pressurized hydraulic oil under may cause serious injury if leaks occur. Periodically check the condition of the hoses. If there is evidence of leaks, replace them immediately. Before connecting or disconnecting hydraulic hoses, relieve system pressure by activating the control with the tractor off.

ATTENTION



Do not operate the seeder if the transmission guards are not properly attached. Only remove protections to proceed with gear replacement, put them back immediately. Do not make adjustments with the seeder in motion.

ATTENTION




Never weld the wheel with a mounted tire, as heat can increase air pressure and cause the tire to explode. When inflating a tire, position yourself next to the tire, never in front of it. When inflating the tire, always use a containment device (inflation cage).

▪ Safety rules

ATTENTION


FOLLOW ALL RECOMMENDATIONS, WARNINGS AND SAFE PRACTICES RECOMMENDED IN THIS MANUAL, UNDERSTAND THE IMPORTANCE OF YOUR SAFETY. ACCIDENTS MAY LEAD TO DISABILITY OR INCLUDING DEATH. REMEMBER, ACCIDENTS CAN BE AVOIDED!

ATTENTION

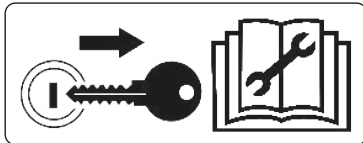

Remove the ignition key before carrying out maintenance on the seeder. Protect yourself from injuries or death caused by an unforeseen start of the seeder. If the seeder is not properly hitched, do not start the tractor.

ATTENTION

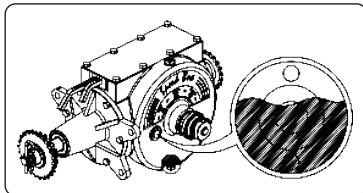

Check the oil level daily. Change the Speed Box oil after the first 30 hours of work, then every 1500 hours, always using ISO VG 150 mineral oil at 40°C (amount of oil used 1.8 liters). Use only the original fuse from the factory, as only this one has a controlled hardness.

ATTENTION



The turbine may expel residues of toxic products used in seed treatment.

- Do not expose yourself to the air leaving the turbine when it is operating.

Carefully read the label of the product used to treat seeds.

- While handling, applying and planting, use Personal Protection Equipment (PPE).
- Wash your hands thoroughly after handling products.
- Treated seeds should not be exposed to people unrelated to the service, domestic animals, birds, nor allowed contact with human or animal consumption products.
- In case of intoxication due to inhalation or aspiration, keep the victim in a place with fresh air and seek a doctor immediately, taking with you the chemical product label or packaging.



POISONING SYMPTOMS: Weakness, headache, chest pressure, blurred vision, non-reactive pupils, excess of salivation, perspiration, nausea, vomiting and abdominal cramps.

▪ Safety rules


• PPE Equipment



ATTENTION

DO NOT WORK WITH THE SEEDER WITHOUT FIRST WEARING PPES (SAFETY EQUIPMENT). IGNORING THIS WARNING MAY CAUSE DAMAGES TO HEALTH, SEVERE ACCIDENTS OR DEATH.

When performing certain procedures with the seeder, wear the following Safety Equipment (PPE):

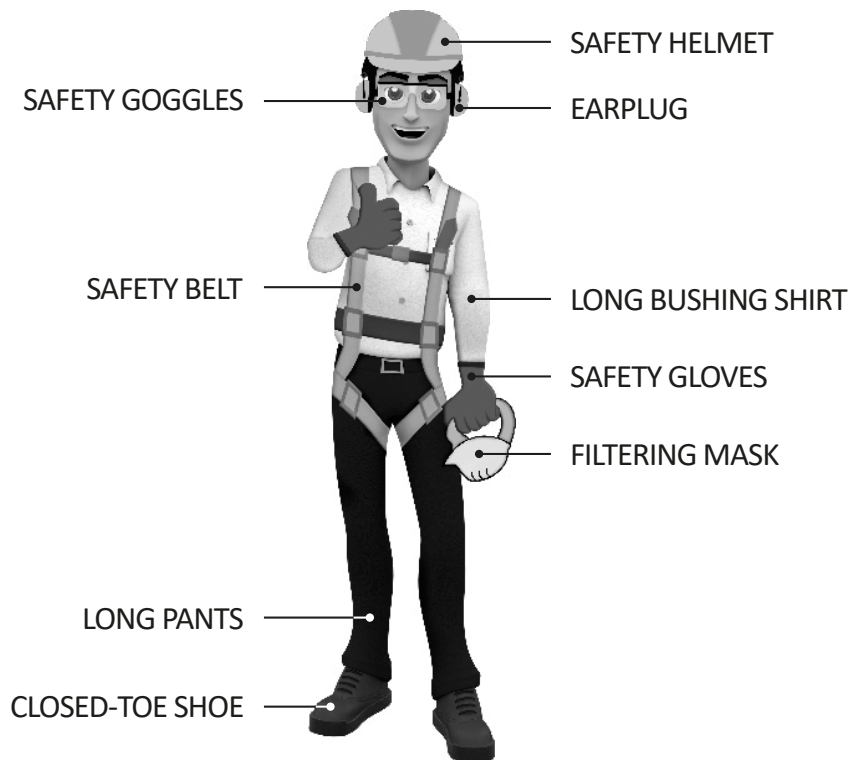

! IMPORTANT

The safety practice must be performed in all stages of working with the seeder, thus avoiding accidents such as impact of objects, fall, noise, cuts and ergonomics, ie the person responsible for operating the seeder is subject to internal and external damage to your body.



NOTE

All PPEs (Safety Equipment) must have an authenticity certificate.

▪ Warnings

- ⚠ When operating the seeder, do not allow people to remain too close or on top of it.
- ⚠ When servicing the machine, wear PPE.
- ⚠ Do not wear loose clothing, as they may become entangled in the seeder.
- ⚠ When starting the tractor engine, be properly seated in the operator's seat and aware of the full knowledge of the correct and safe handling of both the tractor and the seeder. Always put the shift lever in the neutral position, disconnect the control gear from the PTO and put the hydraulic controls in the neutral position.
- ⚠ Do not start the tractor engine indoors without adequate ventilation as exhaust fumes are harmful to health.
- ⚠ When maneuvering the tractor to engage the seeder, make sure you have the necessary space and that there is no one very close, always do the maneuvers at idle and be prepared to brake in an emergency.
- ⚠ Do not make adjustments with the seeder in operation.
- ⚠ When working on slopes, be careful to always maintain the necessary stability. In the event of imbalance, reduce acceleration, turn the wheels to the side of the slope and never raise the seeder.
- ⚠ Always drive the tractor at safety compatible speeds, especially when working on rough or sloping terrain, always keep the tractor hitched.
- ⚠ When driving the tractor on roads, keep the brake pedals interconnected.
- ⚠ Do not work with the tractor with a light rear. If the rear tends to lift, add more weights to the rear wheels.
- ⚠ When leaving the tractor, shift to neutral and set the parking brake.
- ⚠ Any and all maintenance on the seeder must be done with the seed stopped and the tractor turned off.
- ⚠ All refueling or inspection must be done with the seeder stopped and the tractor turned off, using the means of safe access.
- ⚠ Do not drive on highways, especially at night. Use warning signs all the way.
- ⚠ If there is a need to travel with the seeder on highways, consult traffic agencies.
- ⚠ Do not allow the seeder to be used by people who have not been trained, that is, who do not know how to operate it properly.
- ⚠ Do not transport or work with the seeder close to obstacles, rivers or streams.

▪ Warnings


- ⚠ Transporting people on self-propelled machines and implements is prohibited.
- ⚠ Changes to the original characteristics of the seeder are not authorized, as they may alter safety, operation, and affect the useful life.
- ⚠ Read carefully all the safety information in this manual and on the seeder.
- ⚠ Only operate the seeder if all guards are installed and correctly.
- ⚠ Do not under any circumstances remove the sowing protection components.
- ⚠ Always check that the seeder is in perfect condition. In the event of any irregularity that may interfere with the seeder's operation, provide proper maintenance before any work or transport.
- ⚠ Maintenance and especially inspection in risk areas of the seeder, must be carried out only by a trained or qualified worker, observing all safety guidelines. Before starting maintenance, disconnect all drive systems from the seeder.
- ⚠ Periodically check all components of the seeder before using it.
- ⚠ According to the equipment used and the working conditions in the country or in areas of maintenance, precautions are necessary. Baldan has no direct control over precautions, so it is the responsibility of the owner to put the safety procedures into practice while working with the seeder.
- ⚠ Check the minimum tractor power recommended for each seeder model. Only use tractors with power and ballast compatible with the load and terrain topography.
- ⚠ During the transport of the seeder, travel at speeds compatible with the terrain and never exceeding 10 km/h, this reduces maintenance and consequently increases the life of the seeder.
- ⚠ Alcoholic beverages or some medications may cause loss of reflexes and change the operator's physical condition. Therefore, never operate this seeder under the use of these substances.
- ⚠ Read or explain all procedures in this manual to a user who cannot read.

If in doubt, contact After Sales.
Telephone: 0800-152577 / E-mail: posvenda@baldan.com.br

■ Components


• PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter

1. Chassi
2. Support
3. Hydraulic lift support
4. Shackle
5. Hitch header
6. Turbine
7. Air conducting hose
8. Cutting disc
9. Speed Box
10. Manual container
11. Double fertilizer disc
12. Ladder
13. Double seed disc
14. Depth limiting wheel
15. "V" wheel
16. Batcher Vset
17. Closing lever
18. Plataform
19. Seed deposit
20. Plataform handrail
21. Fertilizer deposit
22. Marker disc
23. Line marker
24. Marker cylinder

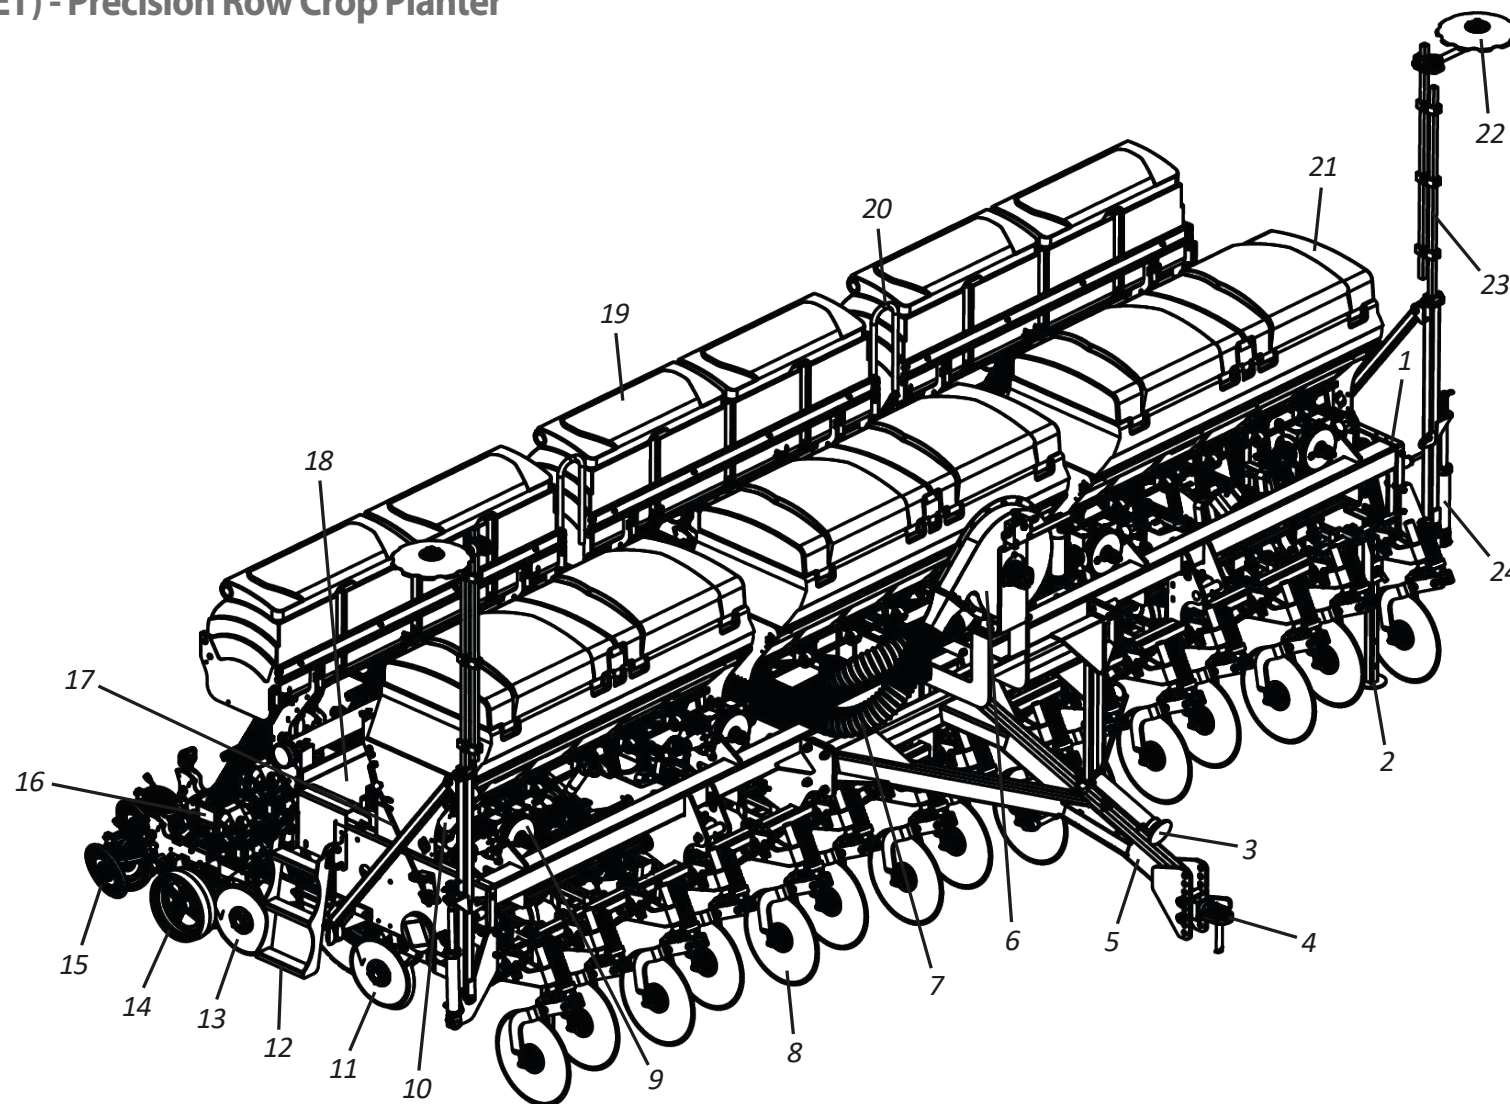


■ Dimensions

• PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter

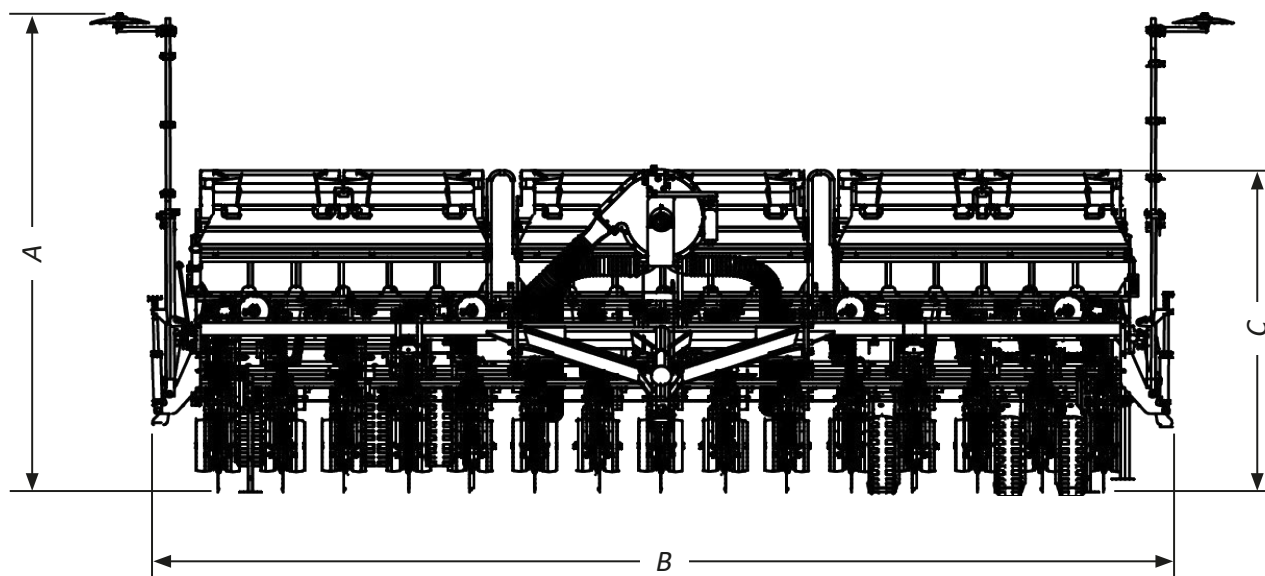

Modelo	Nr Lines	Measure A (mm)	Measure B (mm)	Measure C (mm)	Measure D (mm)	Measure E (mm)
PPSOLO 4000	8	2260	4285	2170	5103	5125
PPSOLO 4500	10	2260	4965	2170	5103	5810
PPSOLO 5000	12	2460	5945	2170	5197	6780
PPSOLO 5500	13	2460	6445	2170	5197	7280
PPSOLO 6500	15	3380	7100	2170	5284	8096
PPSOLO 7500	17	3380	8000	2170	5284	8979

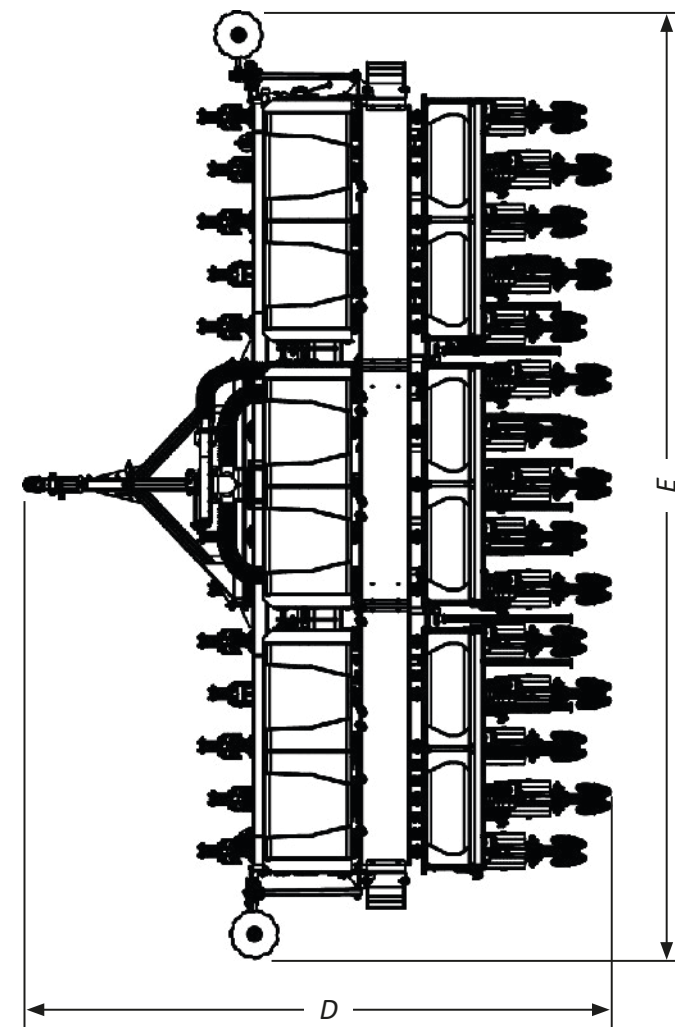

■ Specifications

• PPSOLO AIR 3rd SEED BOX (VSET) - Precision Row Crop Planter

Modelo	No. of Lines	Useful Width (mm)	Working Width (mm)	Total Width (mm)	Fertilizer Deposit Capacity (L)		3rd Seed Deposit	Spacing between lines (mm)	Working width (mm)	No. Wheels	Estimate Weight (Kg)	Approximate Power (Hp)
					Polyethylene	Metallic						
PPSOLO 4000	8	3150	3600	4300*	1240	1400	810	415	0 - 120	2	4131	90 - 100**
PPSOLO 4500	10	4050	4500	5000*	1500	1750	972	415	0 - 120	4	5080	100 - 110**
PPSOLO 5000	12	4950	5400	6000*	1860	2100	1140	415	0 - 120	4	5820	120 - 150**
PPSOLO 5500	13	5400	5850	6500*	1860	2100	1296	415	0 - 120	4	6170	130 - 160**
PPSOLO 6500	15	6300	6715	7300*	2250	2600	1458	415	0 - 120	6	8200	160 - 190**
PPSOLO 7500	17	7200	7615	8200*	2610	3000	1620	415	0 - 120	6	8480	170 - 200 **

Wheelset 700 x 16 x 10LS BL

(*) The dimensions of the total width (mm) include the seeder with line marker. The seeder without a line marker must be reduced by 200 mm in dimensions.

(**) Approximate power (hp) depends on normal planting situations and may vary according to the type of soil, topography, etc.

Baldan reserves the right to change and or improve the technical characteristics of its products without prior notice and without obligation to do so with previously manufactured products. Technical specifications are estimates and reported under normal working conditions.

INTENDED USE OF PPSOLO AIR 3RD SEED BOX - VSET

PPSOLO AIR 3rd SEED BOX - VSET was developed to sow summer crops with precision.

PPSOLO AIR 3rd SEED BOX - VSET must be conducted and operated only by a properly instructed operator.

UNPERMITTED USE OF PPSOLO AIR 3RD SEED BOX - VSET

To avoid damage, serious accident or death, DO NOT transport people on any part of PPSOLO AIR 3rd SEED BOX - VSET.

It is NOT permitted to use PPSOLO AIR 3rd SEED BOX - VSET to attach, tow or push other implements or accessories.

PPSOLO AIR 3rd SEED BOX - VSET must NOT be used by an inexperienced operator who does not know all the driving, command and operation techniques.


■ Assembly

PPSOLO AIR 3rd SEED BOX - VSET leaves the factory semi-assembled, lacking the assembly of some components that must be assembled according to the following instructions.


• Assembly of the coupling header (Models 4000/4500)

To assemble the coupling header (1) on the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

01 - Place the hitch header (1) in the working position, removing the lock with ring (2) and the pin (3) that were placed to transport the seeder.

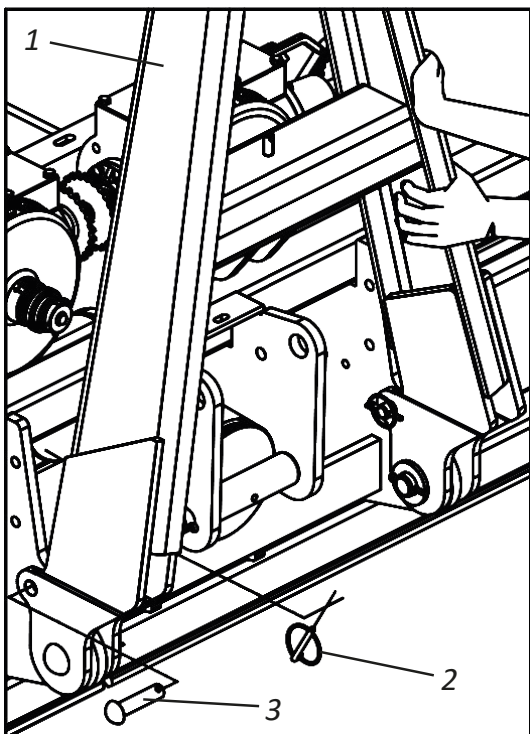

02 - Then, insert the regulator (4) in the hitch header (1), fixing it with the pin (5) and lock with ring (6) and in the upright support (7) with the pin (8) and lock w/ring (9).

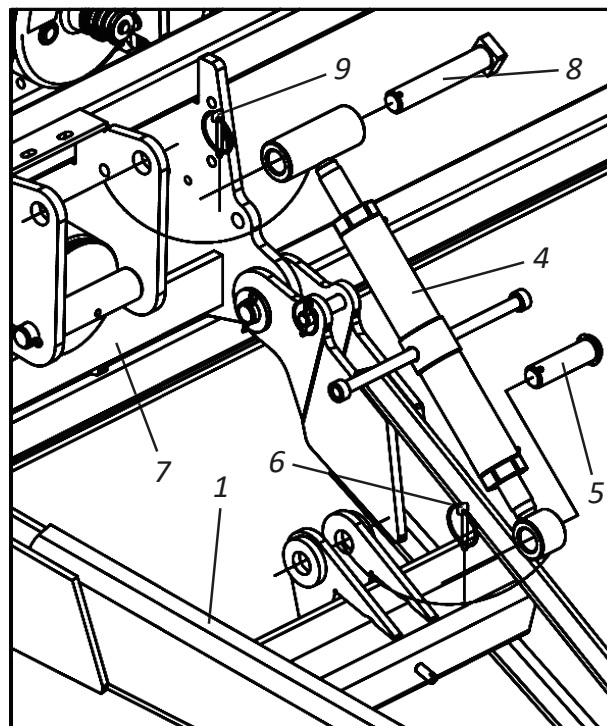


■ Assembly

• Assembly of the coupling header (Models 5000/5500)


To assemble the coupling header (1) on the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

01 - Attach the supports (1) to the upright (2), fixing through screws (3), plate (4), lock washers (5), nuts (6) and clamp (7), screws (8), lock washers (9) and nuts (10).

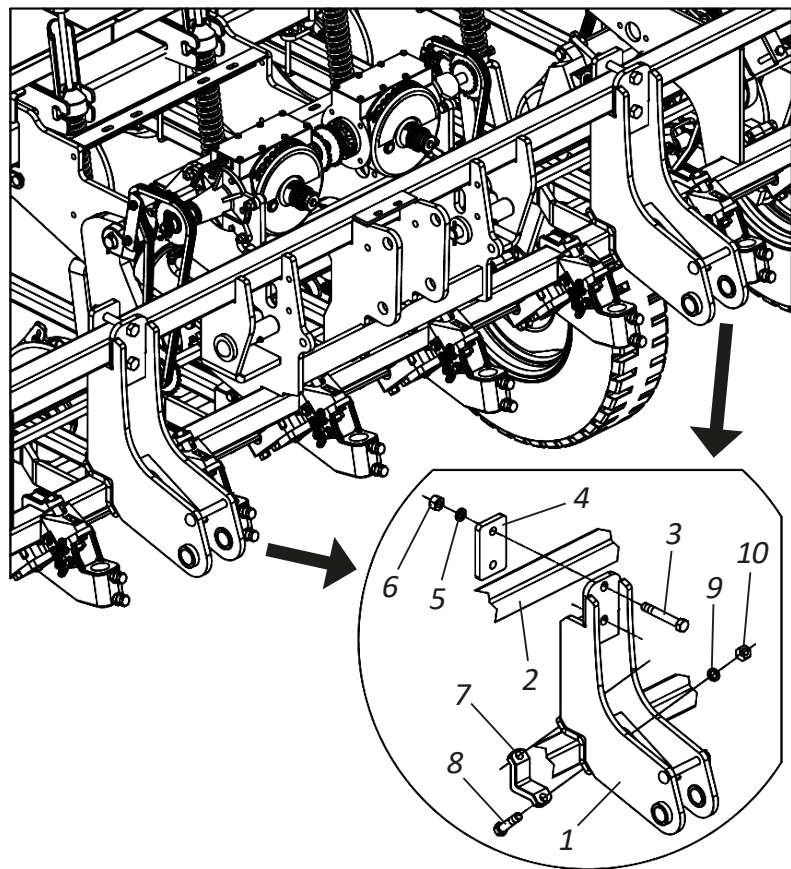

02 - Then, insert the hitch header (11) into the brackets (1), fixing it through the pins (12) and lock with the ring (13).

03 - Finish by introducing the regulator (14) in the hitch header (11), fixing it with the pin (15) and lock with ring (16) and on the upright support (2) with the pin (17) and lock with ring (18).

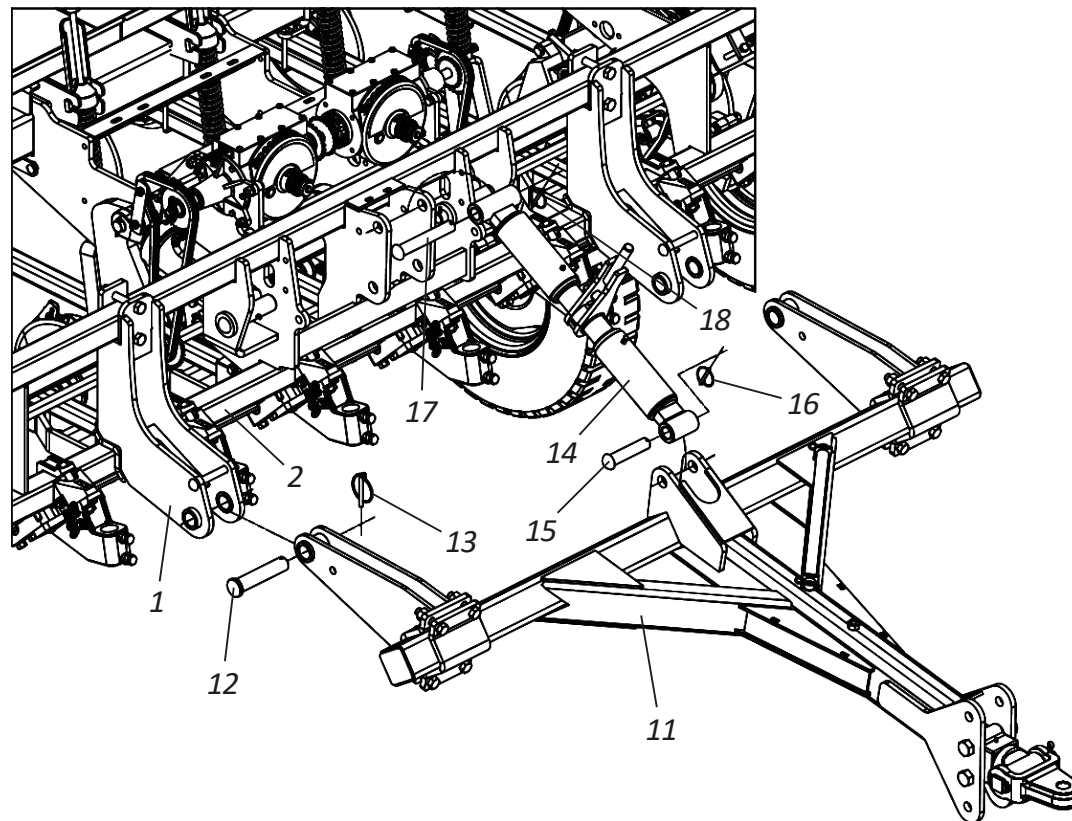




■ Assembly

• Assembly of the coupling header (Models 6500/7500)

To assemble the coupling header (1) on the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

01 - Attach the coupling header (1) to the chassis (2), fixing through the screws (3), pressure washers (4) and nuts (5).

02 - Then, release the lock (6) and the pin (7) and remove the hydraulic jack (8) and secure it in the support position, as shown in **detail "A"** and lock again with the pin (7) and lock (6).

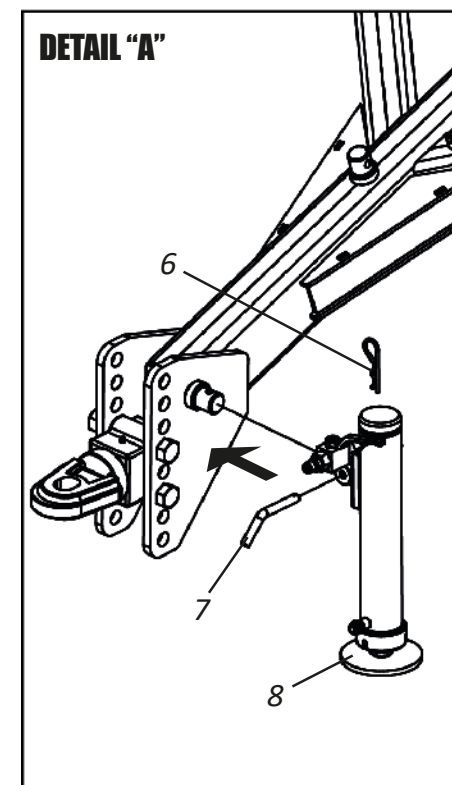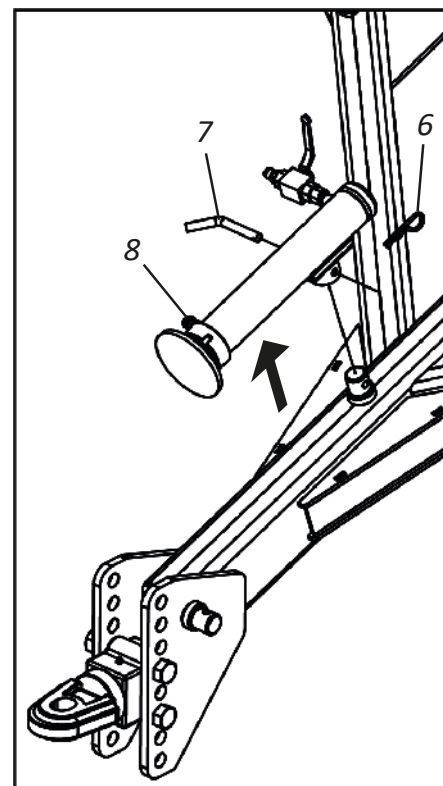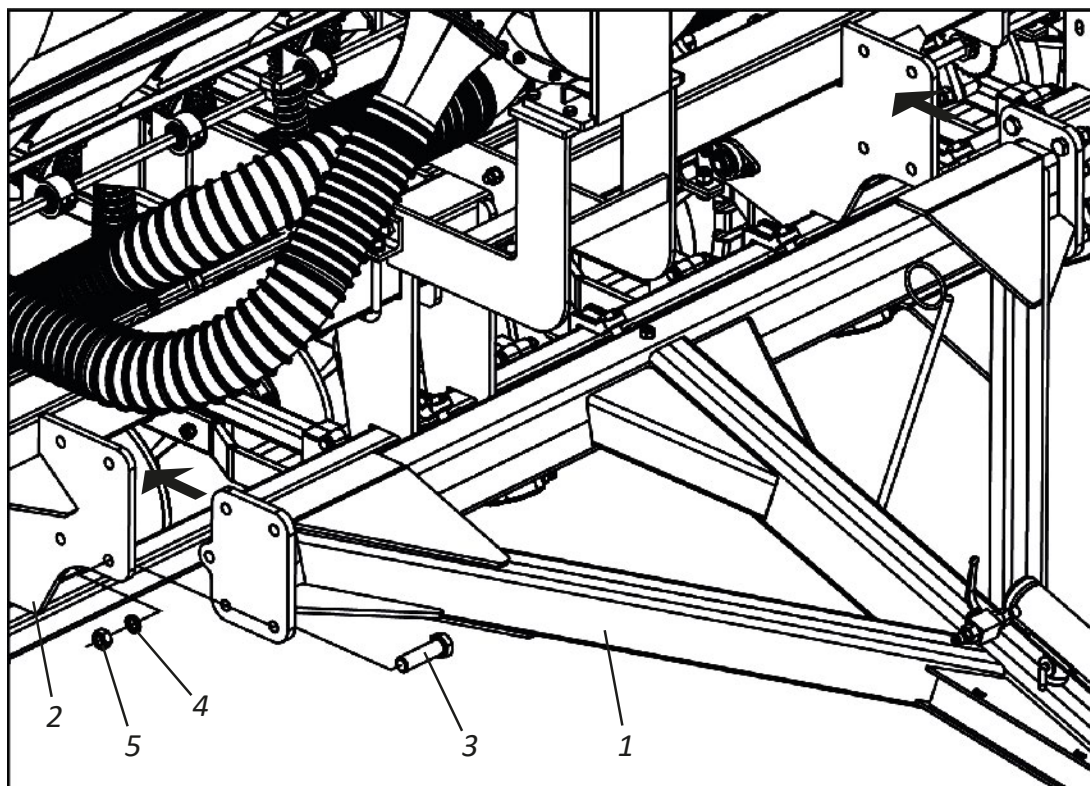


▪ Assembly

• Assembly of the compactor wheels

To mount the “V” wheel support (1), proceed as follows:

- 01** - Couple the “V” wheel support (1) to the depth wheel cart (2), placing the bushings (3), fixing them through the screw (4) and nut (5).
- 02** - Then, put the lever (6) fully forward and engage the spring (7) in the support (2).

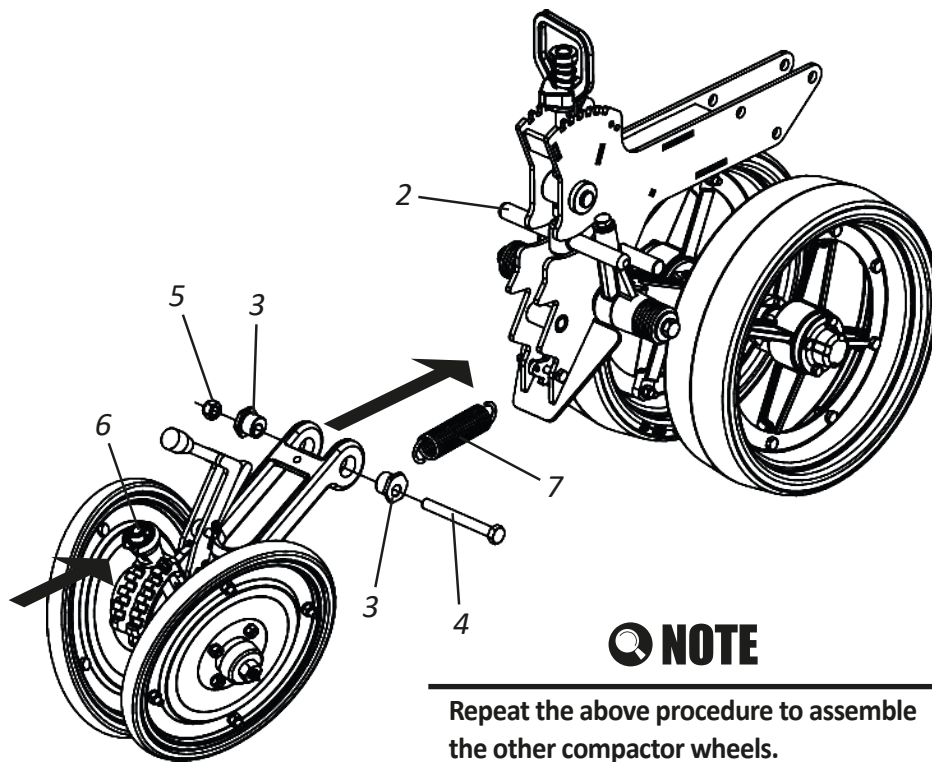

NOTE

Repeat the above procedure to assemble the other compactor wheels.


• Assembly of the lines

To assemble the line (1), proceed as follows:

- 01** - Attach the trolley (2) to the line (1), fixing it using the screws (3) and nuts (4).

ATTENTION


When finishing the assembly of the lines, make a general overhaul on the seeder, check that there are no objects (nuts, screws or others) inside the tanks. Retighten all screws and nuts, check all pins, cotter pins, and locks, review all hoses.

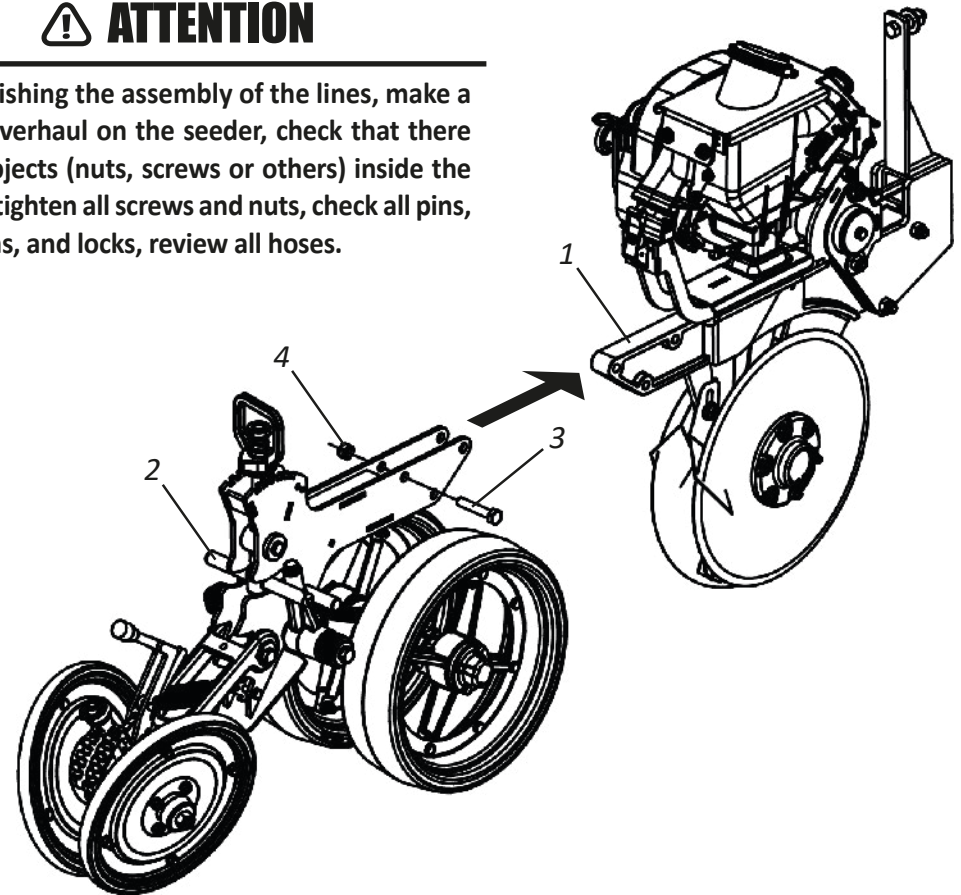

■ Assembly

• Assembly the conductive seed hoses

When finishing the assembly of the lines, fix the conductive seed hoses (1), for this, proceed as follows:

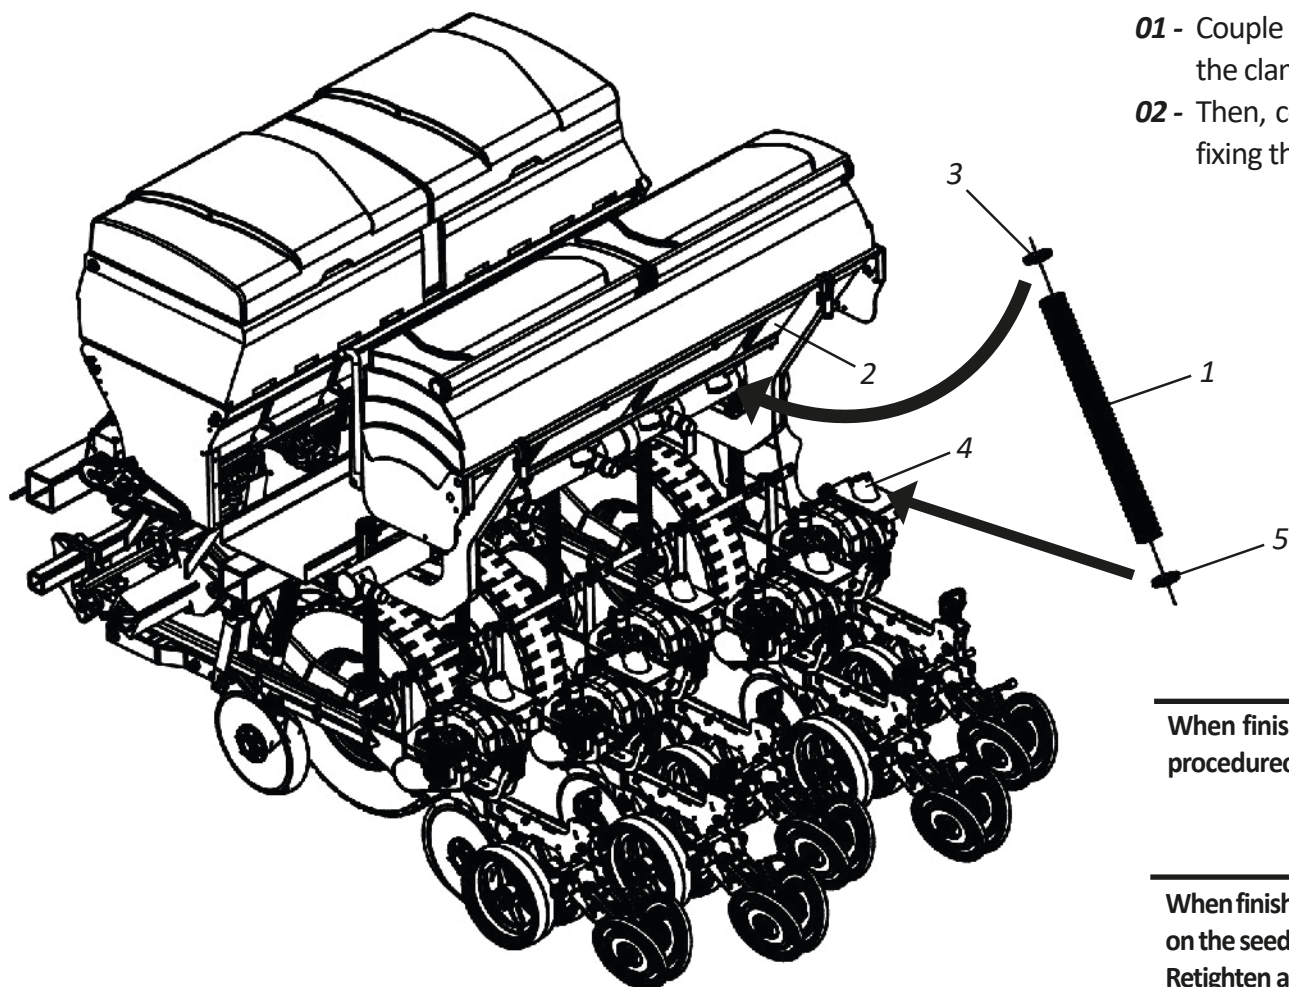

01 - Couple the conductive seed hose (1) in the upper seed tank (2), through the clamp (3).

02 - Then, connect the conductive seed hose (1) to the lower seed tank (4), fixing through the clamp (5).

NOTE


When finishing the assembly of the conductive seed hoses (1), perform the same procedure on the other lines.

ATTENTION

When finishing the assembly of the conductive seed hoses (1), make a general overhaul on the seeder, check that there are no objects (nuts, screws or others) inside the tanks. Retighten all bolts and nuts, check all pins, cotter pins and locks, check all hoses.


▪ Assembly

- Assembly of the hydraulic system without line marker (Models 4000/4500)

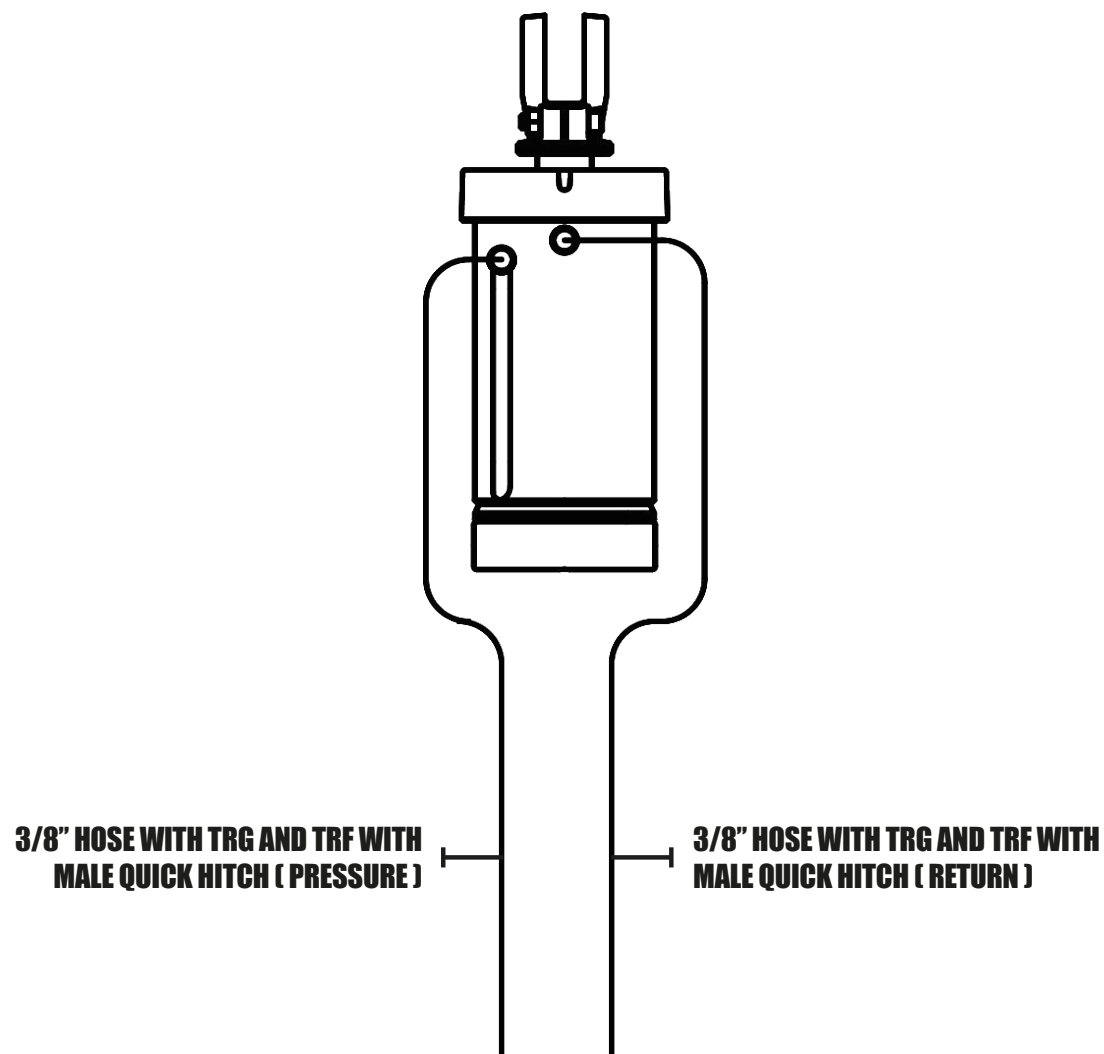

▪ Assembly


- Assembly of the hydraulic system with line marker (Models 4000/4500)

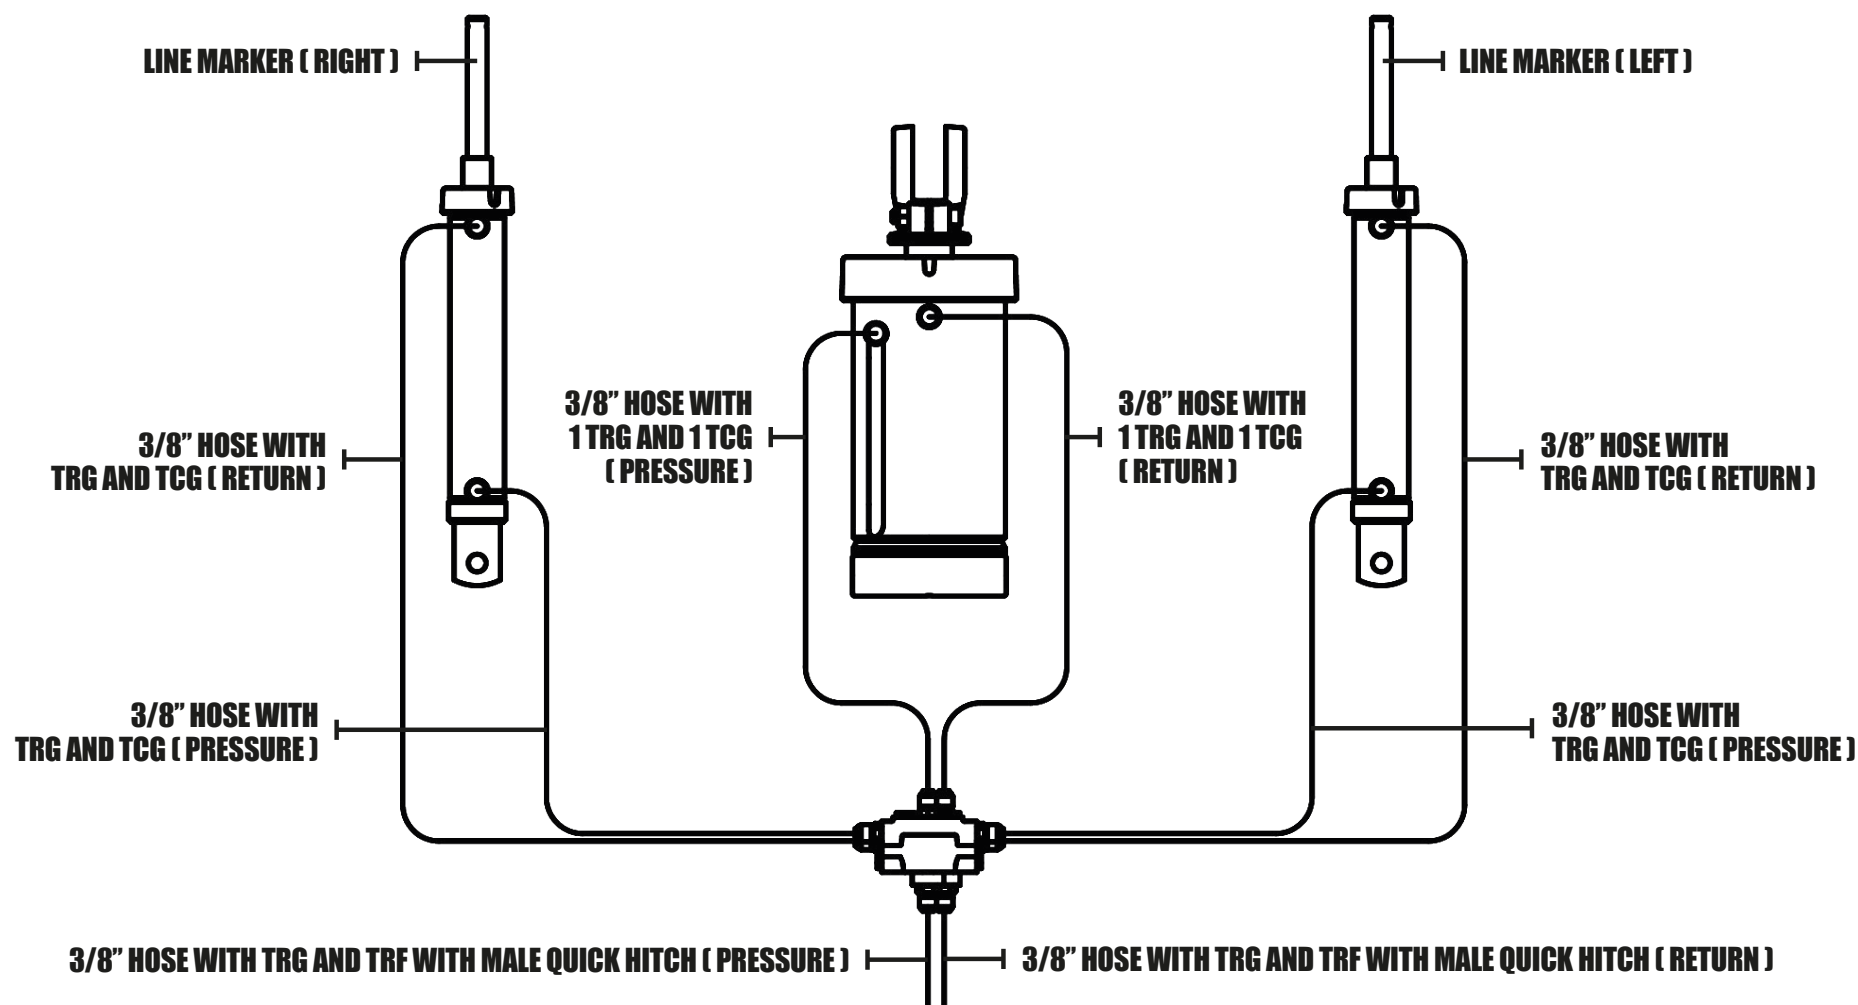

OBS: THE EXPRESSIONS "RIGHT" AND "LEFT" ARE NAMED LOOKING BEHIND THE SEEDER.

▪ Assembly


- ssembly of the hydraulic system with line marker (Models 5000/5500)

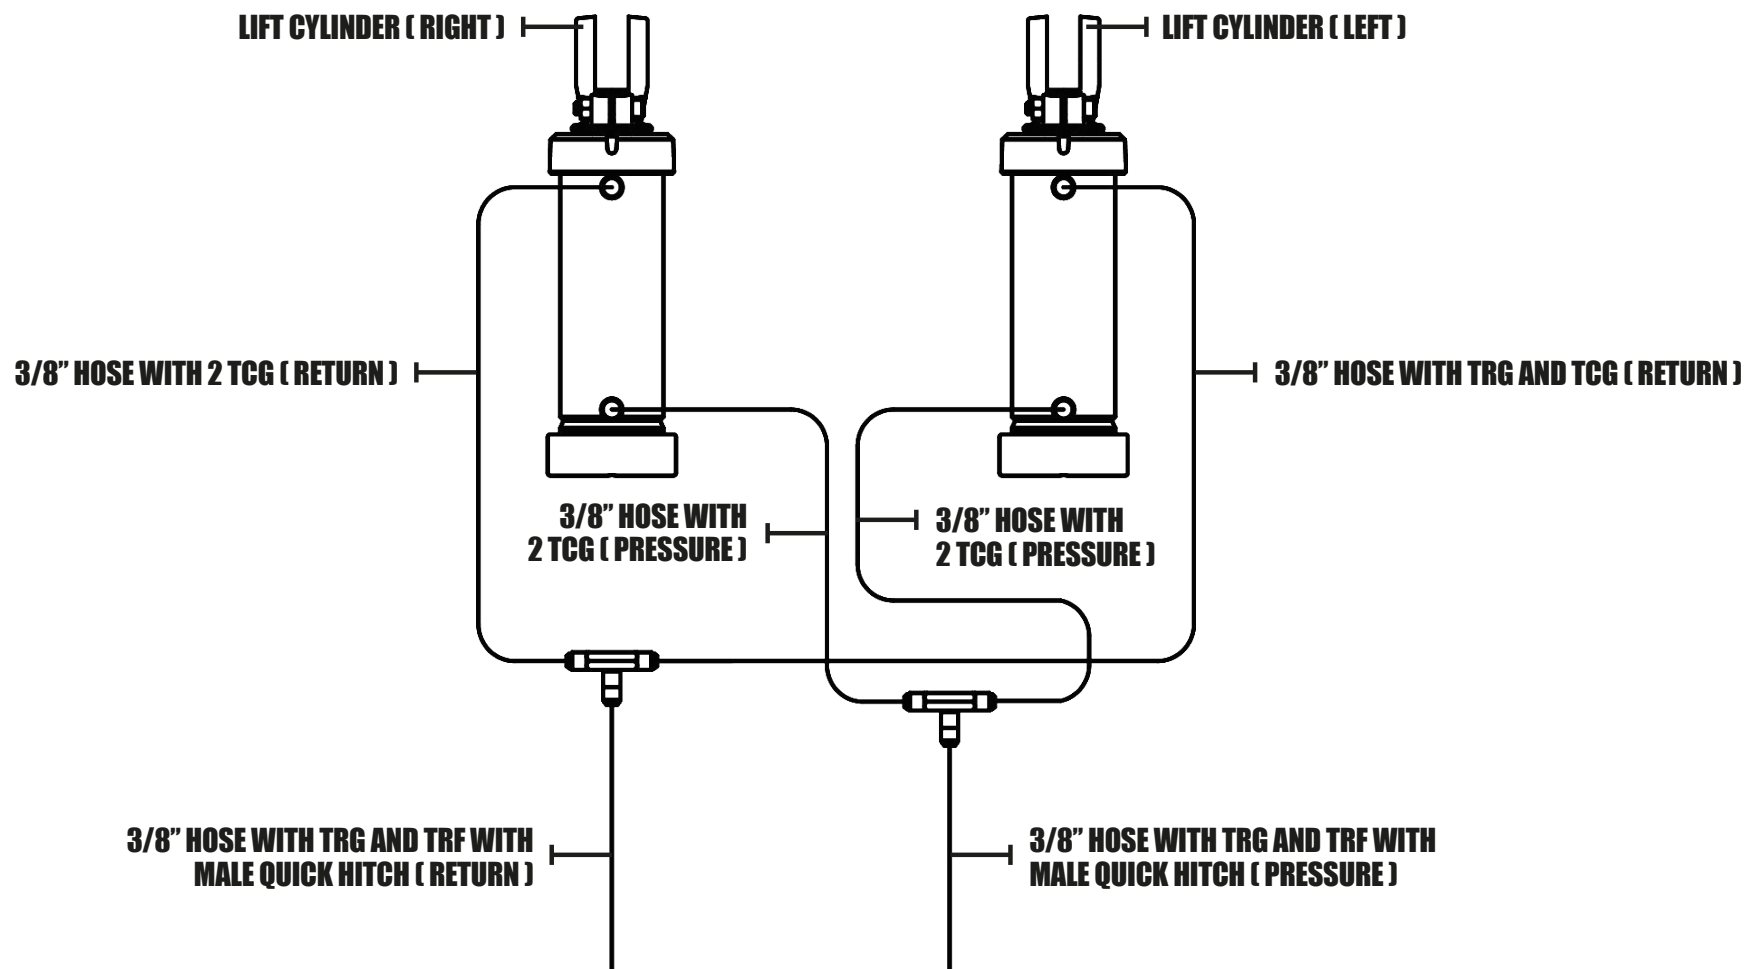

OBS: THE EXPRESSIONS "RIGHT" AND "LEFT" ARE NAMED LOOKING BEHIND THE SEEDER.

▪ Assembly


- Assembly of the hydraulic system with line marker (Models 5000/5500)

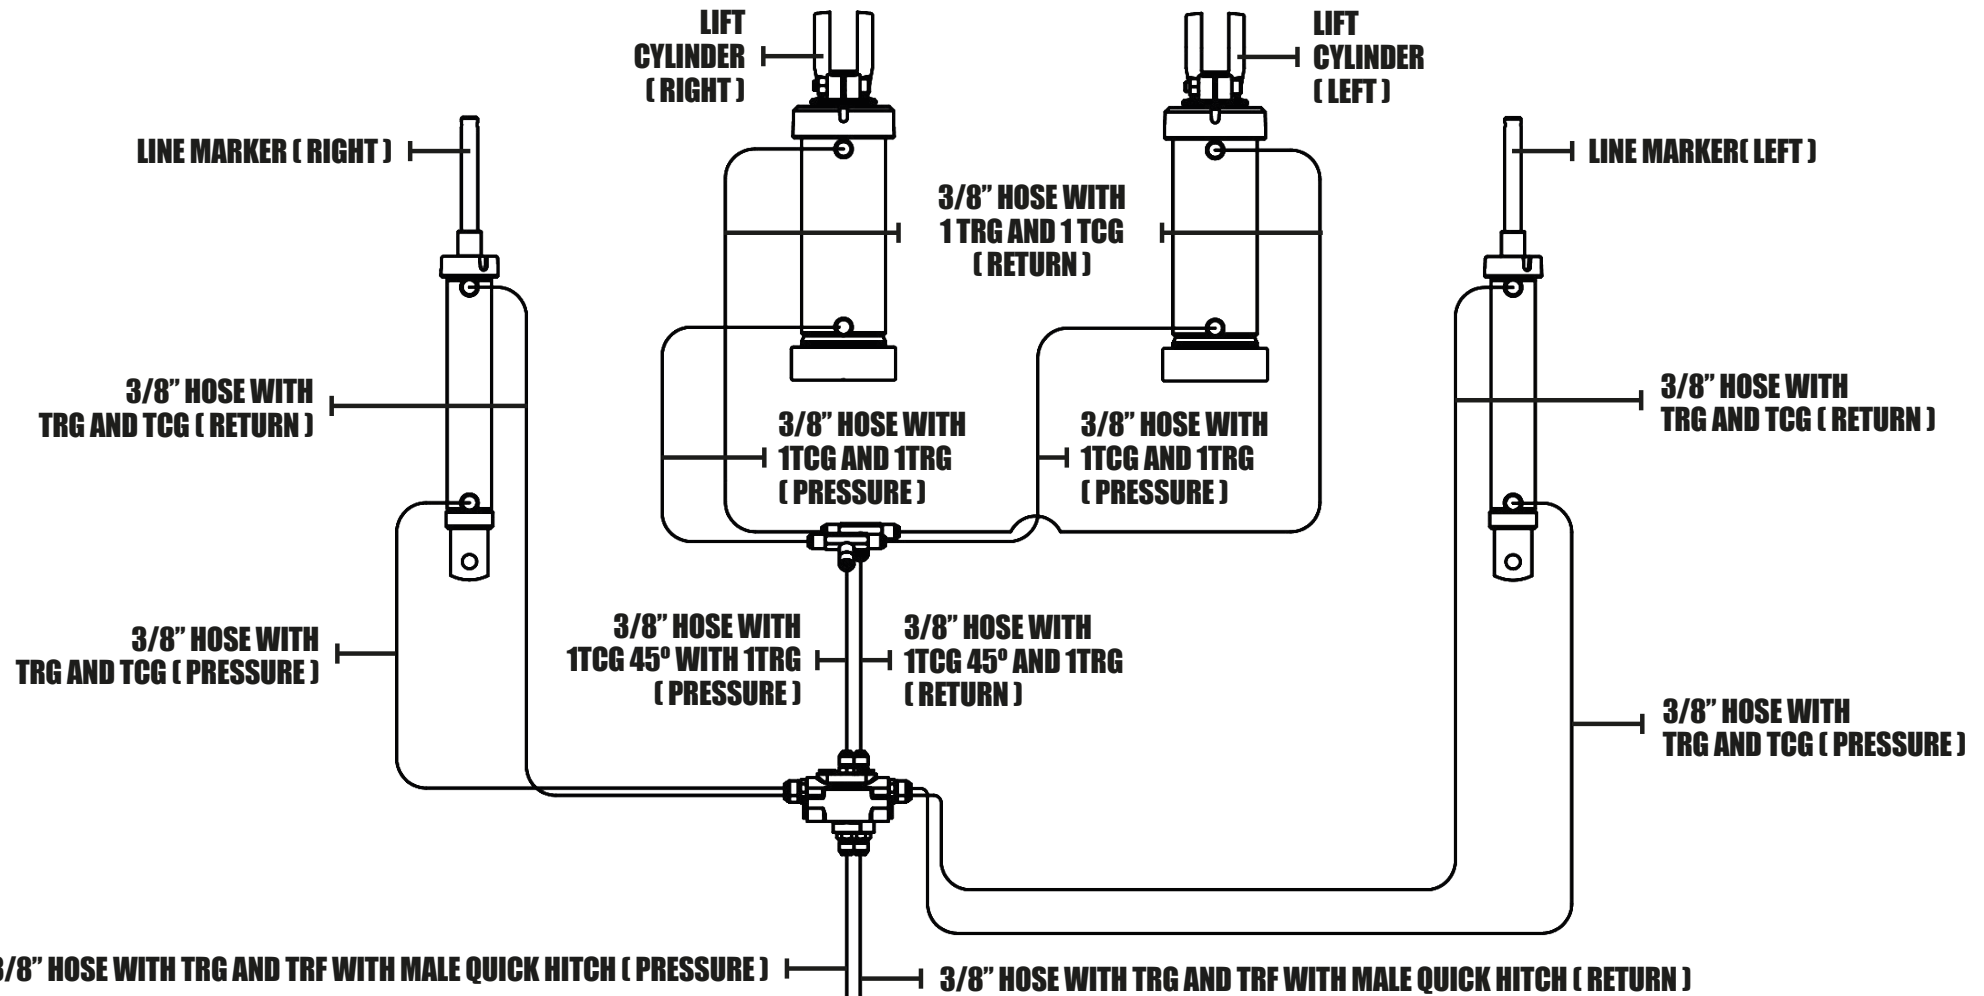

OBS: THE EXPRESSIONS "RIGHT" AND "LEFT" ARE NAMED LOOKING BEHIND THE SEEDER.

▪ Assembly


- Assembly of the hydraulic system without line marker (Models 6500/7500)

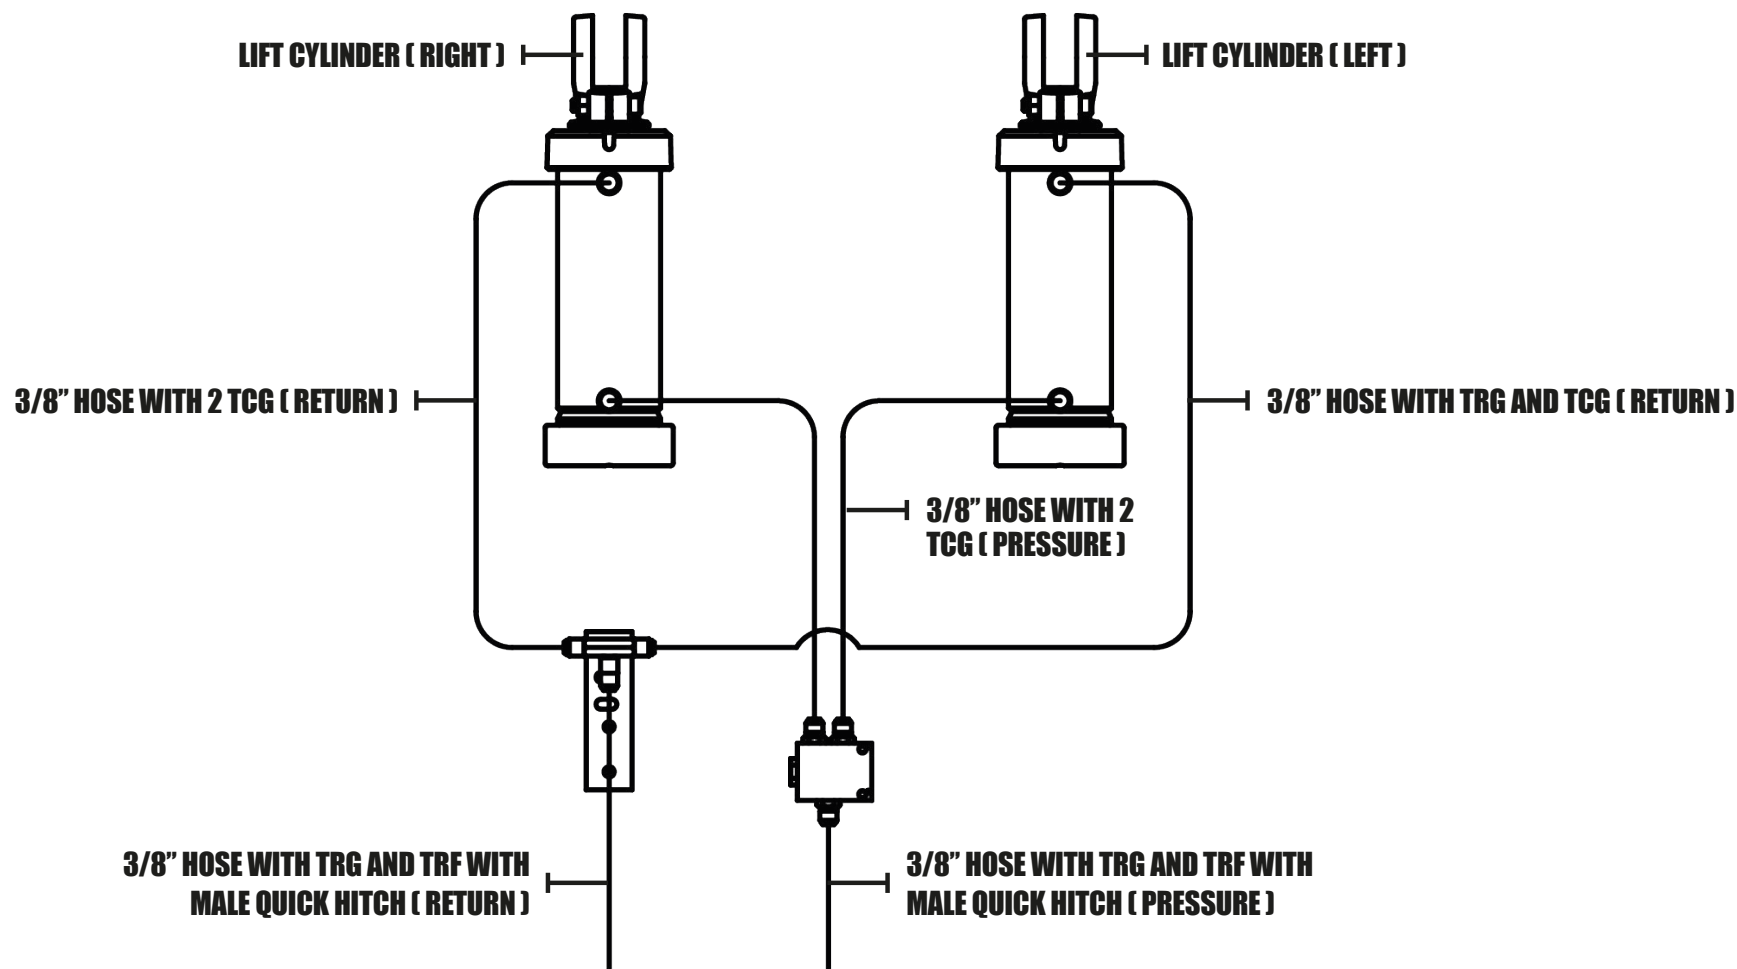

OBS: THE EXPRESSIONS "RIGHT" AND "LEFT" ARE NAMED LOOKING BEHIND THE SEEDER.

■ Assembly

- Assembly of the hydraulic system with line marker (Models 6500/7500)

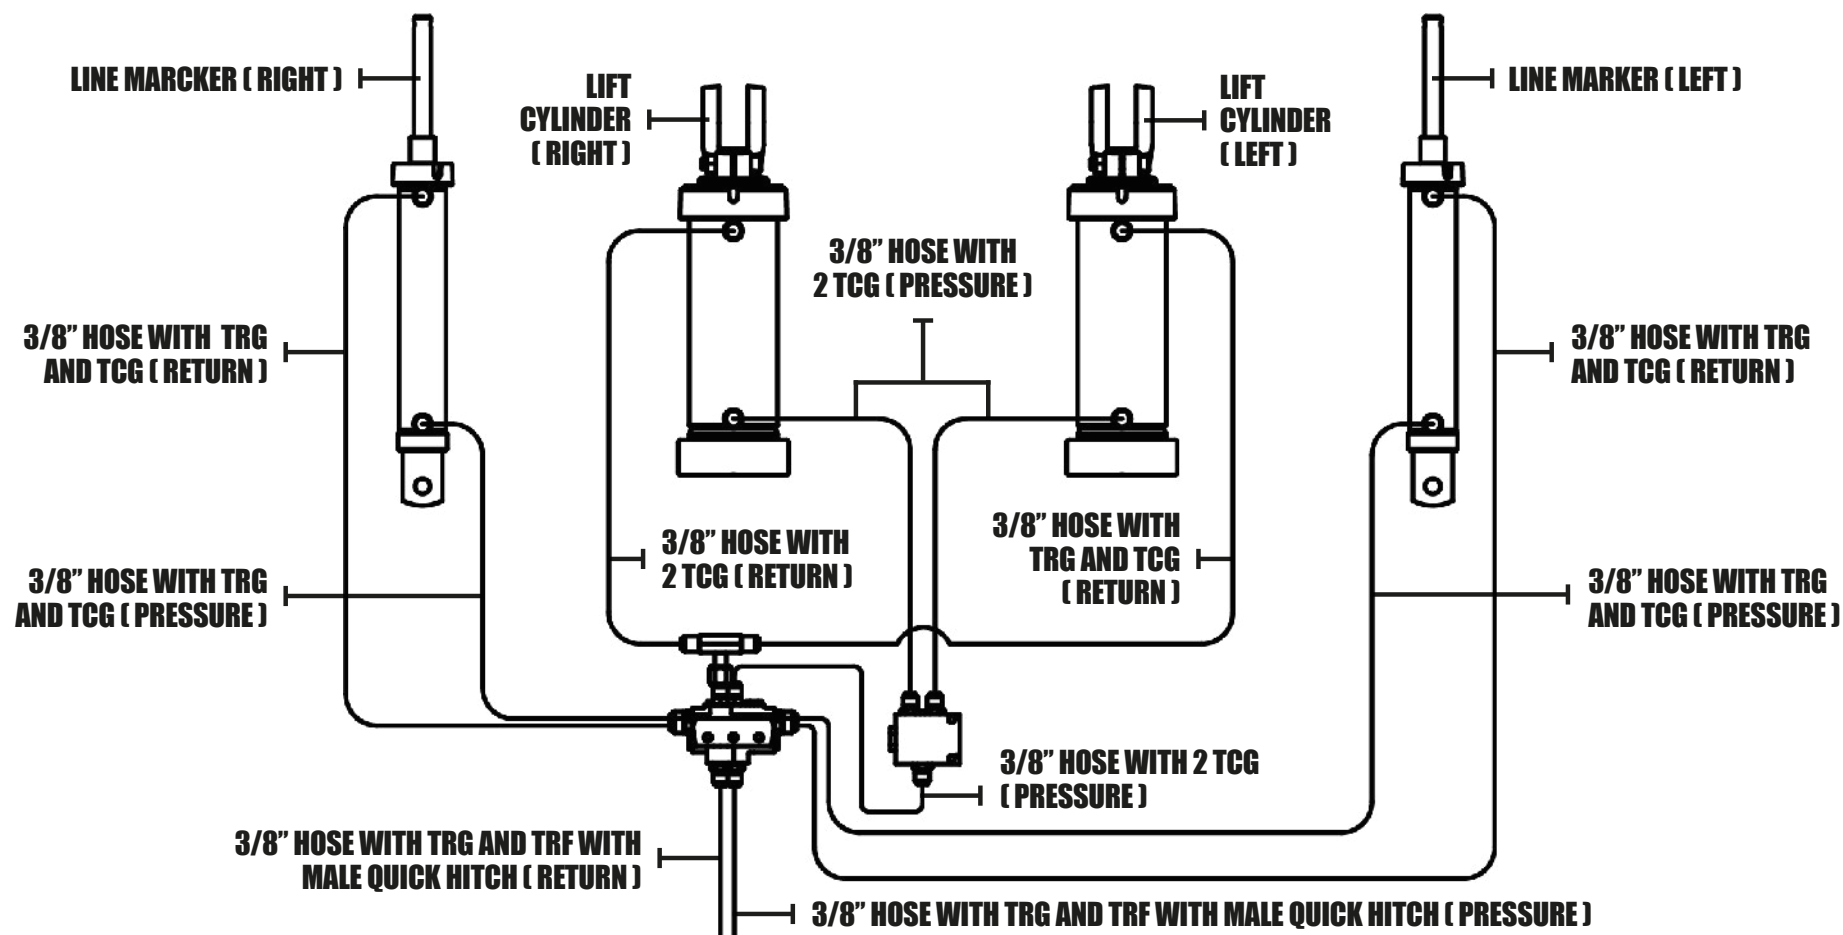

OBS: THE EXPRESSIONS "RIGHT" AND "LEFT" ARE NAMED LOOKING BEHIND THE SEEDER.



■ Assembly

• Assembly of the line marker cutting disc

The seeders leave the factory with the line markers (1) fitted. The disks (2) are mounted inversely to their respective markers to avoid the risk of accidents in the transport of the seeder.



Before starting to work with the seeder, change the discs (2) in the row markers (1), to do this, proceed as follows:

- 01** - Loosen the screws (3), lock washers (4) and nuts (5).
- 02** - Then, remove the disc supports (6), turn them 180° and mount them again on the line markers (1) fixing through the screws (3), pressure washers (4) and nuts (5).

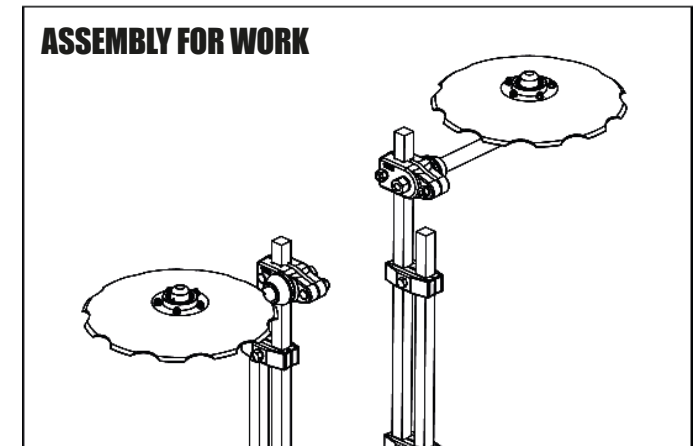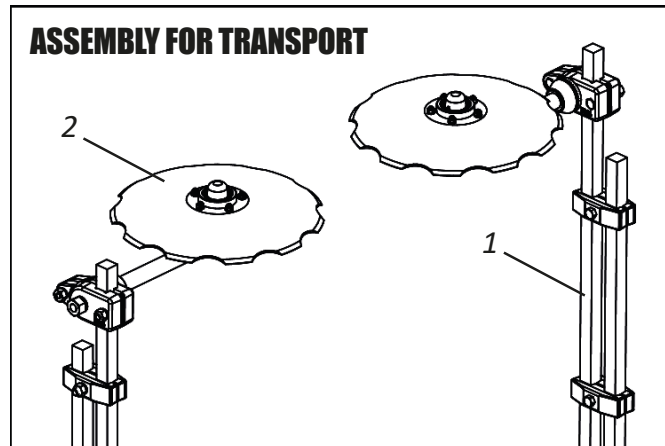

ATTENTION

PPSOLO AIR 3rd SEED BOX - VSET discs are sharp and can cause accidents. When reversing the position of the line marker discs, use PPE equipment (Safety Equipment) mainly gloves on your hands.

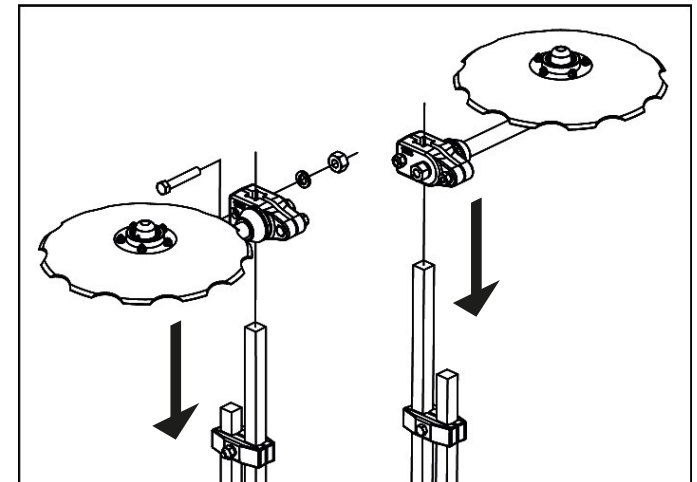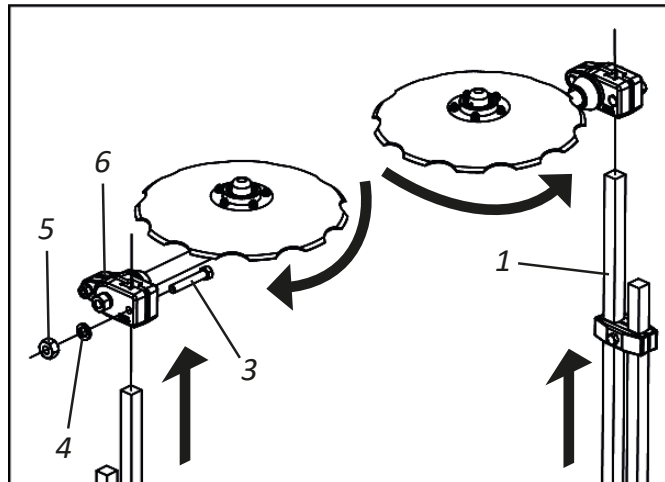


▪ Hitch

• Tractor hitch (Models 4000/4500)

Before attaching the **PPSOLO AIR 3rd SEED BOX - VSET** to the tractor, check that the tractor is equipped with a set of weights or ballast on the front or on the front wheels to avoid lifting the tractor. The rear wheels will give the tractor greater stability and traction on the ground.

To connect the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

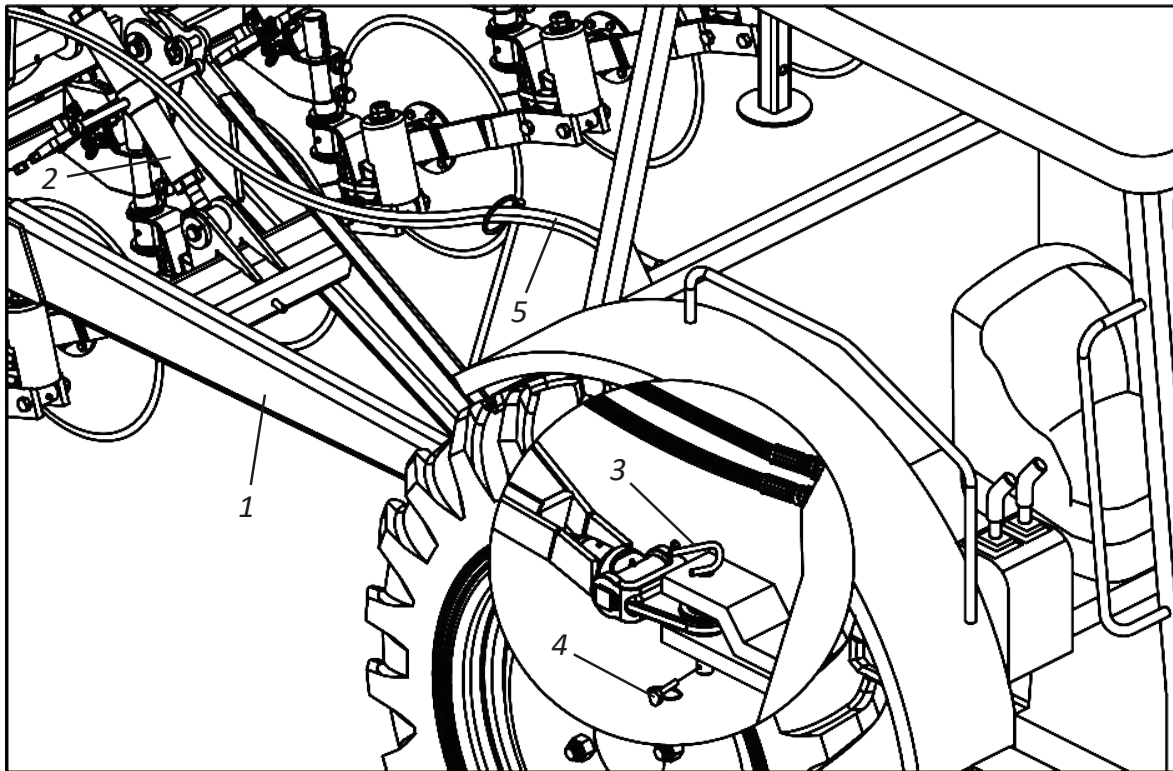

- 01** - Level the coupling header (1) of the seeder in relation to the tractor coupling through the adjustments (2) of the coupling jumel. Then, slowly approach the tractor to the tractor in reverse, paying attention to the application of the brakes.
- 02** - Proceed the coupling of the seeder to the tractor, fixing it through the coupling pin (3) and lock (4).
- 03** - Finalize, coupling the hoses (5) to the tractor's quick coupling.

NOTE

When engaging the seeder, look for a safe and easily accessible place, always use reduced gear with low acceleration.

ATTENTION


Before connecting or disconnecting the hydraulic hoses, turn off the engine and relieve pressure from the hydraulic system by fully operating the control levers. When relieving system pressure, make sure that no one is close to the equipment's movement area.

▪ Hitch

• Tractor hitch (Models 5000/5500)

Before attaching the **PPSOLO AIR 3rd SEED BOX - VSET** to the tractor, check that the tractor is equipped with a set of weights or ballast on the front or on the front wheels to avoid lifting the tractor. The rear wheels will give the tractor greater stability and traction on the ground.

To connect the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

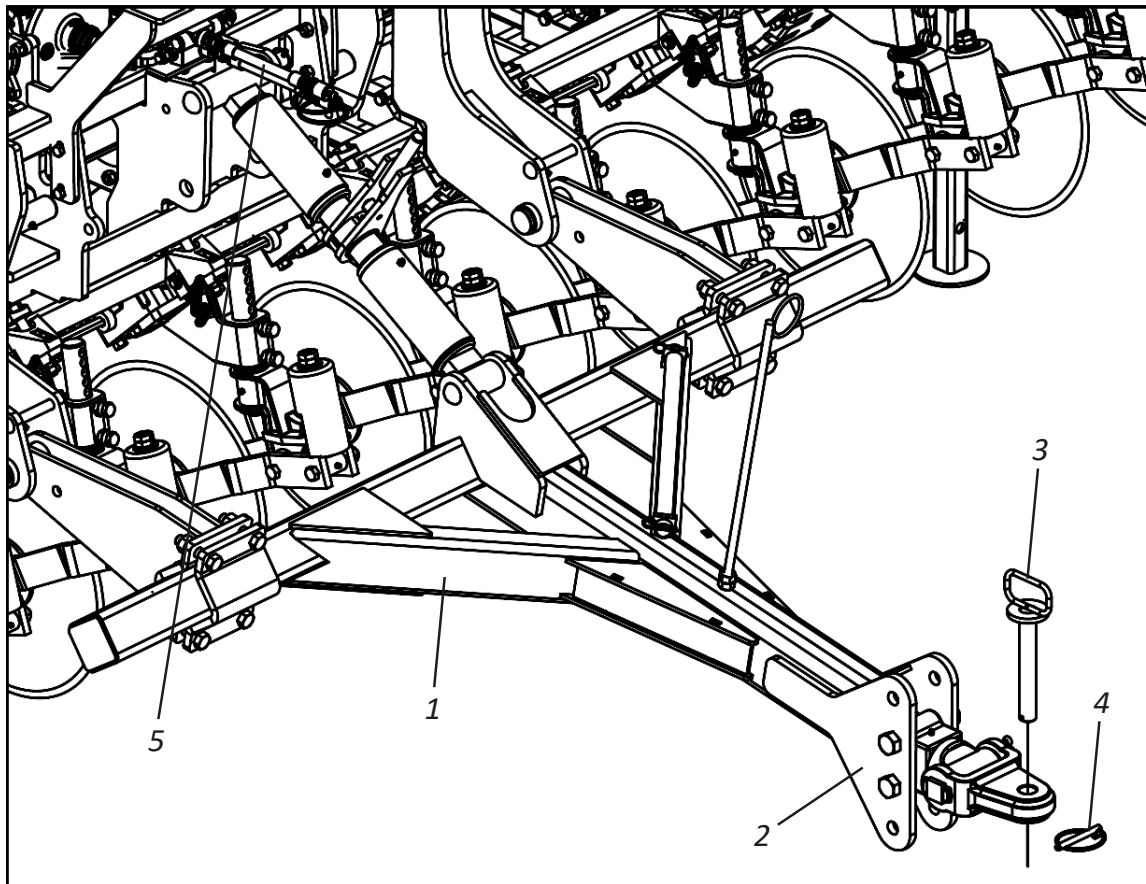

- 01** - Level the coupling header (1) of the seeder in relation to the tractor coupling through the adjustments (2) of the coupling jumel. Then, slowly approach the tractor to the tractor in reverse, paying attention to the application of the brakes.
- 02** - Proceed the coupling of the seeder to the tractor, fixing it through the coupling pin (3) and lock (4).
- 03** - Finalize, coupling the hoses (5) to the tractor's quick coupling.

ATTENTION

Before connecting or disconnecting the hydraulic hoses, turn off the engine and relieve pressure from the hydraulic system by fully operating the control levers. When relieving system pressure, make sure that no one is close to the equipment's movement area.

NOTE


When engaging the seeder, look for a safe and easily accessible place, always use reduced gear with low acceleration.

▪ Hitch

• Tractor hitch (Models 6500/7500)

Before attaching the **PPSOLO AIR 3rd SEED BOX - VSET** to the tractor, check that the tractor is equipped with a set of weights or ballast on the front or on the front wheels to avoid lifting the tractor. The rear wheels will give the tractor greater stability and traction on the ground.

To connect the **PPSOLO AIR 3rd SEED BOX - VSET**, proceed as follows:

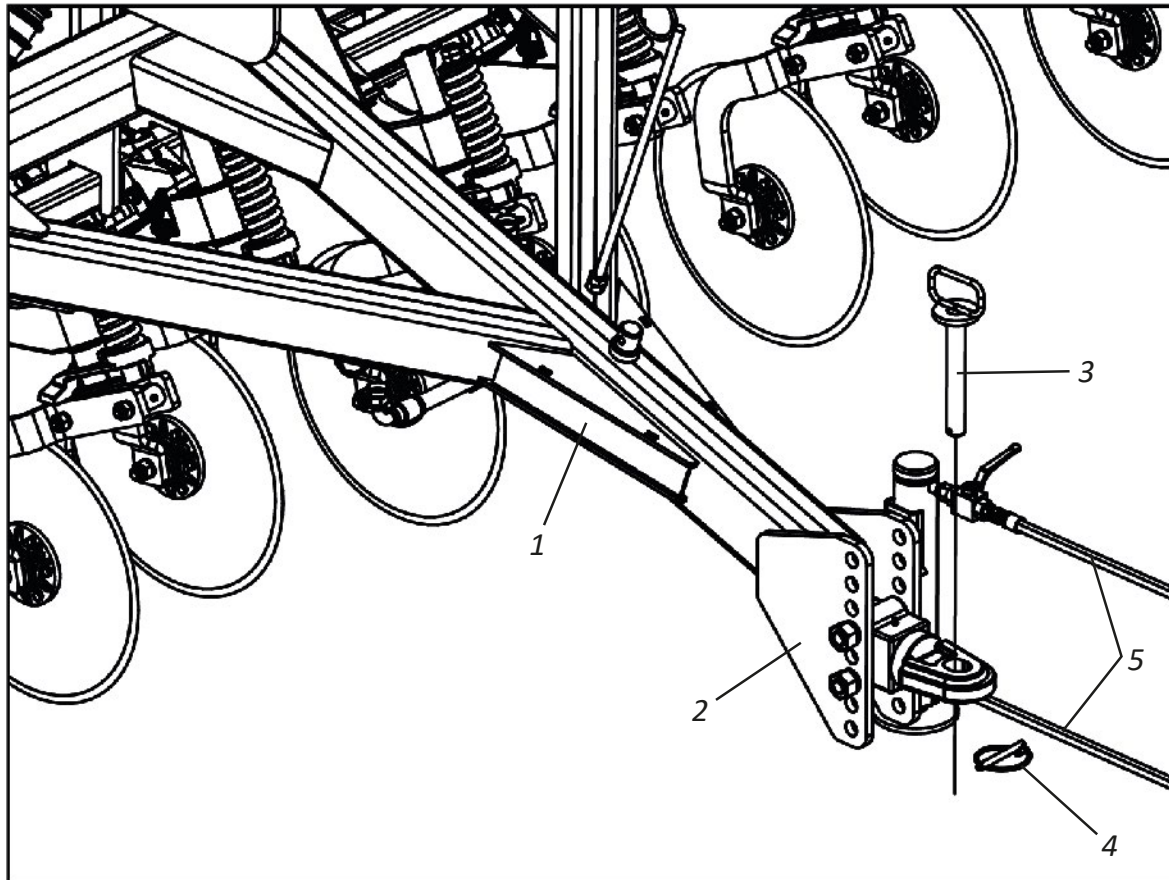

- 01** - Level the coupling header (1) of the seeder in relation to the tractor coupling through the adjustments (2) of the coupling jewel. Then, slowly approach the tractor to the tractor in reverse, paying attention to the application of the brakes.
- 02** - Proceed the coupling of the seeder to the tractor, fixing it through the coupling pin (3) and lock (4).
- 03** - Finalize, coupling the hoses (5) to the tractor's quick coupling.

ATTENTION

Before connecting or disconnecting the hydraulic hoses, turn off the engine and relieve pressure from the hydraulic system by fully operating the control levers. When relieving system pressure, make sure that no one is close to the equipment's movement area.

NOTE


When engaging the seeder, look for a safe and easily accessible place, always use reduced gear with low acceleration.

■ Transportation


• Preparing for transport

Before transporting the seeder, proceed as follows:

01 - Collect the support bracket (1) and secure with the pin (2) and lock (3).

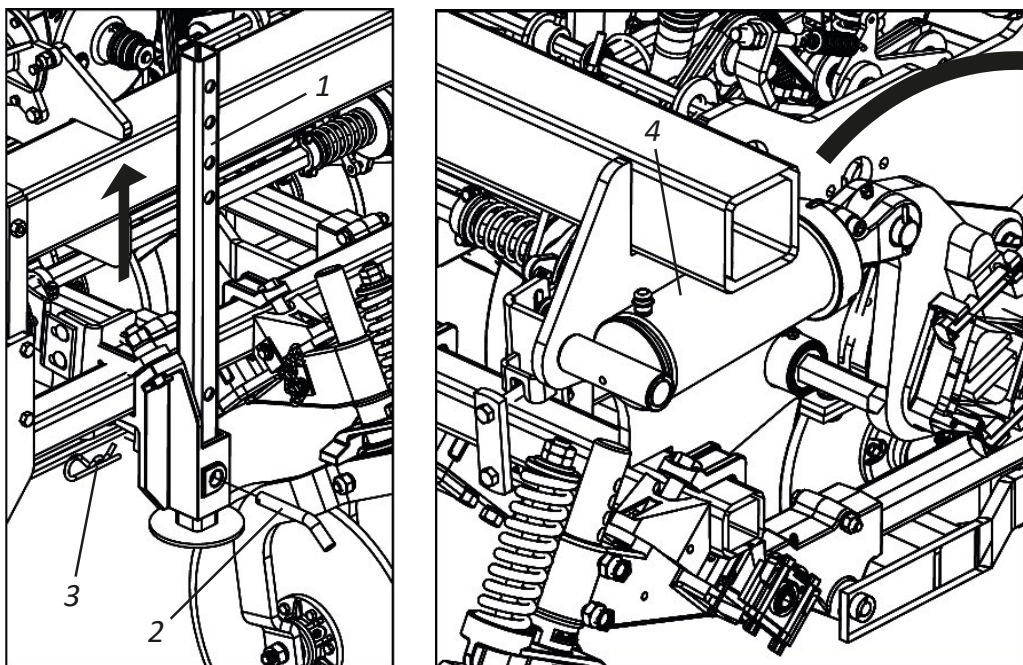

02 - Then, raise the lines by fully activating the stroke of the hydraulic cylinder (4), place the lock (5) on the rod of the same locking with the pin (6) and lock (7).

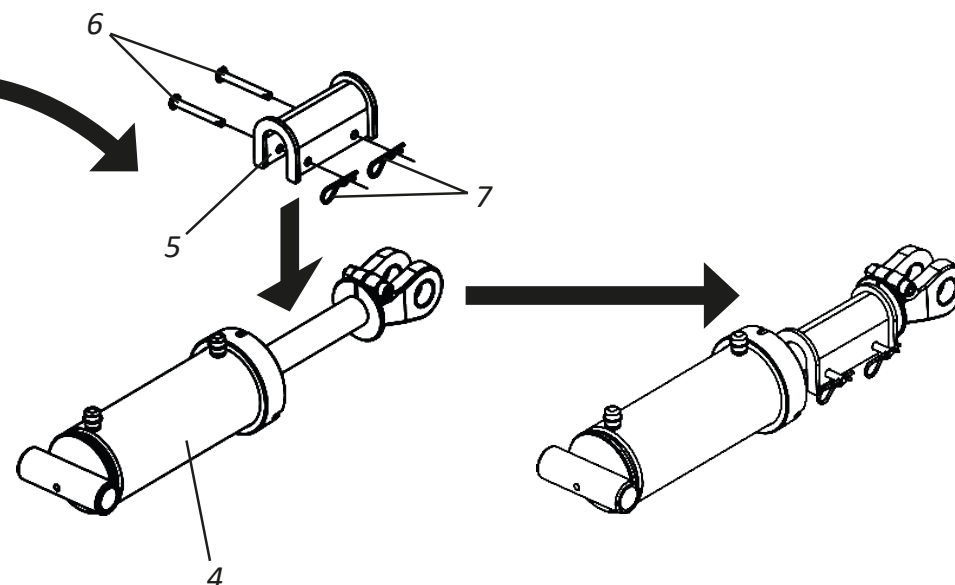

⚠ ATTENTION

Do not transport the seeder without first checking all the procedures mentioned. Do not transport the seeder with the ladder open, follow the guidelines on page 38.

❗ IMPORTANT


Do not transport the loaded seeder as it may damage the equipment. We recommend that you supply it only at the workplace. If the seeder is going to remain in the field for any reason, we recommend covering it with waterproof tarpaulin to avoid moisture.

▪ Work


• Preparing for work - Part I

Before working with the seeder, proceed as follows:

01 - Collect the support bracket (1) and secure with the pin (2) and lock (3).

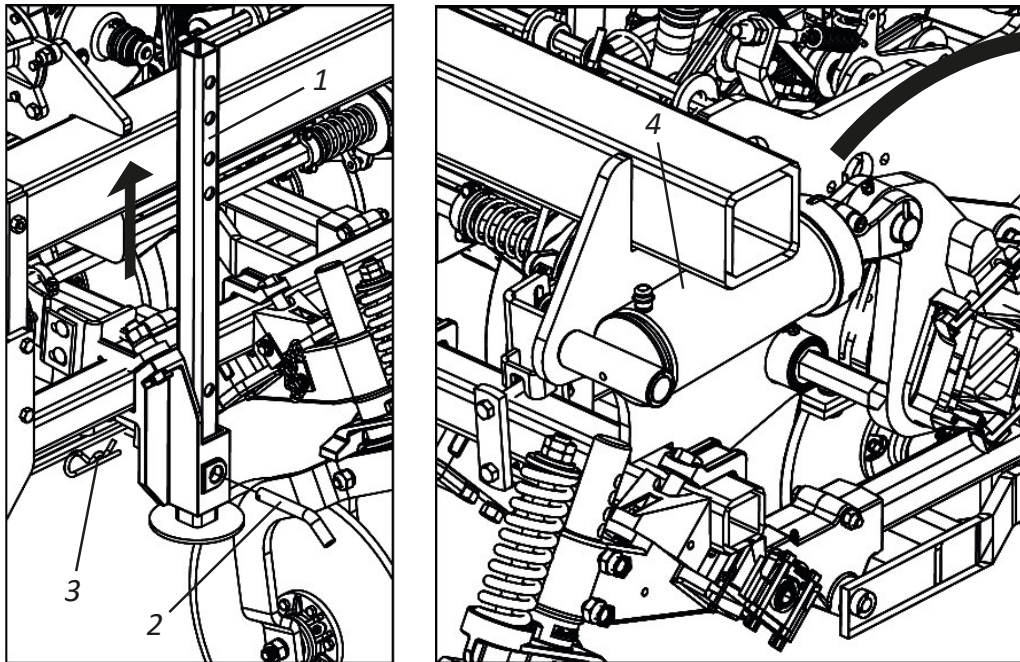

02 - Then, raise the lines by fully activating the stroke of the hydraulic cylinder (4) and place the limiting rings (5) on the rod of the same.

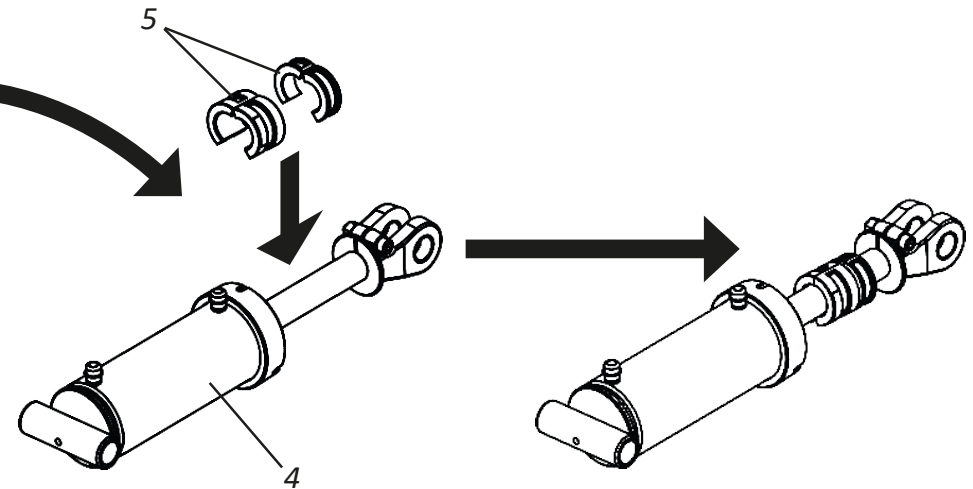

⚠ ATTENTION

Do not work with the seeder without first checking all the procedures mentioned. Do not work the seeder with the ladder open, follow the guidelines on page 38.

🔍 NOTE

Always place the same number of limit rings (5) on all hydraulic cylinders (4) for lifting the wheels.


❗ IMPORTANT

After attaching the limiting rings (5), the seeder will always operate at the same depth in both hard and loose terrain, because the limiting rings (5) are limiting the course of the hydraulic cylinders (4), that is, preventing the oscillation of the wheels. We recommend that you supply it only at the workplace. If the seeder is going to remain in the field for any reason, we recommend covering it with waterproof tarpaulin to avoid moisture.

▪ Work

• Preparing for work - Part II

- 03** - Finish by loosening the nut (6), pressure washer (7) and remove the screw (8) from the clamp (9) by loosening the wheel support (10).

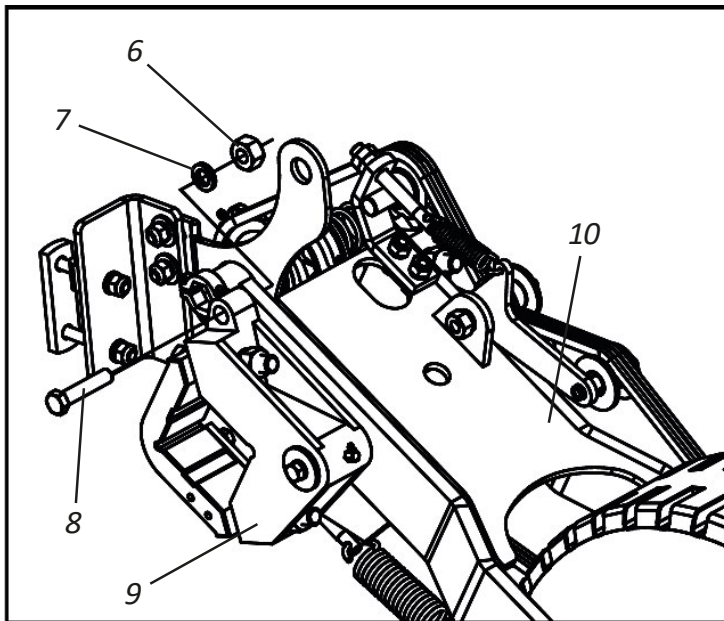


⚠ ATTENTION

Do not work with the seeder without first removing the screw (8), lock washer (7) and nut (6) from the clamp (9) of the wheel support (10). Ignoring this warning will cause failures in planting the seeder.

• Use of the ladder


The articulated ladder (1) should only be used when filling or maintaining the **PPSOLO AIR 3rd SEED BOX - VSET**. Before using the articulated ladder (1), make sure that the seeder is stopped and the tractor is switched off.

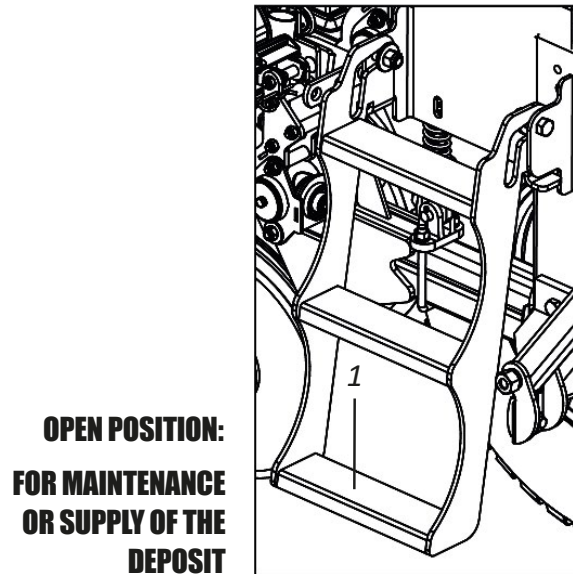

**OPEN POSITION:
FOR MAINTENANCE
OR SUPPLY OF THE
DEPOSIT**

⚠ ATTENTION

Do not remain on the ladder when the seeder is working or being transported.
Do not work or transport the seeder with the ladder open.
Do not transport people on the platform, ladder or any other part of the seeder. Ignoring these warnings could result in serious accidents or even death.

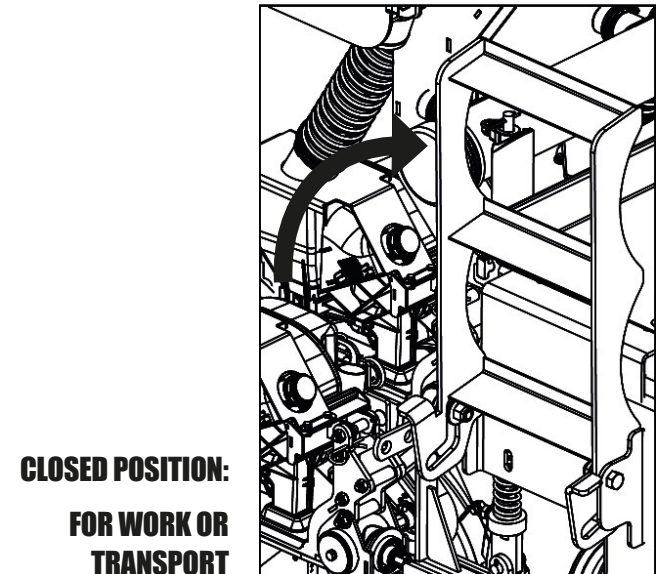

**CLOSED POSITION:
FOR WORK OR
TRANSPORT**

❗ IMPORTANT

The articulated ladder (1) should only be used when filling or maintaining tanks. The articulated ladder (1) complies with NBR standards.


■ Spacing

• Line spacing

The **PPSOLO AIR 3rd SEED BOX - VSET**, seeders are provided with spacing according to the number of lines requested, and new spacing can be made according to the type of culture desired.


• Number of even lines

Mark the center of the **PPSOLO AIR 3rd SEED BOX - VSET** and divide $1/2$ (half) spacing to the left and $1/2$ (half) to the right, fixing the first two lines at these points. Then, starting from these, make the assembly of the other lines with the desired spacing.

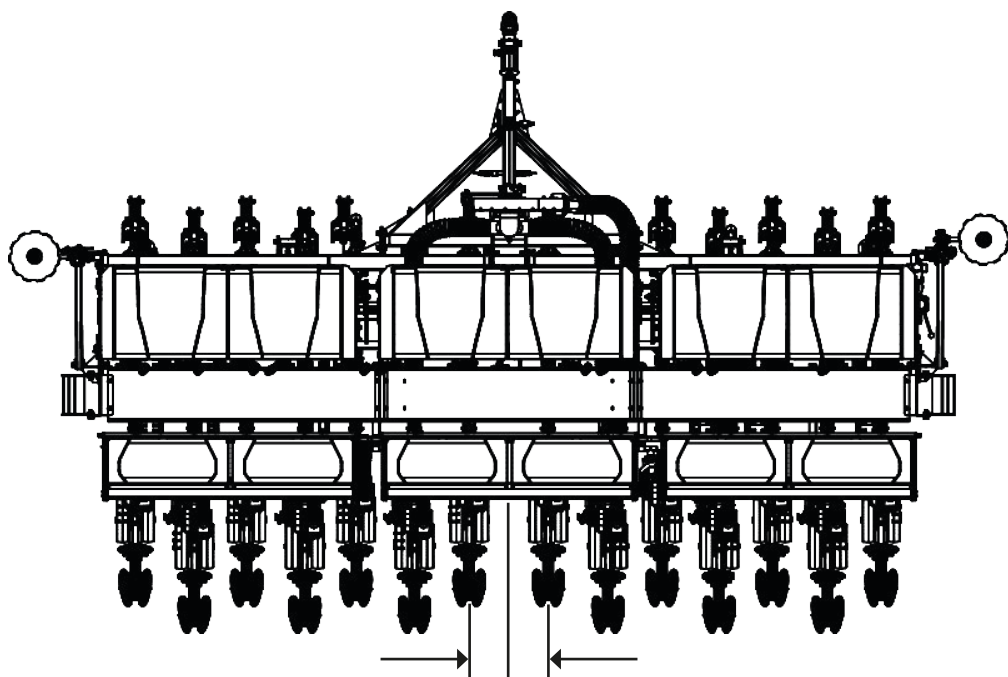

• Number of odd lines

Attach a line in the center of the **PPSOLO AIR 3rd SEED BOX -VSET** chassis and starting from this, assemble the others with lines with the desired spacing.

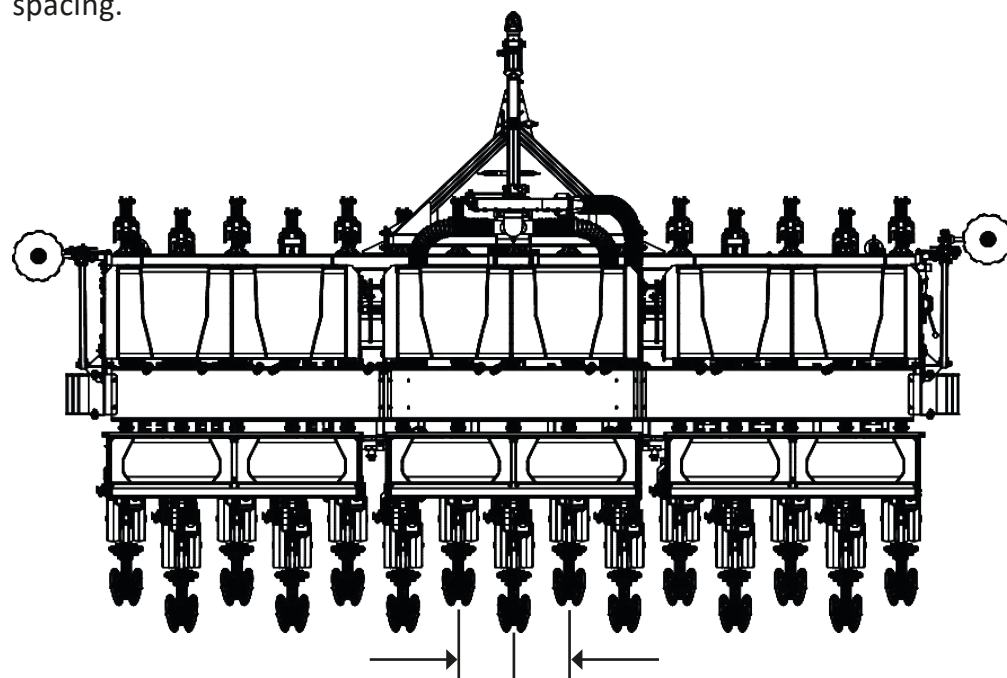

ON THE FOLLOWING PAGE, CHECK THE POSSIBLE SPACES, OBSERVING THE ABOVE ASSEMBLY INSTRUCTIONS TO ASSEMBLE THE QUANTITY OF UNIQUE OR UNIQUE LINES.

■ Spacing

• Spacing tables in milimeters

Model	Lines	Spacing
4000	4	800 / 900 / 1000
	5	700 / 800
	6	500 / 550
	7	500 / 550
	8	415* / 450
	9	415*

Model	Lines	Spacing
4500	5	900 / 1000
	6	550 / 800
	7	600 / 650
	8	500 / 550
	9	415* / 450 / 500
	10	415* / 430* / 450

Model	Lines	Spacing
5000	6	800* / 850 / 900 / 950
	7	700 / 750 / 800
	8	550**
	9	500 / 550 / 600
	10	415* / 450 / 550**
	11	415* / 450 / 500
	12	415* / 430* / 450*
	13	400*

Model	Lines	Spacing
5500	7	800* / 850 / 900
	9	600 / 650
	10	500 / 550
	11	500 / 550
	12	415* / 500
	13	415* / 430* / 450

Model	Lines	Spacing
6000	8	800 / 900
	9	790
	10	600*
	11	600
	12	500* / 550
	14	485
	15	415* / 430* / 450

Model	Lines	Spacing
7500	9	800 / 850 / 900
	10	750* / 800
	11	600* / 650 / 700
	12	600* / 650
	13	600
	14	500 / 550
	15	500*
	17	415* / 435* / 450

[*] SPACING MARKED WITH AN ASTERISK MIGHT HAVE AN ALTERATION UP TO 25MM AT ANY ROW.

[**] SPACING MARKED WITH AN ASTERISK MIGHT HAVE AN ALTERATION UP TO 30MM AT ANY ROW.

▪ Adjustments

• Line markers adjustment

The regulating of the line markers is important to obtain evenly spaced planting, making so that the edge line of the seeder is at the same spacing as the last planted line, facilitating future operations. To adjust the line markers, proceed as follows:

01 - First of all, you must know the line spacing, the number of lines to be used in the operation and the tractor's front gauge. Use the formula below, followed by an example.

EXAMPLE: For a planting with 15 rows in the seeder, spacing of 0.45 mts and the front gauge of the tractor with 1.43 mts, determine:

$$\text{Formula: } D = \frac{E \times (N+1) - B}{2}$$

$$\text{Resolve: } X = \frac{0.45 \times 16 - 1.43}{2}$$

$$D = 2.88 \text{ meter}$$

WHERE:

E = Line spacing (mts)

N = Number of seeder rows

B = Front gauge of tractor


D = Marker distance

02 - Set the 2.88 m line marker disc to the center of the first planting line.

03 - Line markers are alternating, one lowers after the other, so if during planting before the end of the line there is the need to stop work, engage the piston so that the sower goes up and down twice to continue working with the marker on the right side.



ATTENTION Avoid accidents caused by the intermittent action of line markers. When activating the seeder, check that there are no people under the line markers or in their area of action.

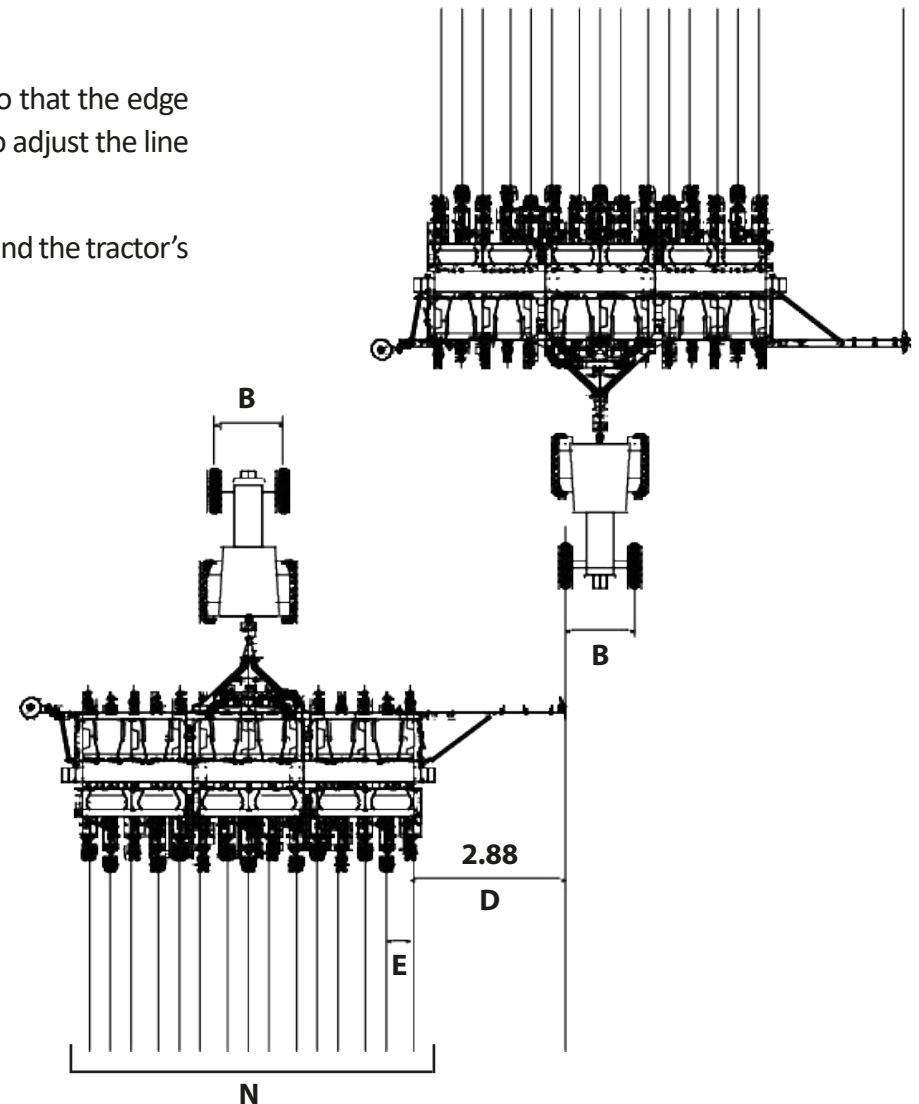


▪ Adjustments

• Adjustment of line marker discs

The discs 1 of the line markers 2 have angular adjustment to facilitate the demarcation work on the ground. To adjust the discs 1 of the line markers 2 proceed as follows:

- 01** - Loosen the nut (3), turn the disc (1) to the desired position.
- 02** - Then, retighten the nut (3) fixing the disc (1) in the desired position.

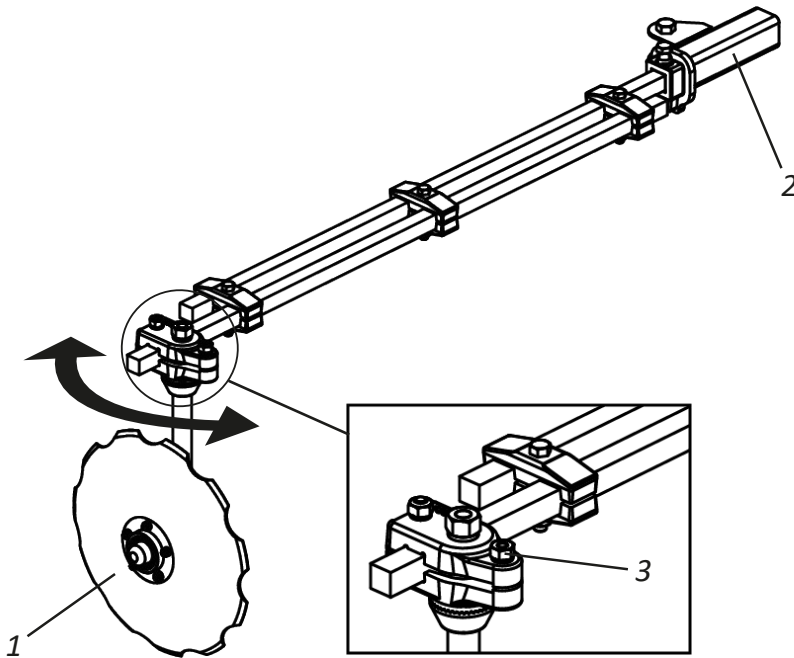


ATTENTION

Before making any adjustments to the row marker, make sure it is on the ground, the seeder is stopped and the tractor is off.

• Adjusting the line marker bar

The line markers 1 have distance regulation to be adjusted according to the number of lines, spacing and gauge of the tractor. To adjust the distance of the line markers 1 proceed as follows:

- 01** - Loosen the screw (2), move the bar (3) in the desired position.
- 02** - Then, retighten the screw (2) fixing the bar (3) in the desired position.

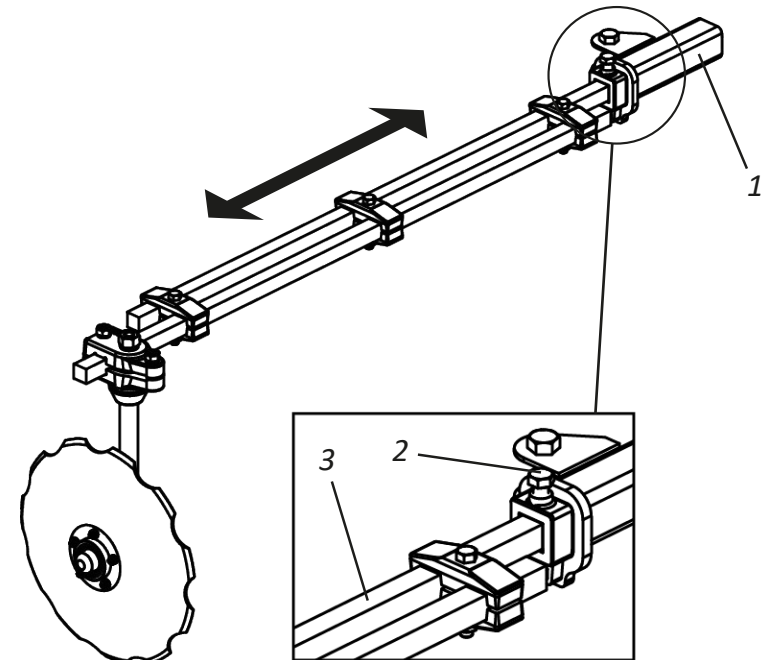

IMPORTANT

To find out the distance to be adjusted in the line marker, do the calculation according to the instructions on the previous page.


▪ Adjustments

• Ratchet adjustment

When placing the shims on the hydraulic cylinder to limit the depth of the discs according to the instructions on page 29, then adjust the ratchet (1) according to the need for work, thus ensuring the activation of the transmission system. To adjust the ratchet (1), proceed as follows:

01 - Loosen the nuts and counter nuts (2), adjust the rod (3) for the correct activation of the system ratchet disarm (1).

02 - Then, retighten the nuts and against nuts (2).

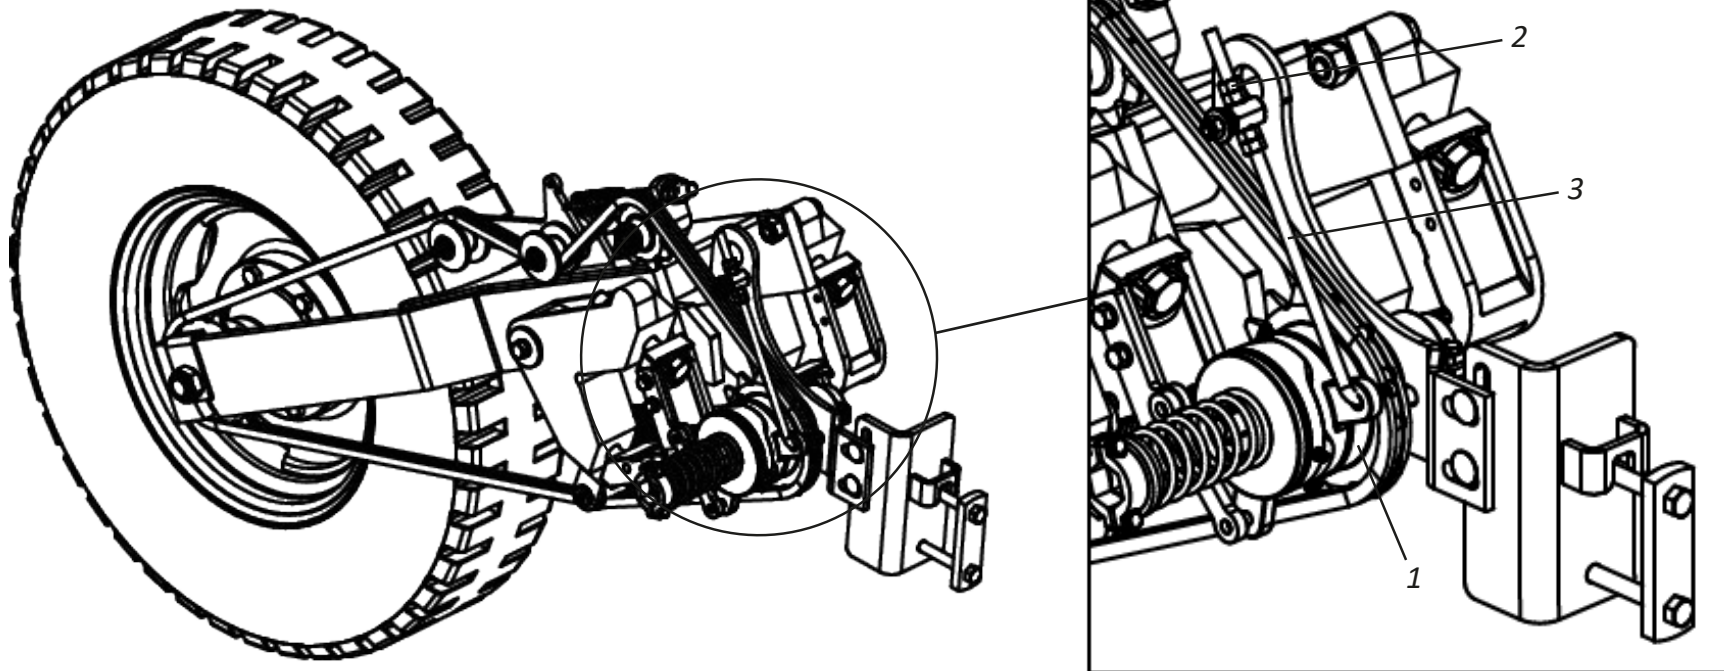

ATTENTION

Failure to observe this regulation may cause the ratchet to disarm.




IMPORTANT

When adjusting the ratchet, repeat this procedure on all ratchets on the seeder.

▪ Adjustments

• Vacuum Meter

A PPSOLO AIR 3rd SEED BOX - VSET has a vacuum gauge (1), used to measure the vacuum level in the lines. To check the generated vacuum level, proceed as instructed on page 77.

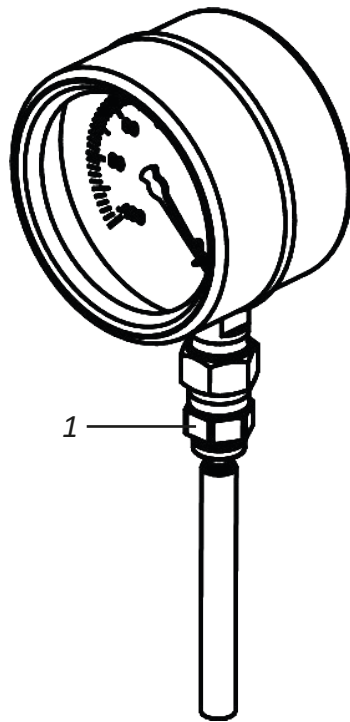




! IMPORTANT

Adjust the pressure according to each culture according to the Culture Guide on page 57.

• Turbine

The turbine (1) must generate a negative pressure (vacuum) determined, depending on the specific weight of the seed that will be used. Before starting work, make sure that the gate is fully open, if not, proceed as follows:

- 01 - Release the handle (2) by turning it counterclockwise.
- 02 - Then, completely move the plate (3) to open it.
- 03 - Then, tighten the knob (2) by turning it clockwise.

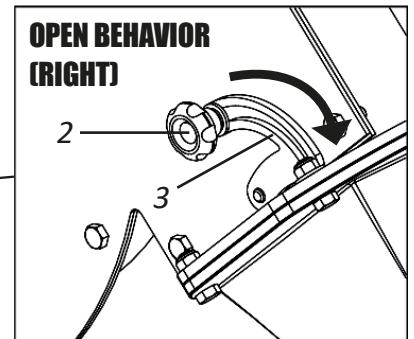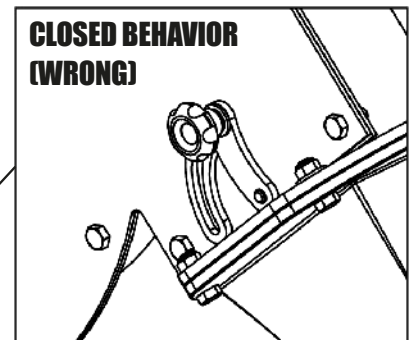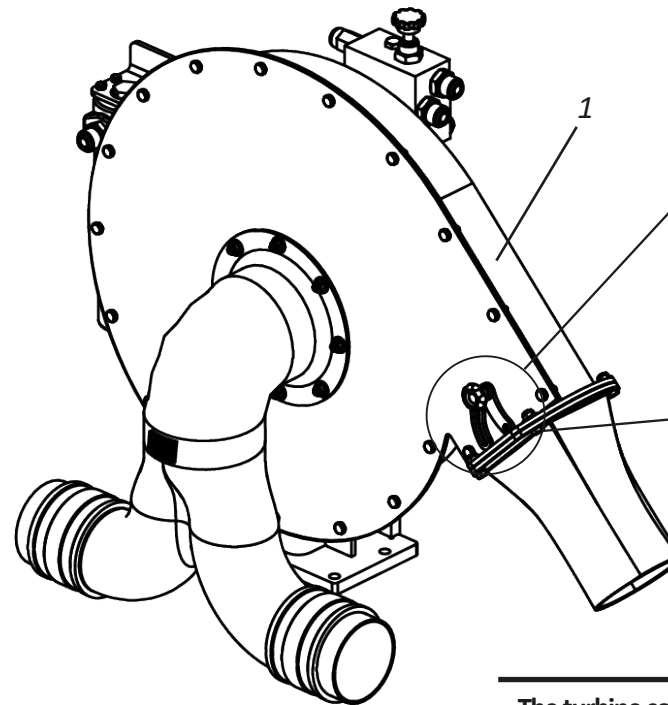

! ATTENTION


The turbine compartment (1) must always be fully open.
DO NOT work with the gate closed.

▪ Adjustments

• Regulation of the continuous flow system

PPSOLO AIR 3rd SEED BOX - VSET has a continuous flow system. In this system, when checking the seed drop from the disc when maneuvering the seeder, gradually open the flow regulating valve (1), for this, proceed as follows:

- 01** - Turn the handle (2) of the flow regulating valve (1) counterclockwise, until you see that the fact no longer occurs.
- 02** - At the end of the adjustment, lock the flow regulating valve (1) through the counter nut (3) contained in the handle (2), turning it clockwise with an appropriate tool so that eventually the system does not suffer from adjustment.

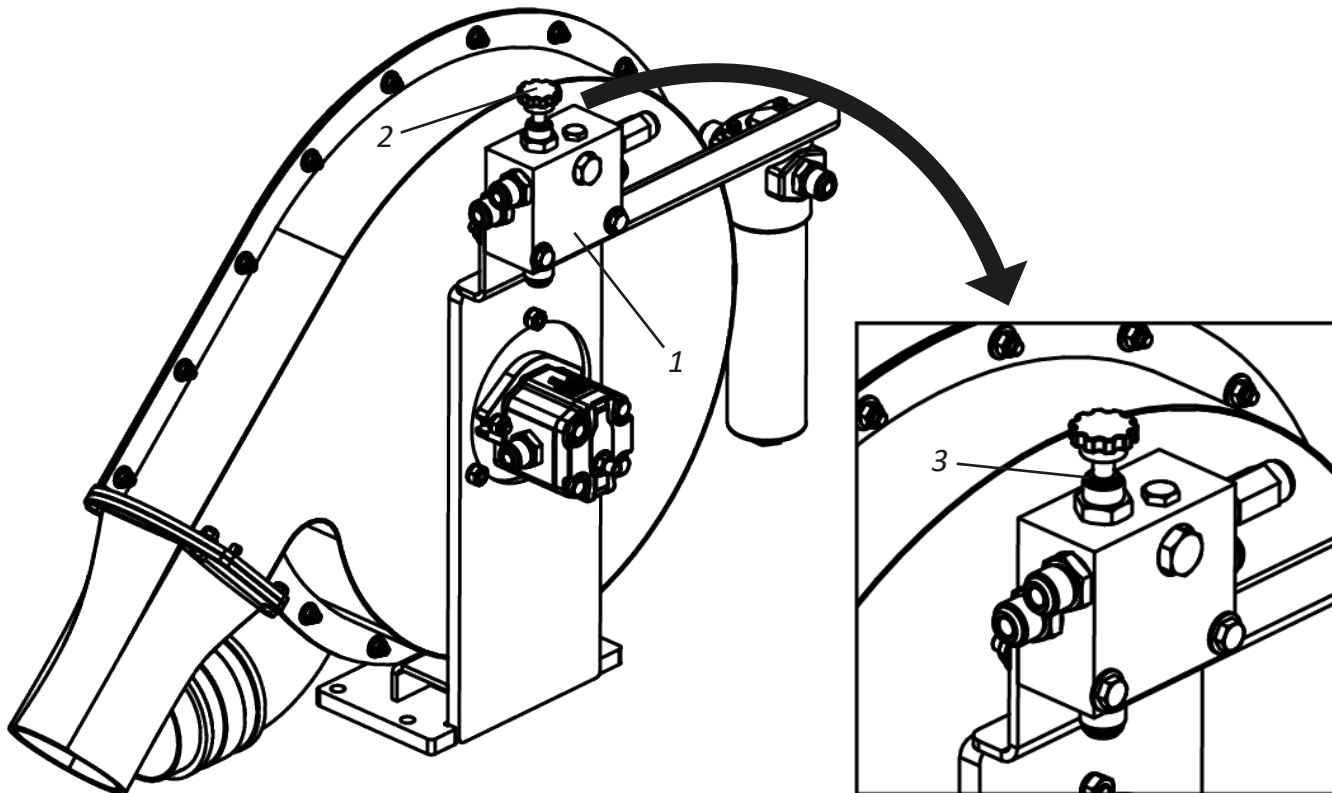


ATTENTION

Before starting work, check the flow regulation according to the type of seed used, through the flow valve (1).

▪ Systems


• Kits and discs for crops

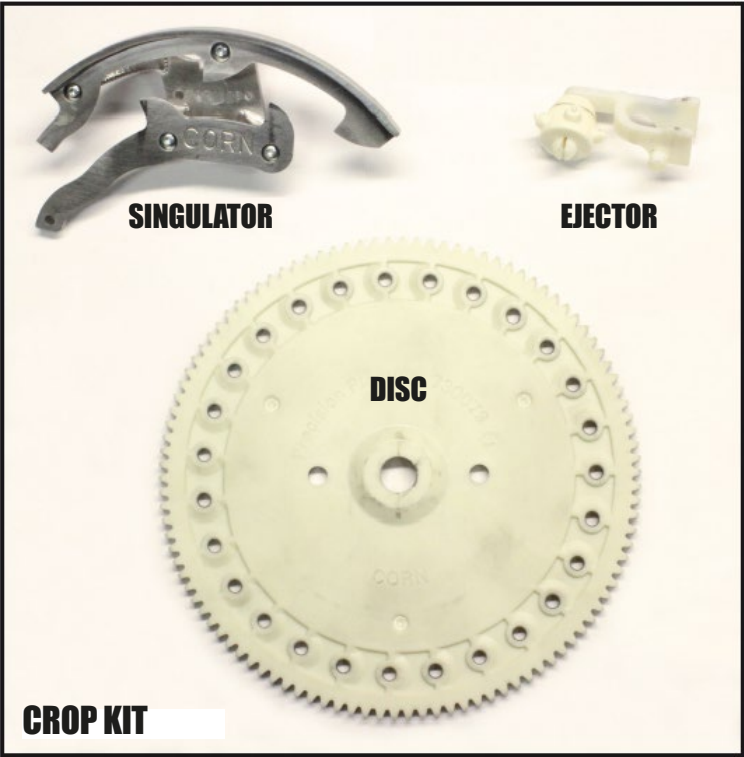

PPSOLO AIR 3rd SEED BOX - VSET leaves the factory with 2 crop kits: soybean kit (mounted on the sower) and the Corn kit (shipped in the package). Each kit has 3 components: Singulator, ejector and disc, as shown below.



KITS		
CROPS	CODES	DESCRIPTIONS
SOYBEAN	6020210296-7	KIT CROP SOYBEANS (768342)
CORN	6020210298-3	KIT CROP CORN (768341)

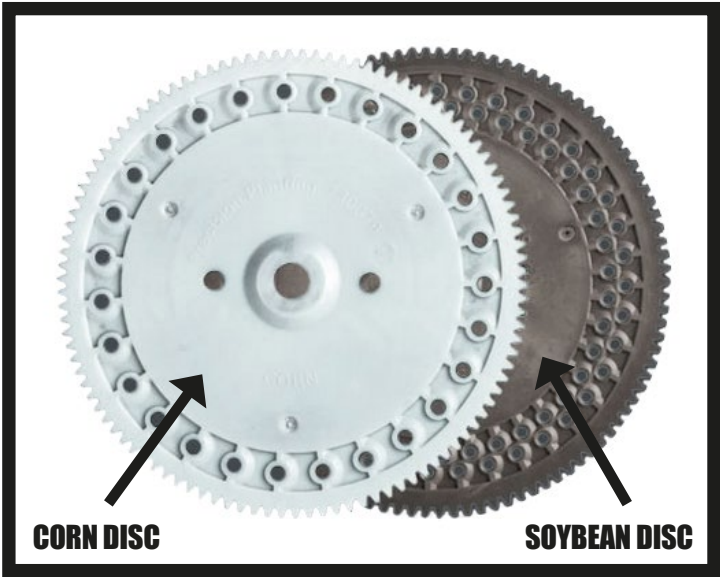In the kits that come with **PPSOLO AIR 3rd SEED BOX - VSET** are the soybean and corn distribution discs, as shown below.



-  **ATTENTION** | All 3 items in the kit will need to be changed every time you change the crop you are planting.
-  **IMPORTANT** | To understand supported crops, see the Crop Guide on page 57.

■ Systems

• Installation to distributor VSET 2 - Precision Planting

DISTRIBUIDOR VSET (FOR SEED TUBE)

Modes vSet 2 Base Meter (housing* + cover)

*vDrive installed



■ Systems


• Installation of kit for crop - Part I

Before you begin installing the kit in the distributor, identify the crop kit to be used.

STAGE 1

Open the manifold by releasing the retaining springs by pulling and separating the two halves and lifting the cover out of the integrated slot and latch restraint.

The distributor housing contains the disc the ejector wheel. The singulator is mounted on the mounted on the opposite half of the meter, also know as the seed containment cap.

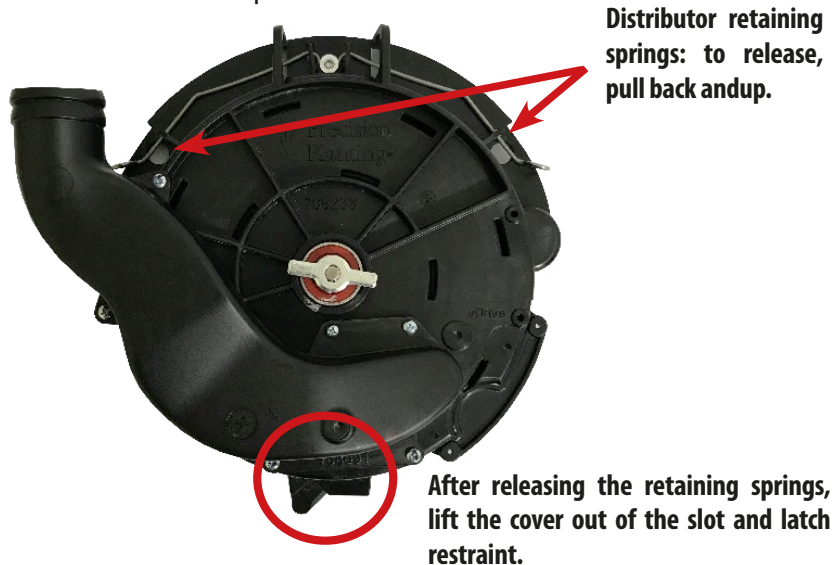

STAGE 2

The vSet 2 ejector should be placed first in the housing and behind the distributor seal.

To begin, seat the lower pin in the spring before placing the plastic in place. The images illustrate how the ejector is inserted into position.

To remove, simply apply pressure to the end of the holder that keeps it in place.



STAGE 3

Align the disc and slide the locking pin into place. The pin will have less resistance if inserted vertically. The distributor will have shims inserted in its center. The shim installation process it at the end of the manual.

When inserting the disc, be sure not to crush or curl the vacuum seal. If there are cracks or broken seams in the seal, replace it immediately.

To remove the locking pin, hold the disc in place and pull the locking pin with it vertically as shown in the image below. Do not lose the locking pin. Also, be sure to leave the shims under the disc in place during removal.




■ Systems

• Installation of kit for crop - Part II

STAGE 4

The final step in the crop kit installation is to connect the singulator to the distributor cap. First, insert the singulator base into the lower bracket and press against the upper bracket. Make sure the upper and lower sides of the singulator are level with the spring latches. Make sure that the singulator is fully seated to ensure proper dispenser connection when assembling the cover and housing. To remove the singulator, pull back the release latch and it will pop out.

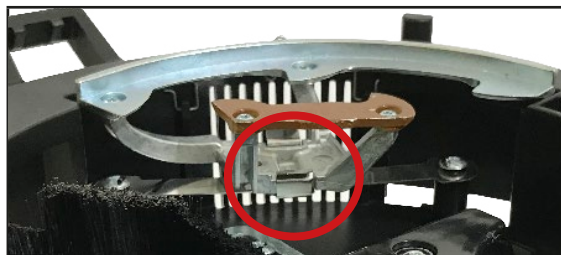

STAGE 5

In order to remove vSet 2 components for maintenance, remove parts as they were installed in Steps 1-4.

STAGE 6

When assembling the two halves of the dispenser, start by placing the housing slit in the seed cover latch to ensure proper alignment.



▪ Systems

• Installation of kit for crop - Part III

STAGE 7

The two halves of the distributor are correctly connected when the retention springs are fully engaged with the seed coar retention posts. Be sure to keep the singulator pressed against the cover so that it rests correctly on the seed disc.



STAGE 8


The position of the deflector may need to be adjusted depending on the crop to be planted. See the Crop guide for vSet 2 for baffle adjustment for multiple crops. As a general rule, set the deflector plate to the lowest possible position, but ensuring that the seeds always flow and do not obstruct the distributor inlet chute.

▪ Systems


• Seed container set - Part I

STAGE 1

After properly installing the distributor crop kits, you must connect it to the seed container. Align the vSet2 hooks using an angle to connect the distributor hook interface to the seed container. This will ensure proper connection. If these locks do not lock, the distributor will not attach properly to the seed container.

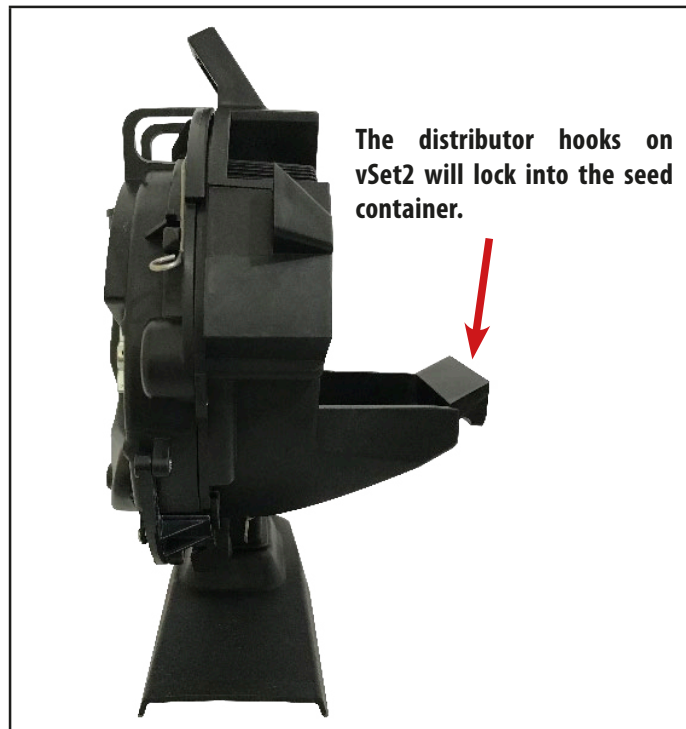

The images below illustrate the incorrect (red circle) and correct (green circle) locking of the vSet 2 distributor in the seed container.

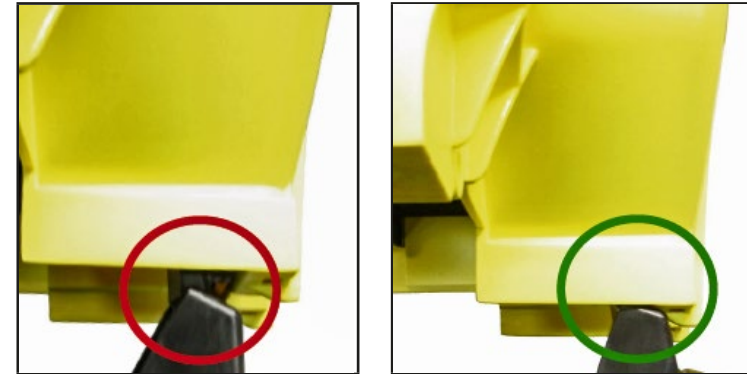

STAGE 2

Rotate the distributor toward the seed container lock.



▪ Systems

• Seed container set - Part II

STAGE 3

Lock the distributor in the seed container. Apply enough force to bend the lock until the upper bracket snaps into place. Note the final position below. To remove the distributor, use the vSet 2 distributor housing bracket as a lever to pull the distributor while bending the seed container lock in one fluid motion.



STAGE 4

To release the distributor, press the lock and pull it away from the seed container. Then rotate until the seed inlet hooks are free to slide out of the seed container latches.



▪ Systems

• Maintenance

ANNUAL MAINTENANCE

1. Check for wear on the singulator.
 - Replace when excessive wear occurs. An increase in doubles may indicate excessive wear on this part.
 - A singular check can be done using the eSet kit tool.
2. Check the vacuum seal for cracks/wear.
3. Verify that the disc's graphite has been removed. (Reapply graphite if it is removed).
 - Replace the disc if the disc holes become too deformed or if seeds cross to the vacuum side.
4. Check for ejector wheel wear.
 - Replace the assembly if excessive arm wear occurs inside the ejector wheel.
 - Inspect each ejector wheel pin to make sure it is intact.
 - Check the plastic tension and replace it if it is loose at the mounting location.
5. Check for excessive wear on the brushes.
 - Replace when brush clearance/wear becomes significant enough to allow seeds to pass through
6. Test the distributors on the MeterMax Ultra test bench to ensure maximum performance.
7. When out of the planting season, disassemble the distributors.
 - Remove the crop kit components from the distributor housing.
 - Store in a flat and dry environment.

8. vSet 2 vacuum seal replacement.
 - Remove the current seal by pulling it out of the meter housing.
 - Check that both the new seal and the socket in the meter housing are clean of debris. If they need cleaning, use hot water and a cloth or compressed air.
 - Insert a new seal at the beginnin latches on the distributor cavity surface are showing. Make sure the seal is firmly seated an there are no bumps or protrusions.
 - All retaining latches must be used and the seal must be seated in the cavity. Alignment of the retaining latches will help ensure proper sealing.



▪ Systems

• Troubleshooting - Part I

TROUBLESHOOTING TIP

A good way to troubleshoot specific lines is through the elimination process. Try replacing the components of the “bad” lines with the components of the “good” lines until you determine the root cause.

Symptom: the meter for sowing.

Solution:


- If a meter stops sowing while others continue and this is not due to a section cut event, then it is likely that the line has run out of seed, the clutch has failed or the vacuum has been disconnected.

- If none of this explains the problem, check the drive system. One component to look at is the safety pin that connects the drive adapter to the drive shaft. Its is simply a 2,3 x 15,8mm (3/32 x 5/8 in), cylindrical pin designed to break under torque greater than allowed. Replace the pin by inserting the new one, wich will simultaneously push the old one out. Also, lock insid the distributor to investigate the cause of the disruption. The likelihood of something being locked inside the meter is high, as the safety pin is designed to break in this situation.

- Seed blockage is another possible cause of distributor failure when planting. If you detect obstruction, consider opening the deflector to a higher position.

- If there are no foreign objects in the dispenser, look for evidence of seed grinding. If this seems to be the case, the disc may not be properly shimmed. Disc shims are factory set, but they may fall. At the bottom end of the meter housing is an alignment gauge for the disc. The arrow points


to the gauge. The process of installing the disc shims is different from that used on the vSet Classic meter largely due to the overall meter design. You should receive your vSet 2 meters with a properly fitted meter disc.

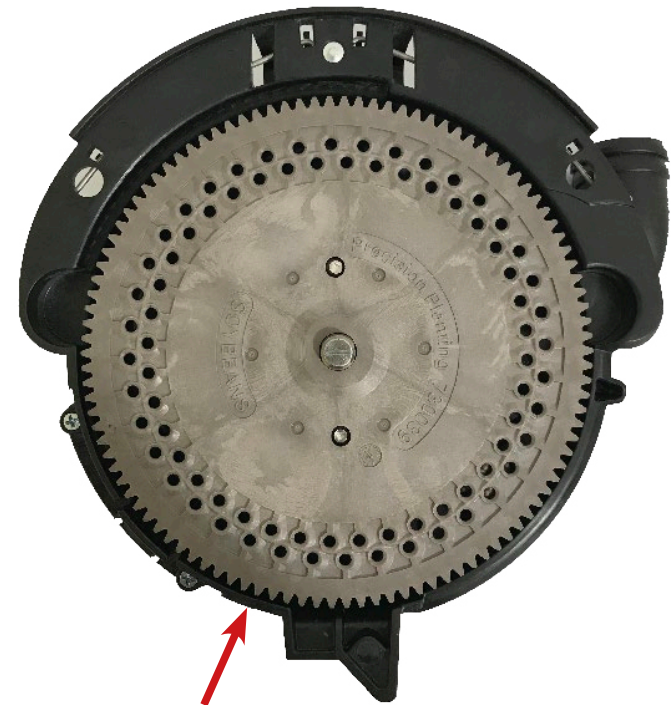

▪ Systems

• Troubleshooting - Part II

- The disc must be wedged between each housing plan. Visualize the surface of the disc relative to the shoulder. The disc surface should be between the first and the second shoulder, as shown by the arrows below.

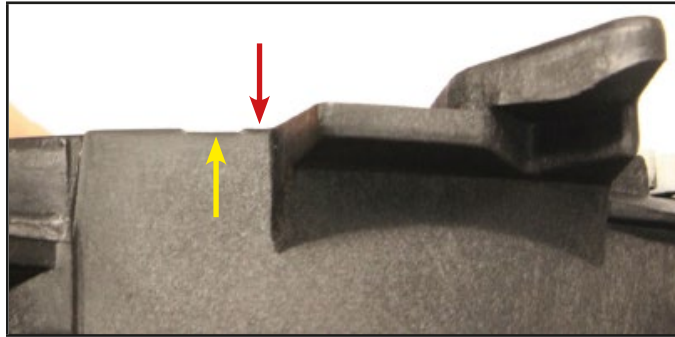

- To check, keep disc level against the central unit board. The number of shims required is determined by adding or removing shims from the disc between the lower and upper planes. The meter disc must be checked in at least two positions to determine the final shim count. Turn 180° to check.



Symptom: too many flaws.

Solution:

- Verify that the correct singulator, disc, and ejector wheel are installed on the meter. Do not exchange components with each other as this will result in performance degradation.
- If the distributor is constantly failing, make sure that there are no fragments lodged in the disc holes.
- When mounting the distributor, make sure the singulator is properly installed and the shoulders are seated and level against the surface of the disc.
- Check the manifold and seed tube outlet chute on the line unit for debris that could divert seeds.
- Check that the disc has proper shims as shown above. The disc may have difficulty loading if the wrong number of shims is used.
- Increase the vacuum. Check for leaks in the vacuum system that could cause certain lines to have less vacuum. However, if singulation problems are the result of lack of vacuum pressure, singulation errors will generally occur throughout the planter.

▪ Systems

• Troubleshooting - Part III

Symptom: Excess Doubles.

Solution:

- Verify that the correct singulator, disc, and ejector wheel are installed on the meter. Do not exchange components amongst themselves as this will result in performance degradation.
- When mounting the distributor, make sure the singulator is properly installed and the shoulders are seated and level against the surface of the disc. Make sure that the radial spring (which pushes the singulator toward the center of the disc) is installed and acting on the singulator.
- Check the manifold and seed tube outlet chute on the line unit for debris that could divert seeds.
- Check for excessive wear on the singulator.
- Reduce the vacuum. In general, 20 in. of water are suitable for all types of seeds, but reduce if necessary. Continue to reduce vacuum pressure until gauge separation improves. If doubles are caused by excessive vacuum pressure, singulation errors will generally occur throughout the planter.

Symptom: Bad Spacing.

Solution:

- Check the meter and seed tube outlet chute on the line unit for debris that could divert seeds.
- Check distributor drive system. Confirm that the chains are in good condition and well lubricated.
- Try rotating the meter manually. Look, feel and listen for unusual sounds as it spins. If it is difficult to rotate, remove the disc and look for debris that may

be stuck in the distributor, ensuring that it has proper shims as shown above.

- When using vDrive, check for seed fragments between the disc teeth. Clean and add shims.
- Look for evidence of where the seed is making contact with the seed tube and outlet chute. Make sure that seed container is positioned so that the meter releases the seeds in the center of the seed tube.
- Check that the distributor is properly aligned.
- Make sure your air vents are allowing free air flow through the meter. The vent is integrated into the mini-hopper housing.
- Reduce speed to see if poor spacing is caused by drive system operation.
- Make sure graphite is being used and mixed in the seed box.

Symptom: Incorrect Population.

Solution:

- If you are using hydraulic motors, vDrive or SpeedTube, double-check the engine calibration and configuration. Verify that the “seeds per distributor rotation” setting is correct..

■ Systems

• VSET 2 Crop guide



Graphite should be used in good proportion.
The color in the table corresponds to the actual colors of the parts. BOLD components already included in the KIT.

*WaveVision reads seeds at least 3mm in size.
** Millet screens are used in planter with center box.


PLANTING																	Soybeans	Peanut						Sugarbeets/Onion		Canola	
Crop	Corn	Sweet Corn				Popcorn			Sorghum/ Millet	Pumpkin	Cotton			Bean				Sunflowers									
Size (Qualitative)		Small	Average	Large	X-Large	Small	Average	Large	26k-42k	Del. Monte/ Libby	Singled	2 seeds at a time	3 seeds at a time	Small	Average	Large		Large Edible	Small Edible	#1	#2	#3	#4	Small	Large		
Size (Seeds/KG)	2200 6200	4400 10200				3300 10650			26k-42k		5300 14000			>400	2660 4400	2660	4400 10000	4400 8800		6,6k 10k					>62k	>62k	166k 400k
Millibar Vacuum	50	45 to 55				50			25 to 40	27 to 30	50			45 to 55	45 to 60	45 to 65	50	30 to 33	27 to 30				17 to 20	15 to 17	25 to 50		-
Vacuum (in. water)	20"	18"-22"	18"-22"	18"-22"	18"-22"	20"	20"	20"	10"-16"	11"-12"	20"	20"	20"	16"-22"	16"-24"	16"-26"	20"	12"-13"	11"-12"	11"-12"	11"-12"	7"-8"	6"-7"	10"-20"	10"-20"		
Input adjust pos.	2	4	4	4	4	2	2	2	1	3	2	1	1	2	3	4	2	4	4	4	4	3	2	1	1		
PN Complete Kit	/68341								/68341			/68344	/68345	/68342	/68349	/68343	/68342	/68341	/68341						/68346	/68347	/68348
Disc	Name	Corn	Special	Special	Special	Special	Special	Special	Special	Large Sugarbeet	Special	Special	2-Seed Hilldrop Cotton	3-Seed Hilldrop Cotton	Soybean	Edible Beans Med	Edible Beans Larg	Soybean	Corn	Corn	Special	Special	Special	Special	Small Sugarbeet	Large Sugarbeet	Canola
	# of holes	27	27	27	27	27	27	27	32	27	27	40	39	80	70	32	60	27	27	27	27	27	27	32	32	80	
	row	single	single	single	single	single	single	single	single	single	single	single	double	triple	double	double	single	double	single	single	single	single	single	single	single	single	double
	hole size (in.)	0,176	0,125	0,135	0,145	0,155	0,175	0,175	0,125	0,086	0,125	0,115	0,175	0,115	0,155	0,170	0,210	0,155	0,176	0,176	0,155	0,135	0,175	0,115	0,062	0,086	0,047
	hole size (mm)	4,470	3,175	3,429	3,683	3,937	2,921	2,921	3,175	2,184	3,175	2,921	2,921	2,921	3,937	4,318	5,334	3,937	4,470	4,470	3,937	3,429	2,921	2,921	1,575	2,184	1,194
	PN	730079	730082	730083	730084	730085	730081	730081	730082	730291	730082	730081	730292	730293	730039	730295	730294	730039	730079	730079	730085	730083	730081	730081	730290	730291	768338
Singulator	Name	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Soybean	Soybean	Soybean	L. Edible	Soybean	Soybean	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn	Corn
	PN	768155	768155	768155	768155	768155	768155	768155	768155	768155	768155	768155	768360	768360	768360	768150	768360	768360	768355	768355	768155	768155	768155	768155	768155	768155	768355
Ejector Wheel	Name	Corn	Special	Special	Special	Special	Special	Special	Special	Sugarbeet	Special	Special	2-Seed Hilldrop Cotton	3-Seed Hilldrop Cotton	Soybean	Soybean	L. Edible	Soybean	Corn	Corn	Special	Special	Special	Special	Sugarbeet	Sugarbeet	N/A
	PN	/68291	768293	768293	768293	768293	768293	768293	768293	/68295	768293	768293	/68296	/68297	/68292	/68292	/68294	/68292	/68291	/68291	768293	768293	768293	768293	/68295	/68295	N/A
Additional components	Description									Millet screen**			Brush raised	Brush raised		Brush raised	Brush raised			Use L- brush					Millet screen**	Millet screen**	KIT Cleaner
	PN									720253**			760379	760379		766428	766428								720253**	720253**	760335
WaveVision Recommended?		Yes								Yes*			Yes	Yes	Yes	Yes	Yes	Yes	Yes						Without mon. Population	Yes*	Without mon. Population

▪ Seed dispesing system

• Speed Box

PPSOLO AIR 3rd SEED BOX - VSET is equipped with the Speed Box system (1), which activates the dispensing system with simple adjustments, guaranteeing the exchange of fast rotations. To adjust the seeds, proceed as follows:


01 - Select the desired quantity in the tables and check the corresponding combination on the levers (2). **EXAMPLE:** Position **F2** in the table, indicates that the lever with letters must be in the **"F"** position and the lever with numbers must be in the **"2"** position.

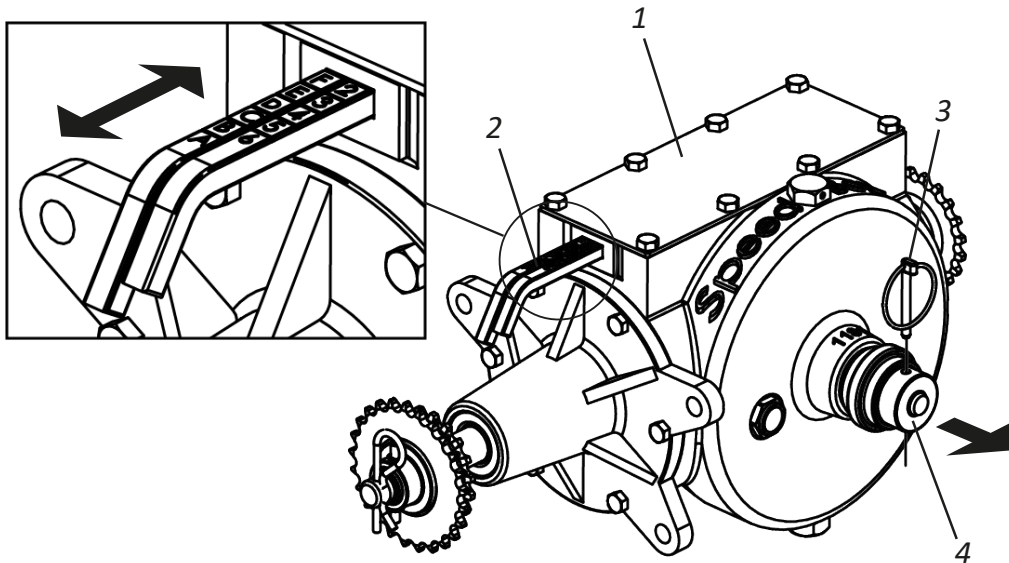

02 - To move the levers, remove the lock (3), pull the handle (4), then adjust the levers according to the example above. When combining is complete, return the handle (4) and replace the lock (3).

• Regulation for seed dispensing

Seed adjustment is done through the Speed Box (1). To obtain more adjustments, reverse the current in the **"A"** and moved **"B"** drive gears. After changing the gears, check the chain tension (2).

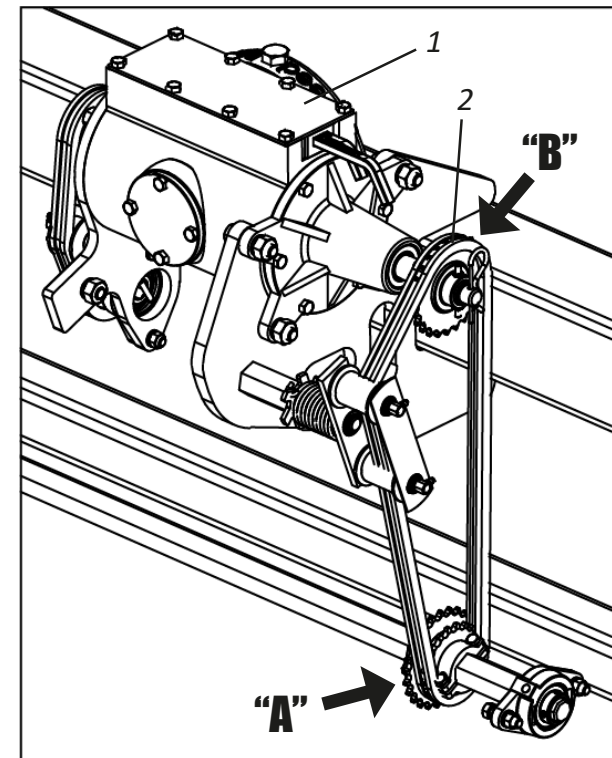

! ATTENTION

When checking the chain tension (2) if more pressure is needed on the tensioner, proceed according to the instructions on page 86.

SEED Dispensing Table by linear meter - PPSOLO AIR 3rd SEED BOX - VSET

Ratchet hex shaft gear				20	Speed Box inlet gear						25
Speed Box Combination	Number of holes in the Seed Dispenser Disc										
	20	27	30	32	40	50	56	70	80	100	120
F - 1	2,0	2,7	3,0	3,2	3,9	4,9	5,5	6,9	7,9	9,9	11,8
F - 2	2,2	3,0	3,3	3,6	4,4	5,5	6,2	7,8	8,9	11,1	13,3
E - 1	2,5	3,3	3,7	3,9	4,9	6,2	6,9	8,6	9,9	12,3	14,8
F - 3	2,5	3,4	3,8	4,1	5,1	6,3	7,1	8,9	10,1	12,7	15,2
E - 2	2,8	3,7	4,2	4,4	5,5	6,9	7,8	9,7	11,1	13,9	16,6
D - 1	3,0	4,0	4,4	4,7	5,9	7,4	8,3	10,4	11,8	14,8	17,8
F - 4	3,0	4,0	4,4	4,7	5,9	7,4	8,3	10,4	11,8	14,8	17,8
E - 3	3,2	4,3	4,8	5,1	6,3	7,9	8,9	11,1	12,7	15,9	19,0
D - 2	3,3	4,5	5,0	5,3	6,7	8,3	9,3	11,7	13,3	16,6	20,0
C - 1	3,5	4,7	5,2	5,5	6,9	8,6	9,7	12,1	13,8	17,3	20,7
F - 5	3,6	4,8	5,3	5,7	7,1	8,9	9,9	12,4	14,2	17,8	21,3
E - 4	3,7	5,0	5,5	5,9	7,4	9,2	10,4	12,9	14,8	18,5	22,2
D - 3	3,8	5,1	5,7	6,1	7,6	9,5	10,7	13,3	15,2	19,0	22,8
C - 2	3,9	5,2	5,8	6,2	7,8	9,7	10,9	13,6	15,5	19,4	23,3
B - 1	3,9	5,3	5,9	6,3	7,9	9,9	11,0	13,8	15,8	19,7	23,7
A - 1	4,4	6,0	6,7	7,1	8,9	11,1	12,4	15,5	17,8	22,2	26,6
A - 2	5,0	6,7	7,5	8,0	10,0	12,5	14,0	17,5	20,0	25,0	30,0
B - 3	5,1	6,8	7,6	8,1	10,1	12,7	14,2	17,8	20,3	25,4	30,4
C - 4	5,2	7,0	7,8	8,3	10,4	12,9	14,5	18,1	20,7	25,9	31,1
D - 5	5,3	7,2	8,0	8,5	10,7	13,3	14,9	18,6	21,3	26,6	32,0
E - 6	5,5	7,5	8,3	8,9	11,1	13,9	15,5	19,4	22,2	27,7	33,3
A - 3	5,7	7,7	8,6	9,1	11,4	14,3	16,0	20,0	22,8	28,5	34,2
B - 4	5,9	8,0	8,9	9,5	11,8	14,8	16,6	20,7	23,7	29,6	35,5
C - 5	6,2	8,4	9,3	9,9	12,4	15,5	17,4	21,7	24,9	31,1	37,3
D - 6	6,7	9,0	10,0	10,7	13,3	16,6	18,6	23,3	26,6	33,3	39,9
A - 4	6,7	9,0	10,0	10,7	13,3	16,6	18,6	23,3	26,6	33,3	39,9
B - 5	7,1	9,6	10,7	11,4	14,2	17,8	19,9	24,9	28,4	35,5	42,6
C - 6	7,8	10,5	11,7	12,4	15,5	19,4	21,7	27,2	31,1	38,8	46,6
A - 5	8,0	10,8	12,0	12,8	16,0	20,0	22,4	28,0	32,0	39,9	47,9
B - 6	8,9	12,0	13,3	14,2	17,8	22,2	24,9	31,1	35,5	44,4	53,3
A - 6	10,0	13,5	15,0	16,0	20,0	25,0	28,0	35,0	39,9	49,9	59,9


SEED Dispensing Table by linear meter - PPSOLO AIR 3rd SEED BOX - VSET

Ratchet hex shaft gear				25	Speed Box Inlet Gear						20
Speed Box combination	Number of Holes in the Seed Dispenser Disc										
	20	27	30	32	40	50	56	70	80	100	120
F - 1	3,1	4,2	4,6	4,9	6,2	7,7	8,6	10,8	12,3	15,4	18,5
F - 2	3,5	4,7	5,2	5,5	6,9	8,7	9,7	12,1	13,9	17,3	20,8
E - 1	3,9	5,2	5,8	6,2	7,7	9,6	10,8	13,5	15,4	19,3	23,1
F - 3	4,0	5,3	5,9	6,3	7,9	9,9	11,1	13,9	15,9	19,8	23,8
E - 2	4,3	5,9	6,5	6,9	8,7	10,8	12,1	15,2	17,3	21,7	26,0
D - 1	4,6	6,2	6,9	7,4	9,2	11,6	12,9	16,2	18,5	23,1	27,7
F - 4	4,6	6,2	6,9	7,4	9,2	11,6	12,9	16,2	18,5	23,1	27,7
E - 3	5,0	6,7	7,4	7,9	9,9	12,4	13,9	17,3	19,8	24,8	29,7
D - 2	5,2	7,0	7,8	8,3	10,4	13,0	14,6	18,2	20,8	26,0	31,2
C - 1	5,4	7,3	8,1	8,6	10,8	13,5	15,1	18,9	21,6	27,0	32,4
F - 5	5,5	7,5	8,3	8,9	11,1	13,9	15,5	19,4	22,2	27,7	33,3
E - 4	5,8	7,8	8,7	9,2	11,6	14,4	16,2	20,2	23,1	28,9	34,7
D - 3	5,9	8,0	8,9	9,5	11,9	14,9	16,6	20,8	23,8	29,7	35,7
C - 2	6,1	8,2	9,1	9,7	12,1	15,2	17,0	21,2	24,3	30,3	36,4
B - 1	6,2	8,3	9,2	9,9	12,3	15,4	17,3	21,6	24,7	30,8	37,0
A - 1	6,9	9,4	10,4	11,1	13,9	17,3	19,4	24,3	27,7	34,7	41,6
A - 2	7,8	10,5	11,7	12,5	15,6	19,5	21,8	27,3	31,2	39,0	46,8
B - 3	7,9	10,7	11,9	12,7	15,9	19,8	22,2	27,7	31,7	39,6	47,6
C - 4	8,1	10,9	12,1	12,9	16,2	20,2	22,7	28,3	32,4	40,5	48,5
D - 5	8,3	11,2	12,5	13,3	16,6	20,8	23,3	29,1	33,3	41,6	49,9
E - 6	8,7	11,7	13,0	13,9	17,3	21,7	24,3	30,3	34,7	43,3	52,0
A - 3	8,9	12,0	13,4	14,3	17,8	22,3	25,0	31,2	35,7	44,6	53,5
B - 4	9,2	12,5	13,9	14,8	18,5	23,1	25,9	32,4	37,0	46,2	55,5
C - 5	9,7	13,1	14,6	15,5	19,4	24,3	27,2	34,0	38,8	48,5	58,3
D - 6	10,4	14,0	15,6	16,6	20,8	26,0	29,1	36,4	41,6	52,0	62,4
A - 4	10,4	14,0	15,6	16,6	20,8	26,0	29,1	36,4	41,6	52,0	62,4
B - 5	11,1	15,0	16,6	17,8	22,2	27,7	31,1	38,8	44,4	55,5	66,6
C - 6	12,1	16,4	18,2	19,4	24,3	30,3	34,0	42,5	48,5	60,7	72,8
A - 5	12,5	16,9	18,7	20,0	25,0	31,2	35,0	43,7	49,9	62,4	74,9
B - 6	13,9	18,7	20,8	22,2	27,7	34,7	38,8	48,5	55,5	69,3	83,2
A - 6	15,6	21,1	23,4	25,0	31,2	39,0	43,7	54,6	62,4	78,0	93,6

▪ Fertilizer dispensing system



• Fertisystem fertilizer conductor

To carry the fertilizer from the dispenser to the ground, fit the spouts in degree (1) to the fertisystem conductor outlets (2) through the clips (3). Then place the hoses (4) on the nozzles in degree (1) through the lock spring (5).

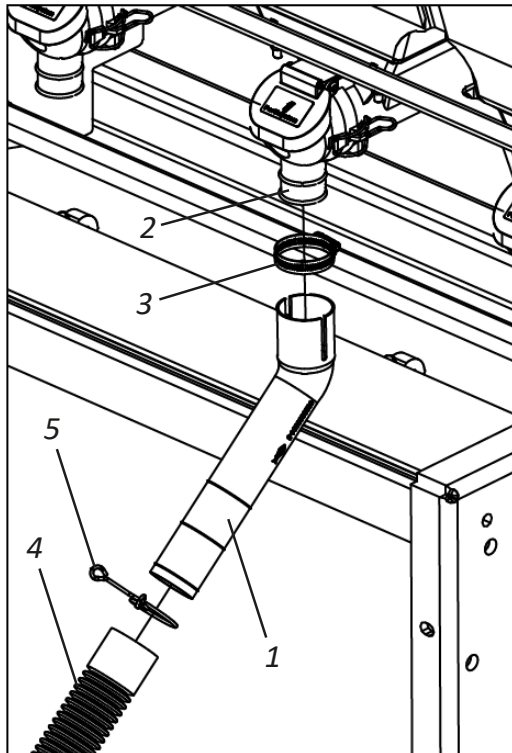

The Fertisystem system has safety outputs that guarantee the proper functioning of the system without damaging it. In case of clogging of the hose and the batcher, clean the batcher until the end of the hose near the furrower rod

or double disc, as the system may become clogged by roots, pieces of plastic and other objects.

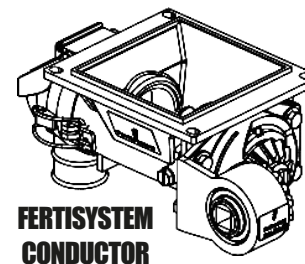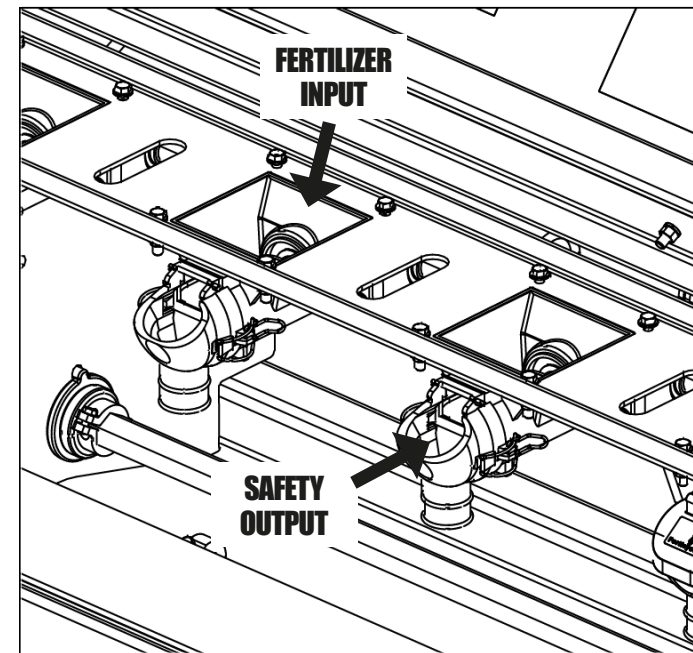

ATTENTION


Check dispensers and hoses daily and clean their outlets. When the fertilizer has impurities or is damp, clean it more often.

▪ Fertilizer dispensing system

• Speed Box

The PPSOLO AIR 3rd SEED BOX - VSET is equipped with the Speed Box system (1), which activates the dispensing system with simple adjustments, guaranteeing the exchange of fast rotations. To adjust the fertilizer, proceed as follows:


01 - Select the desired quantity in the tables and check the corresponding combination on the levers (2). **EXAMPLE:** Position **F2** in the table, indicates that the lever with letters must be in the “F” position and the lever with numbers must be in the “2” position.

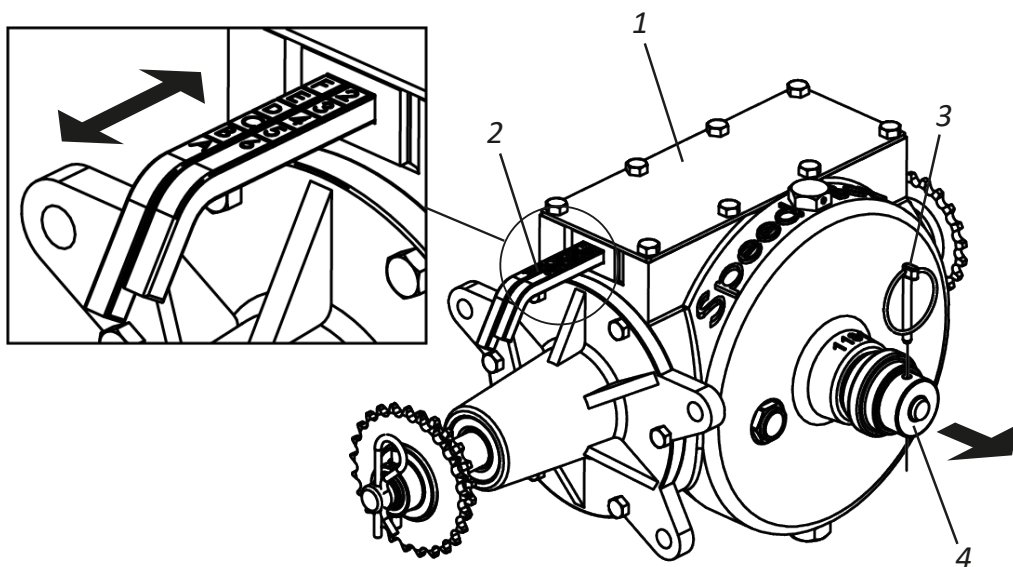

02 - To move the levers, remove the lock (3), pull the handle (4), then adjust the levers according to the example above. When combining is complete, return the handle (4) and replace the lock (3).

• Regulation for fertilizer dispensing

The fertilizer adjustment is done through the Speed Box (1). To obtain more adjustments, reverse the current in the “A” and moved “B” drive gears. After changing the gears, check the chain tension (2).

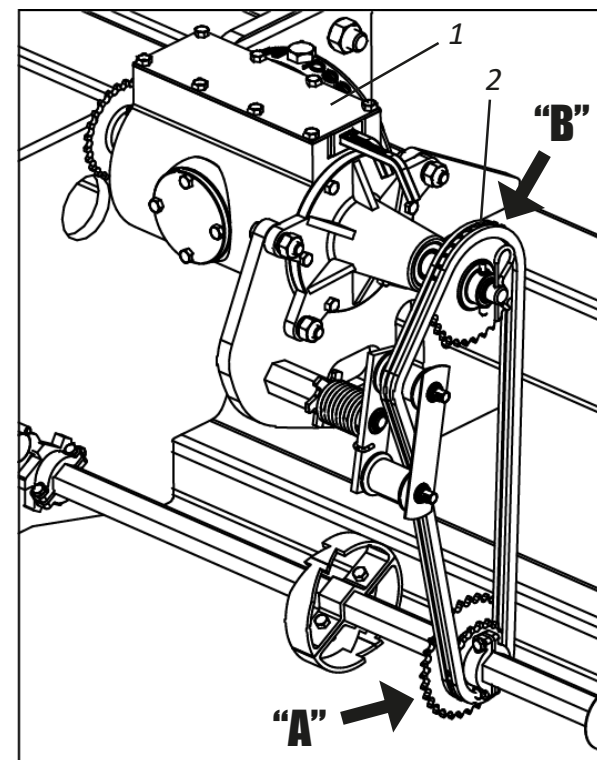

⚠ ATTENTION

When checking the chain tension (2) if more pressure is needed on the tensioner, proceed according to the instructions on page 86.

FERTILIZER Dispensing Table by linear meter - PPSOLO AIR 3rd SEED BOX - VSET

Ratchet hex shaft gear						20	Speed Box Inlet Gear								31
Speed Box combination	Grams 50 m	415	430	450	500	550	600	650	700	750	800	850	900	950	1000
F - 1	313	151	146	139	125	114	104	96	89	83	78	74	70	66	63
F - 2	352	170	164	157	141	128	117	108	101	94	88	83	78	74	70
E - 1	391	189	182	174	157	142	130	120	112	104	98	92	87	82	78
F - 3	402	194	187	179	161	146	134	124	115	107	101	95	89	85	80
E - 2	440	212	205	196	176	160	147	135	126	117	110	104	98	93	88
D - 1	470	226	218	209	188	171	157	144	134	125	117	110	104	99	94
F - 4	470	226	218	209	188	171	157	144	134	125	117	110	104	99	94
E - 3	503	242	234	224	201	183	168	155	144	134	126	118	112	106	101
D - 2	528	255	246	235	211	192	176	163	151	141	132	124	117	111	106
C - 1	548	264	255	243	219	199	183	169	157	146	137	129	122	115	110
F - 5	563	272	262	250	225	205	188	173	161	150	141	133	125	119	113
E - 4	587	283	273	261	235	213	196	181	168	157	147	138	130	124	117
D - 3	604	291	281	268	241	220	201	186	172	161	151	142	134	127	121
C - 2	616	297	287	274	247	224	205	190	176	164	154	145	137	130	123
B - 1	626	302	291	278	250	228	209	193	179	167	157	147	139	132	125
A - 1	704	339	328	313	282	256	235	217	201	188	176	166	157	148	141
A - 2	792	382	369	352	317	288	264	244	226	211	198	186	176	167	158
B - 3	805	388	374	358	322	293	268	248	230	215	201	189	179	169	161
C - 4	822	396	382	365	329	299	274	253	235	219	205	193	183	173	164
D - 5	845	407	393	376	338	307	282	260	241	225	211	199	188	178	169
E - 6	880	424	409	391	352	320	293	271	252	235	220	207	196	185	176
A - 3	906	436	421	402	362	329	302	279	259	241	226	213	201	191	181
B - 4	939	453	437	417	376	341	313	289	268	250	235	221	209	198	188
C - 5	986	475	459	438	394	359	329	303	282	263	247	232	219	208	197
D - 6	1056	509	491	470	423	384	352	325	302	282	264	249	235	222	211
A - 4	1056	509	491	470	423	384	352	325	302	282	264	249	235	222	211
B - 5	1127	543	524	501	451	410	376	347	322	301	282	265	250	237	225
C - 6	1233	594	573	548	493	448	411	379	352	329	308	290	274	259	247
A - 5	1268	611	590	563	507	461	423	390	362	338	317	298	282	267	254
B - 6	1409	679	655	626	563	512	470	433	402	376	352	331	313	297	282
A - 6	1585	764	737	704	634	576	528	488	453	423	396	373	352	334	317

FERTILIZER Dispensing Table by linear meter - PPSOLO AIR 3rd SEED BOX - VSET

Ratchet hex shaft gear						31	Speed Box Inlet Gear								20
Speed Box Combination	Grams 50 m	415	430	450	500	550	600	650	700	750	800	850	900	950	1000
F - 1	752	362	350	334	301	273	251	231	215	201	188	177	167	158	150
F - 2	846	408	394	376	338	308	282	260	242	226	212	199	188	178	169
E - 1	940	453	437	418	376	342	313	289	269	251	235	221	209	198	188
F - 3	967	466	450	430	387	352	322	298	276	258	242	228	215	204	193
E - 2	1058	510	492	470	423	385	353	325	302	282	264	249	235	223	212
D - 1	1128	544	525	501	451	410	376	347	322	301	282	265	251	237	226
F - 4	1128	544	525	501	451	410	376	347	322	301	282	265	251	237	226
E - 3	1209	582	562	537	483	440	403	372	345	322	302	284	269	254	242
D - 2	1269	612	590	564	508	461	423	390	363	338	317	299	282	267	254
C - 1	1316	634	612	585	526	479	439	405	376	351	329	310	292	277	263
F - 5	1354	652	630	602	541	492	451	417	387	361	338	319	301	285	271
E - 4	1410	680	656	627	564	513	470	434	403	376	353	332	313	297	282
D - 3	1450	699	675	645	580	527	483	446	414	387	363	341	322	305	290
C - 2	1481	714	689	658	592	538	494	456	423	395	370	348	329	312	296
B - 1	1504	725	700	668	602	547	501	463	430	401	376	354	334	317	301
A - 1	1692	815	787	752	677	615	564	521	483	451	423	398	376	356	338
A - 2	1904	917	885	846	761	692	635	586	544	508	476	448	423	401	381
B - 3	1934	932	899	859	774	703	645	595	553	516	483	455	430	407	387
C - 4	1974	951	918	877	790	718	658	607	564	526	494	465	439	416	395
D - 5	2031	979	944	902	812	738	677	625	580	541	508	478	451	427	406
E - 6	2115	1019	984	940	846	769	705	651	604	564	529	498	470	445	423
A - 3	2176	1048	1012	967	870	791	725	669	622	580	544	512	483	458	435
B - 4	2256	1087	1049	1003	902	820	752	694	645	602	564	531	501	475	451
C - 5	2369	1142	1102	1053	948	861	790	729	677	632	592	557	526	499	474
D - 6	2538	1223	1181	1128	1015	923	846	781	725	677	635	597	564	534	508
A - 4	2538	1223	1181	1128	1015	923	846	781	725	677	635	597	564	534	508
B - 5	2707	1305	1259	1203	1083	985	902	833	774	722	677	637	602	570	541
C - 6	2961	1427	1377	1316	1184	1077	987	911	846	790	740	697	658	623	592
A - 5	3046	1468	1417	1354	1218	1108	1015	937	870	812	761	717	677	641	609
B - 6	3384	1631	1574	1504	1354	1231	1128	1041	967	902	846	796	752	712	677
A - 6	3807	1835	1771	1692	1523	1384	1269	1171	1088	1015	952	896	846	802	761

■ Calculation

• Practical calculation for fertilizer dispensing

01 - Determine the spacing between lines and the amount of fertilizer to be distributed per bushel (Aa) or hectare (Ha).

02 - Example: Seeder with a spacing of 450 mm, to distribute 500 kg of fertilizer per Ha, use the formula below:

Formula: $X = \frac{E \times Q}{A} \times D$

WHERE:

E = Spacing between lines (mm)

Q = Amount of fertilizer to be distributed (kg)

A = Area to be fertilized (m²)

D = 50 meters distance (test)

X = Fertilizer grams to 50 meters

Resolve: $X = \frac{450 \times 500}{10.000} \times 50$

$X = 22.50 \times 50 = 1125$

$X = 1125 \text{ grams to 50 meters per line}$

• Practical test to measure the amount of fertilizer and seed dispensing

01 - For greater precision in the dispensing of fertilizer or seed, make the test of the amount to be distributed at the place of planting, because there is a condition for each terrain.

02 - Mark the test distance in the table, we opted for 50 linear meters.

03 - Fill the tanks of the seeder at least halfway. Run an average of 10 meters outside the test area so that the fertilizer and seeds fill the batchers.

04 - Seal the exit from the seed nozzles and place collection receptacles on the manure exits. Move the tractor in the demarcated area, always at the same speed you will plant, from 5 to 6 km/h.

05 - After going through the demarcated space, remove the seed nozzle seal and collect them for counting and also collect the fertilizer for weighing the amount collected. If necessary, increase or decrease the amount of seed and fertilizer to be distributed, check the table.



ATTENTION

We suggest that a practical test be carried out on the dispensing of the fertilizer and seed, over 50 m, to later compare the results of the fertilizer and the seed.


▪ Trimming system

The mechanical or hydraulic trimming systems allow planting with only one side of the seeder, that is, half the lines.

• Mechanical trimming system

To activate the mechanical trimming system, proceed as follows:

- 01** - Choose the side of the seeder to be trimmed.
- 02** - Then, with the tractor and the seeder stopped, manually activate the lever (1) for the chosen side.

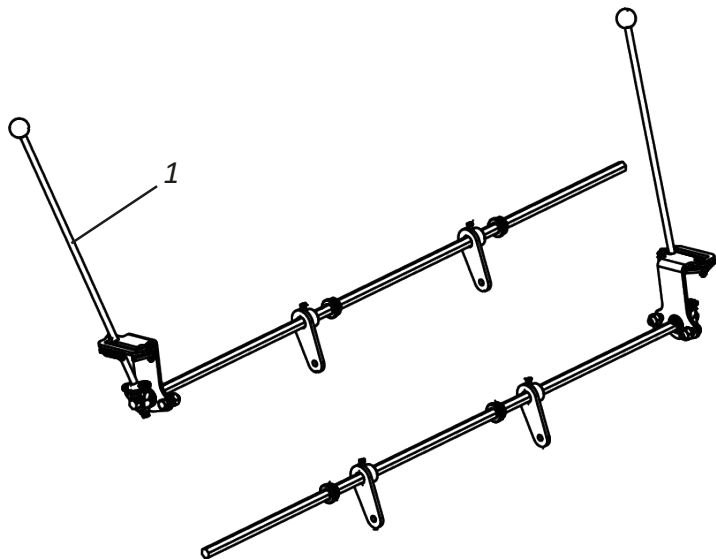


 **ATTENTION**

Do not operate the trimming system with the tractor and the seeder in motion. Ignoring this warning could result in serious accidents or death.

• Hydraulic trimming system (Optional)


The hydraulic trimming system allows the tractor operator, through a simple operation, to activate it without the need to leave the tractor. This activation is done through the tractor's remote control lever. To start the hydraulic system, proceed as follows:

- 01** - Choose the side of the seeder to be trimmed.
- 02** - Then, close the valve (1) referring to the opposite side of the chosen one.
- 03** - Then, activate the remote control lever of the tractor.

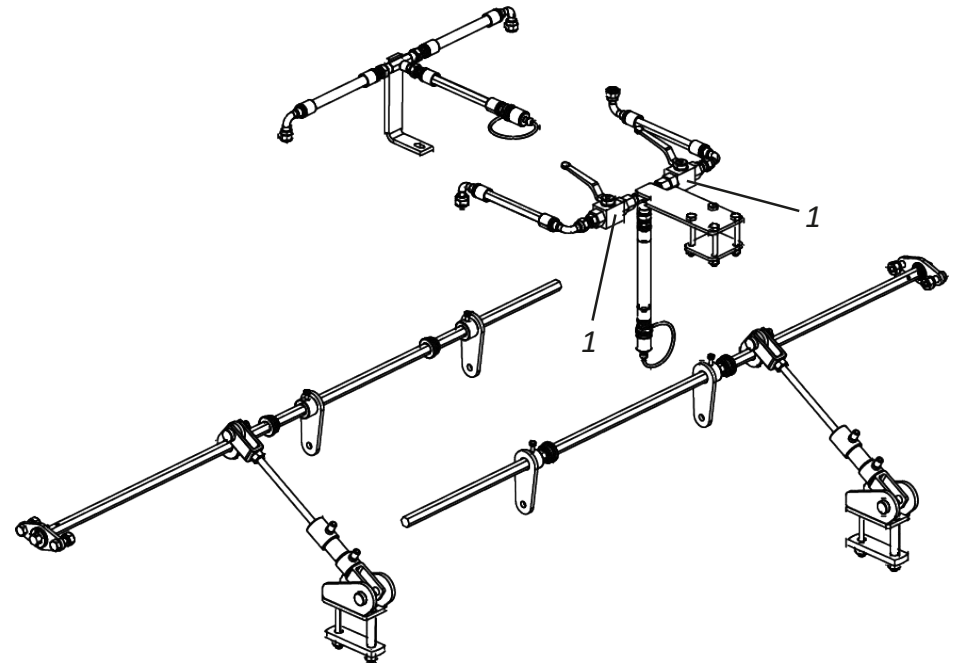


▪ Planting lines


• Planting line models

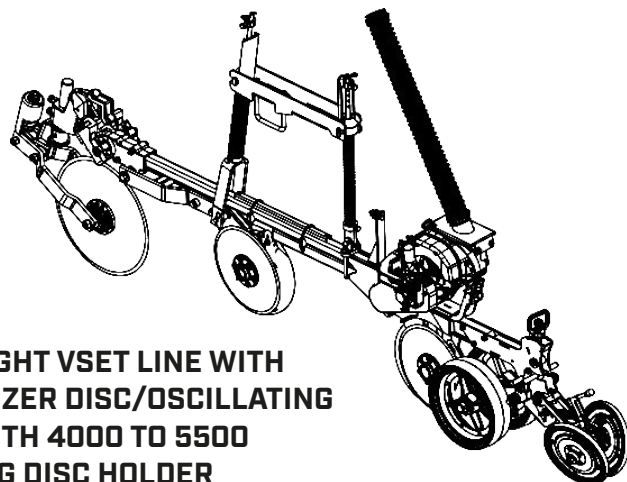


**SMALLER RIGHT VSET LINE WITH
DOUBLE FERTILIZER DISC/OSCILLATING
WHEEL WITH 4000 TO 5500
CUTTING DISC HOLDER**

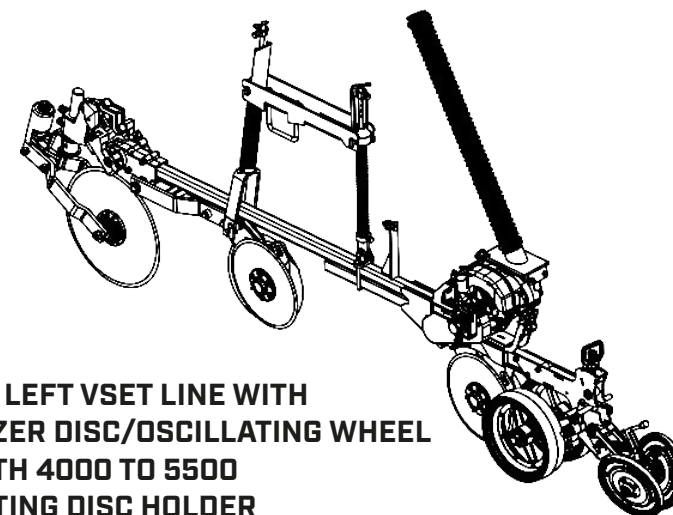

**LARGER LEFT VSET LINE WITH
DOUBLE FERTILIZER DISC/OSCILLATING WHEEL
WITH 4000 TO 5500
CUTTING DISC HOLDER**

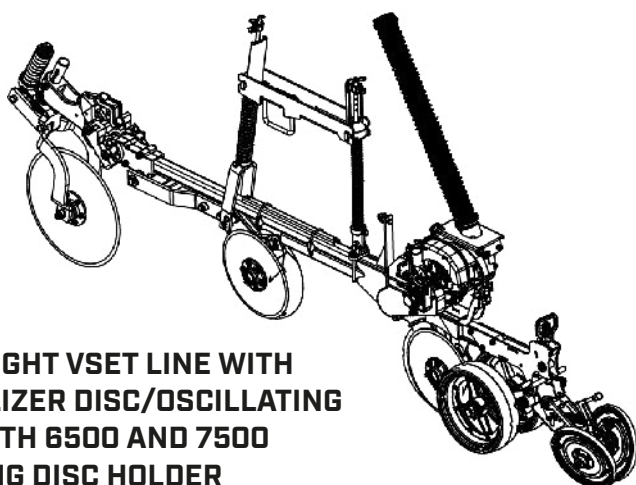

**SMALLER RIGHT VSET LINE WITH
DOUBLE FERTILIZER DISC/OSCILLATING
WHEEL WITH 6500 AND 7500
CUTTING DISC HOLDER**

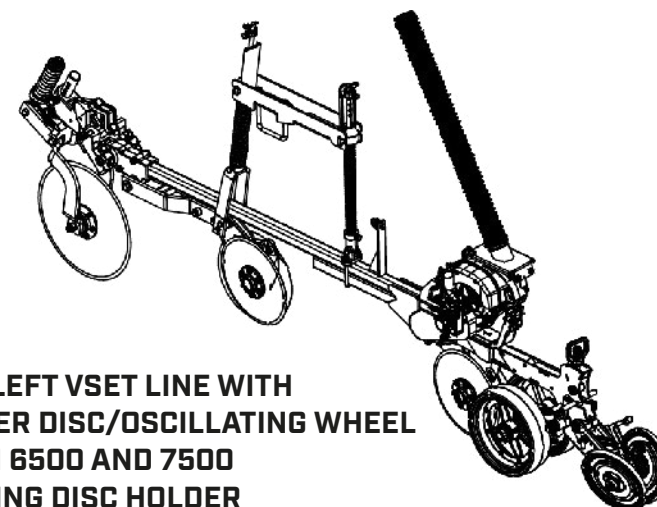


**LARGER LEFT VSET LINE WITH
DOUBLE FERTILIZER DISC/OSCILLATING WHEEL
WITH 6500 AND 7500
CUTTING DISC HOLDER**

▪ Adjusting the lines

• Adjusting the cutting disc depth

To adjust the depth of the cutting disc (1), proceed as follows:

- 01** - Loosen the screws (2) and move the shaft (3) to the desired adjustment.
- 02** - Then, retighten the screws (2).

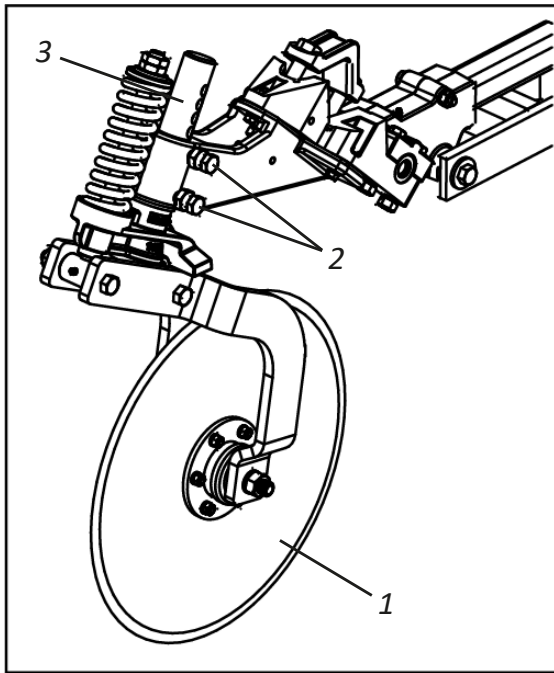

ATTENTION When adjusting the pressure of the cutting disc, take care not to cancel the articulating action of the cutting disc.




IMPORTANT The depth and pressure adjustments of the cutting disc must be made in the field before starting work, observing the type of soil to be worked, to obtain a better performance of the seeder.

• Adjusting the cutting disc pressure

To adjust the pressure of the cutting disc (1), proceed as follows:

- 01** - Turn the nut (2) clockwise to increase pressure on the spring (3).
- 02** - Turn the nut (2) counterclockwise to decrease pressure on the spring (3).

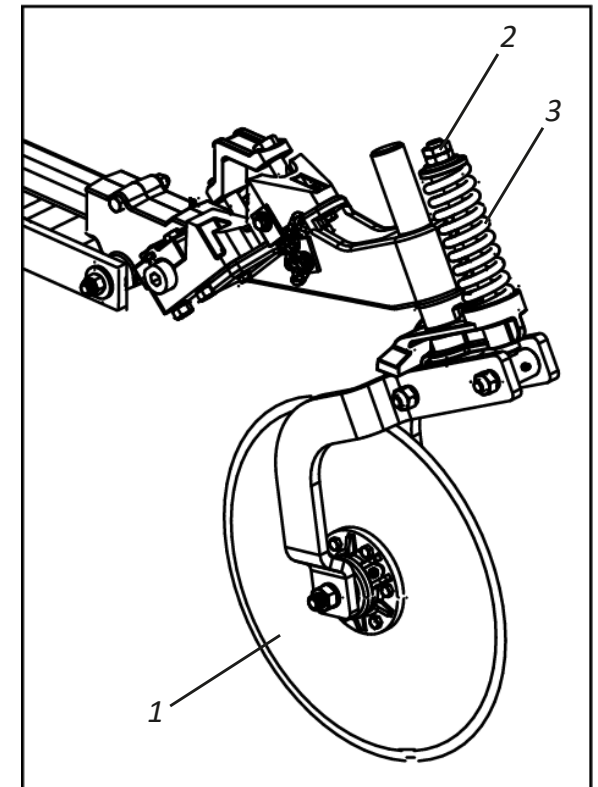

PRESSURE REGULATION

(+) INCREASED SPRING PRESSURE:

INCREASED PRESSURE OF CUTTING DISC IN THE SOIL.

(-) DECREASED SPRING PRESSURE:

DECREASED PRESSURE OF CUTTING DISC IN THE SOIL.

▪ Adjusting the lines



• Adjusting the ridge opening and fertilizer position in the soil

The opening of the ridge in the soil for the fertilizer to be deposited is done by double discs or ridgers in the following systems:

- **SIDE FERTILIZATION AND BELOW THE SEED.**
- **FERTILIZATION IN THE SAME LINE AND BELOW THE SEED.**

To adjust the distance between the fertilizer line and the seed line, proceed as follows:


- 01 -** Remove the spring rod (1), loosen the nuts and washers (2), remove the housing (3) that is between the fork plates (4), pass it to one side of the fork, place the bushings (5) between the fork plates and secure with screws (6), washers, and nuts (2). Then, replace the spring rod (1), placing the bushings (7) on the same side as the housing was moved, securing with the pin (8) and the lock (9).

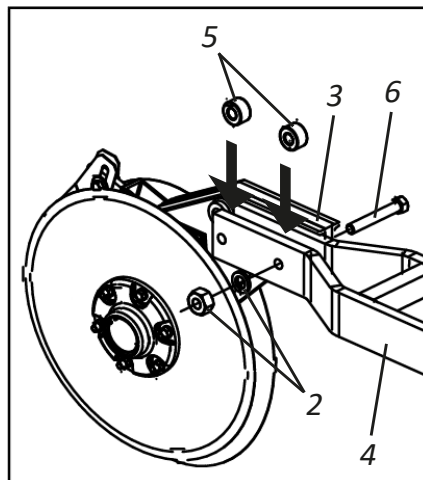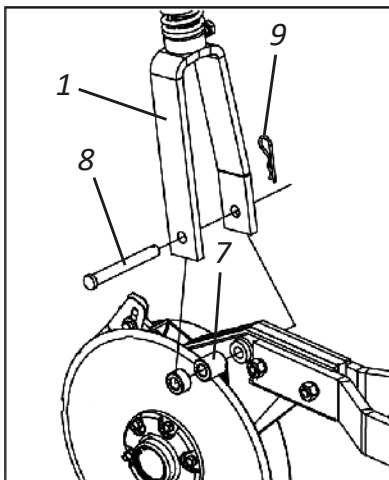

• Ridger attack angle adjustment



To adjust the angle of attack of the ridger, proceed as follows:

- 01 -** Remove the screw (1), articulate the ridger (2) in the ideal setting and replace the screw (1).

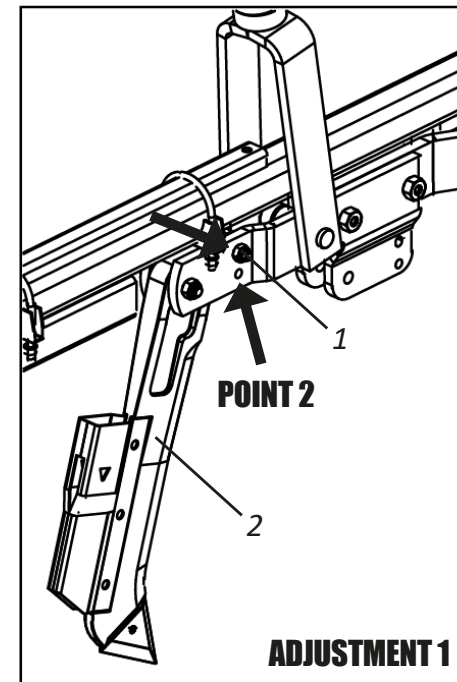

❗ IMPORTANT

When the adjustment is finished, repeat the procedure on all lines, avoiding variation between them.

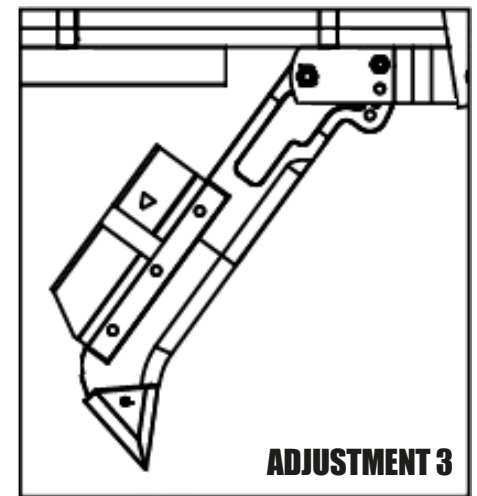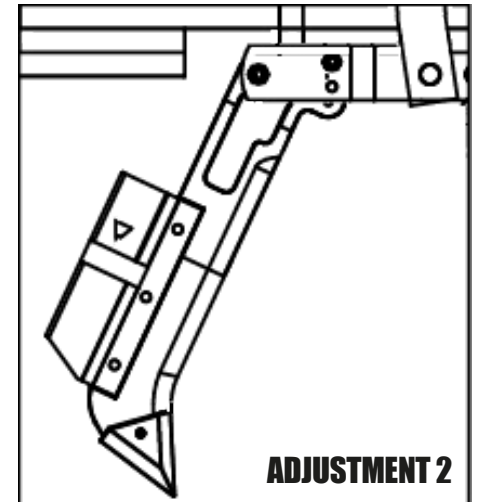


▪ Adjusting the lines

• Adjusting the smaller ridger for greater or lesser mismatch (Optional)

The planting lines of **PPSOLO AIR 3rd SEED BOX - VSET**, may be purchased with a smaller ridge (1). This ridger is used in cases where the stubble is dense, increasing the mismatch of ridgers, providing greater flow. To adjust the ridger with adjustable deflector (1), proceed as follows:


- 01** - Loosen the screws (2) and nuts (3).
- 02** - Then remove the ridger (4) and place it on the front of the support (5).
- 03** - Then, secure it again with the screws (2) and nuts (3).

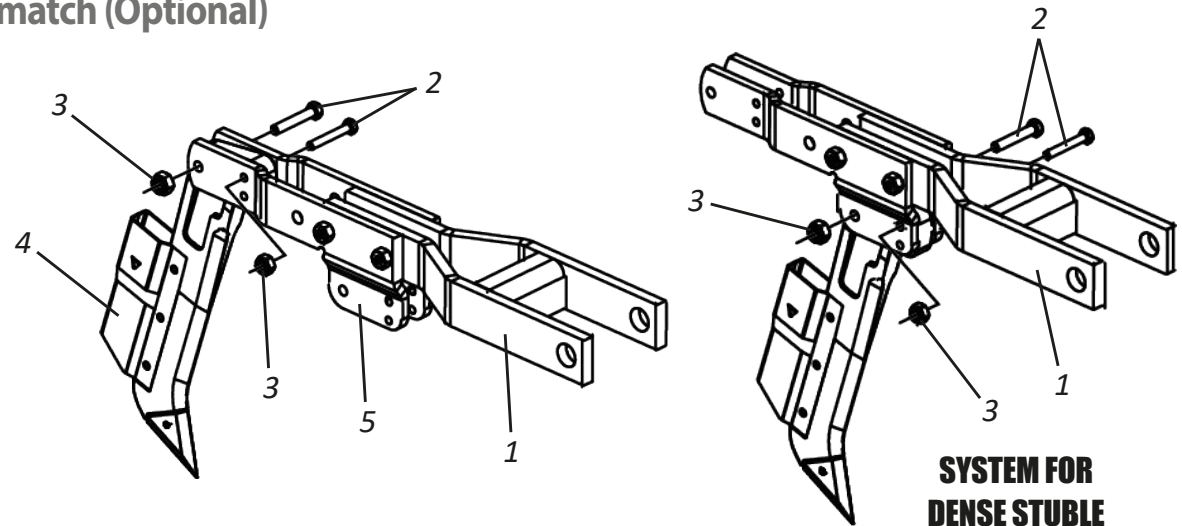

• Adjusting the ridger with depth wheel (Optional)

The planting lines of the **PPSOLO AIR 3rd SEED BOX - VSET**, can be purchased with a ridger with a depth wheel (1). The depth wheel of this ridger is used to control depth uniformity of the deposit in the soil. To adjust the plow with depth wheel (1), proceed as follows:

- 01** - Loosen the screw (2), adjust the depth wheel (3) according to your work needs and then tighten the screw (2) again, locking it.

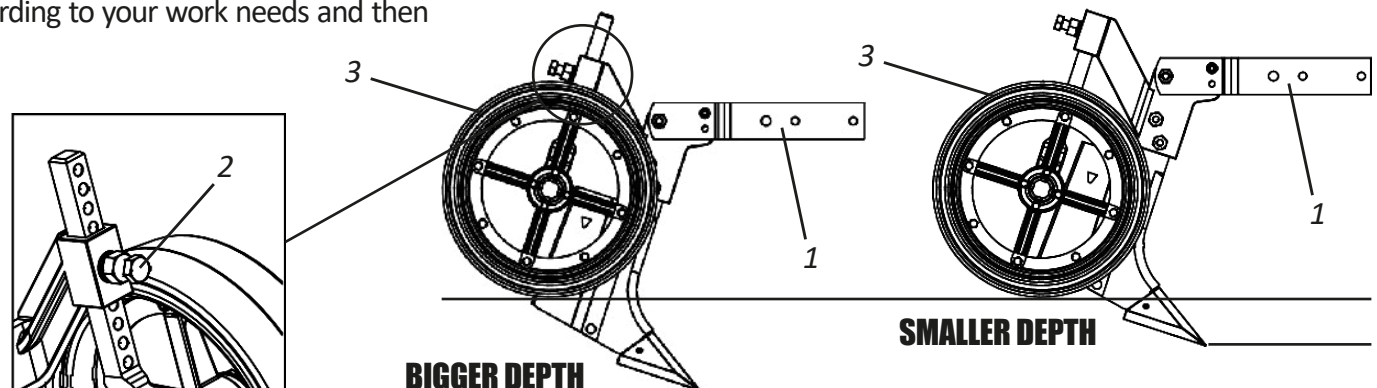

! IMPORTANT

When finishing the adjustment, repeat the procedure on all lines, avoiding variation between them.





▪ Adjusting the lines

• Adjustment of compacting wheels for ridger or double disc (Optional)

The planting lines of the **PPSOLO AIR 3rd SEED BOX - VSET**, seeder can be purchased with a “ridge covering” compactor wheel for ridger (1) or for double disc (2). The ridger or double disc compacting wheels are used to cover the ridge, where a better uniformity is obtained in the seed deposit and the depth of the fertilizer deposit in the soil. To adjust the “ridge cover” compactor wheel for ridger or double disc, proceed as follows:

01 - Loosen the screw (3), pressure washer (4) and nut (5).


02 - Then, articulate the “ridge cover” compactor wheel (6) in the ideal setting according to your work needs.

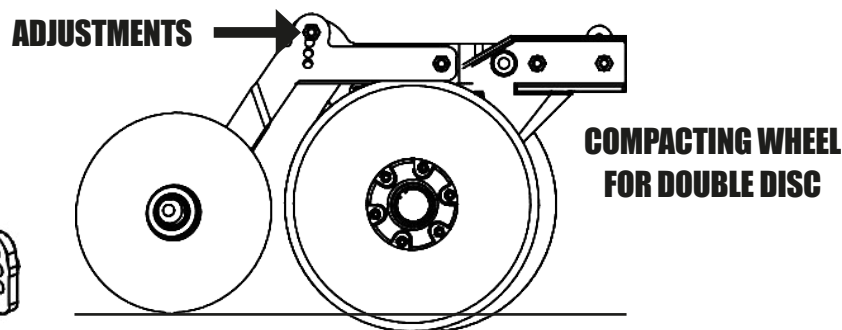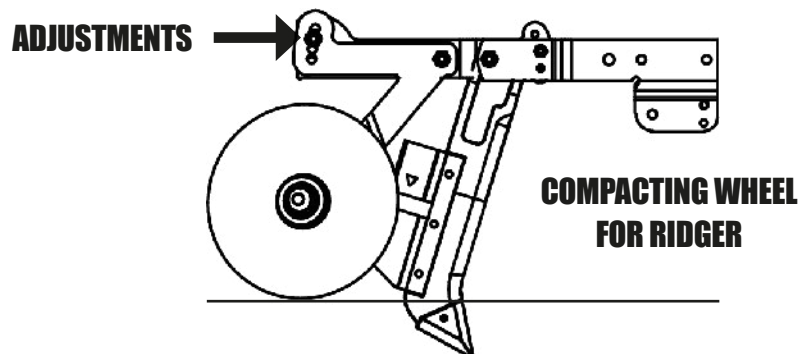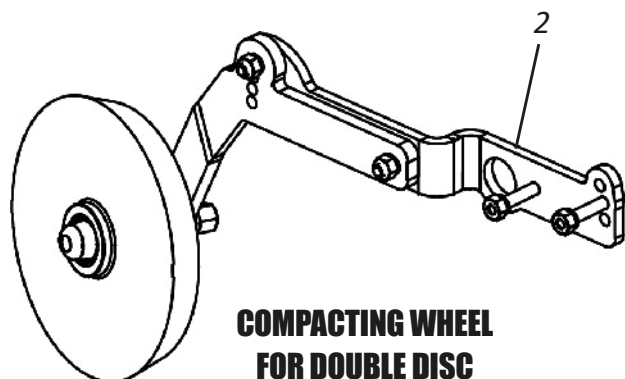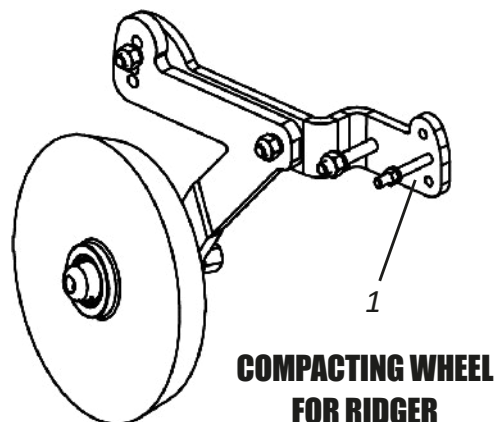

ATTENTION

Check the compactor wheel models for each line model on page 92.

03 - Then, fix the “ridge cover” compactor wheel (6) again with the screw (3), pressure washer (4) and nut (5).

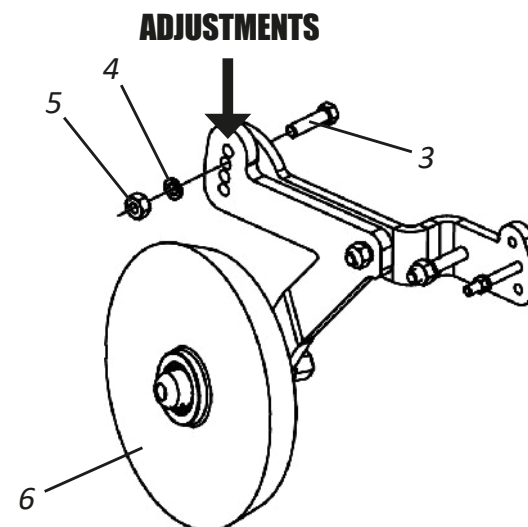

! IMPORTANT


When finishing the adjustment, repeat the procedure on all lines, avoiding variation between them.

▪ Adjusting the lines

• Double disc cleaners adjustment

The double disc features flexible, adjustable wipers to remove dirt adhering to the discs. To adjust the wipers, proceed as follows:

- 01** - Loosen the screw (1), adjust the cleaners (2) in the ideal position and retighten the screw.

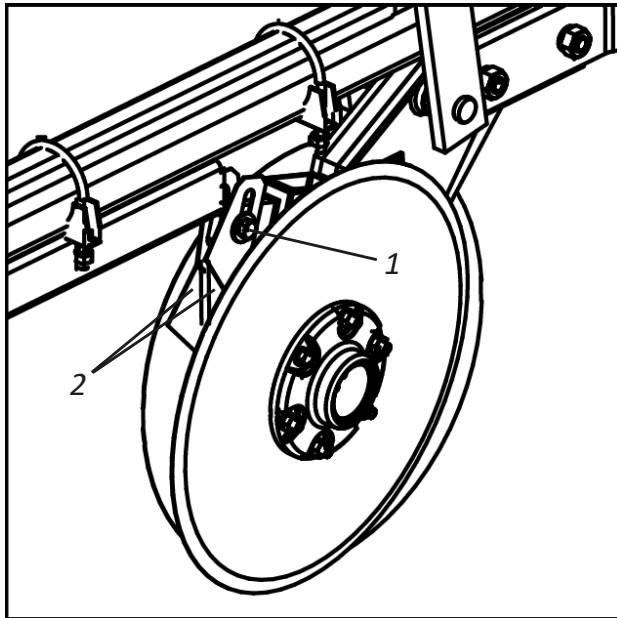


! IMPORTANT

When finishing the adjustment, repeat the procedure on all lines, avoiding variation between them.

• Adjusting the oscillating depth wheel

The limiting wheels with oscillating depth, have a single support point that allows their oscillation, if an obstacle or irregularities appears in the ground in their path they will rise to overcome it, immediately returning to the initial position without lifting the double disc from its position. The seed depth is set individually by the depth limiting wheels. For this adjustment, proceed as follows:

- 01** - Pull the handle (1) up, move the regulator (2) to the desired point, adjusting the depth wheel (3), then lower the handle (1) locking the regulator (2).

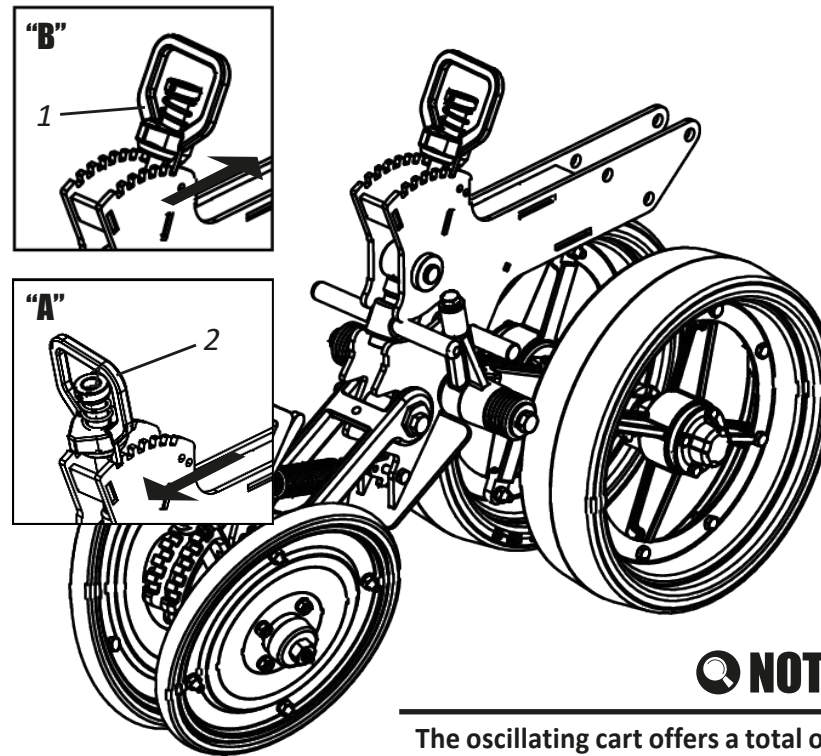

NOTE

The oscillating cart offers a total of 11 adjustment points, 6 in the "A" direction and 5 in the "B" direction interspersed.

▪ Adjusting the lines







• Adjusting the “V” compactor wheel - Part I

The “V” compacting wheels (1) are used to close the ridge laterally, causing the soil to be immediately placed over the seed, avoiding excess compaction and removing air pockets, facilitating germination and plant development. To adjust the greater or lesser angle of closing of the “V” compacting wheels (1), pull the handle (2) upwards, move the regulator (3) to the desired point, then lower the handle (2) locking the regulator (3). The “V” compacting wheels have 5 adjustment points.


HIGHER PRESSURE:	SHIFT THE HANDLE (2) BACK, GIVING MORE PRESSURE TO THE WHEEL (1).
LOWER PRESSURE:	SHIFT THE HANDLE (2) FOWARD, GIVING LESS PRESSURE TO THE WHEEL (1).

The “V” compactor wheel (1) can also be adjusted to its pressure using the lever (4), as shown in the figure below.

HIGHER PRESSURE:
SHIFT THE LEVER (4) BACK, GIVING MORE PRESSURE TO THE WHEEL (1).
LOWER PRESSURE:
TIGHTEN THE LEVER (5) SHIFTH THE LEVER (4) FORWARD, GIVING LESS PRESSURE ON THE WHEEL (1).

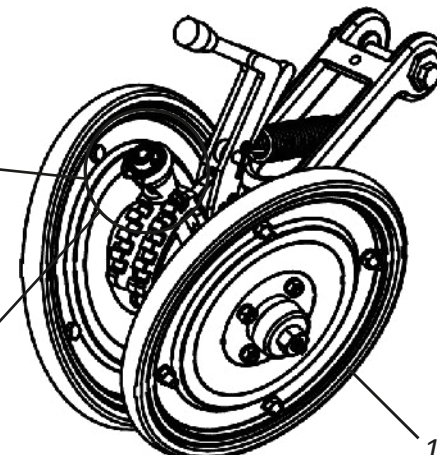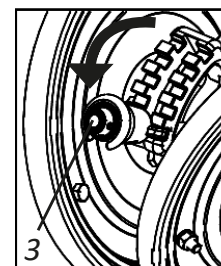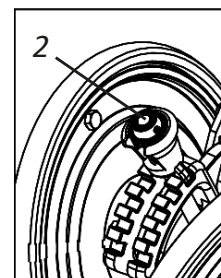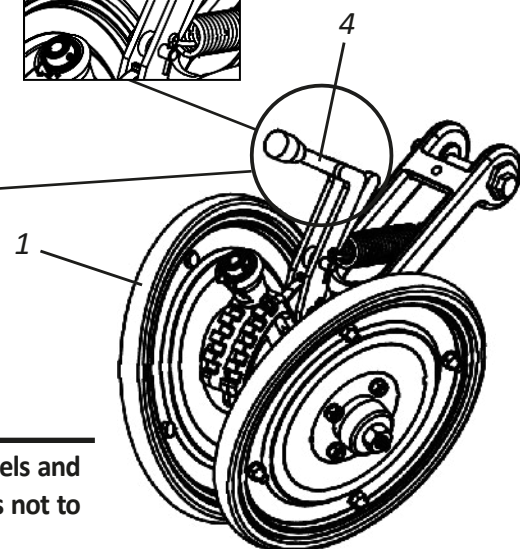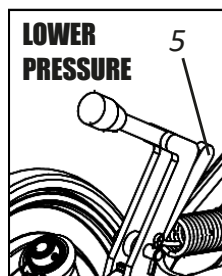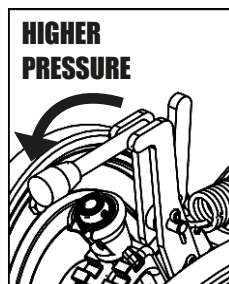


ANGLE OF “V” WHEELS

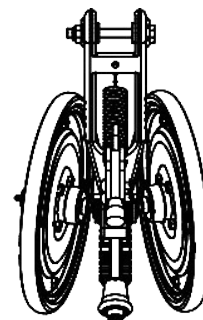

FULLY CLOSED ANGLE POSITION

LESS EARTH ON THE SEED.

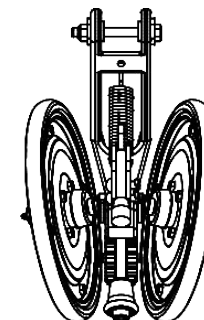

OPEN ANGLE POSITION

MORE EARTH ON THE SEED.

⚠ ATTENTION


Make the same adjustment for all “V” compacting wheels and consider the type of soil, seed and planting depth, so as not to affect the free emergence of the plants.

▪ Adjusting the lines

• Adjusting the “V” compactor wheel - Part II


For horizontal displacement of the wheels, they were developed with eccentric bushings (5). For this adjustment, proceed as follows:

01 - Loosen the screws (7), rotate the said bushings (6), with a spanner to actuate the wheels and align them with the ridge, placing more or less soil on the side of the seed.

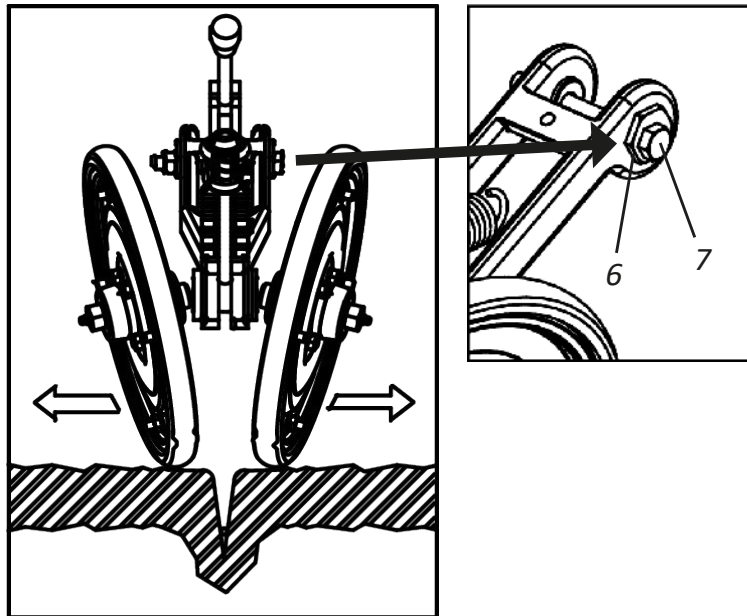

• Adjusting the oscillating depth wheel angle

The angle of the depth limiting wheels (1) has the purpose of pressing the ridge causing the soil to be immediately replaced on the seed, avoiding excessive compaction, facilitating the germination and development of the plant. To obtain the adjustments on the wheels, proceed as follows:

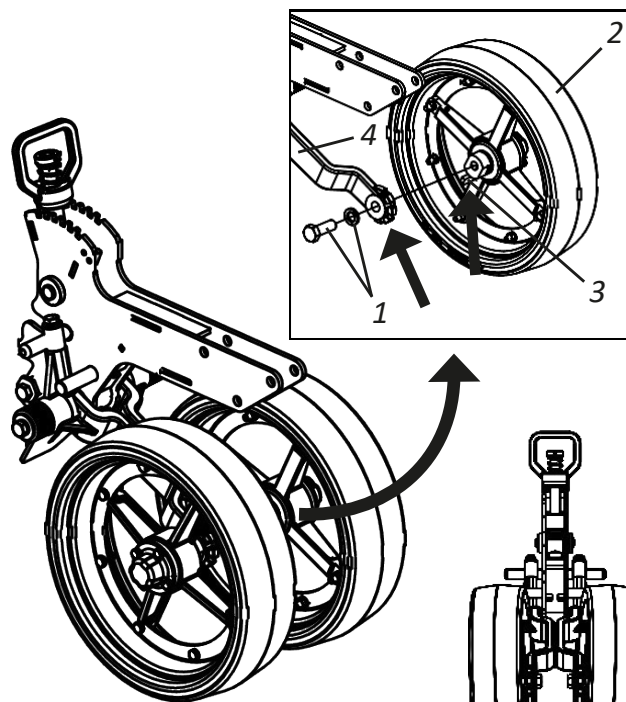

01 - Loosen the screws and washers (1), remove the wheel (2), adjust the wheel adjustment point (3) on the wheel support shaft adjustment (4), then secure the wheel (2) again with the washers and screws (1).

! ATTENTION

Do the same procedure for the other wheel support (4) and for all wheels with oscillating depth.

WHEEL ANGLE

FULLY CLOSED ANGLE POSITION

LESS EARTH ON THE SEED.

PARALLEL POSITION

FOR DEPTH CONTROL ONLY.

OPEN ANGLE POSITION


MORE EARTH ON THE SEED.

▪ Adjusting the lines


• Opening adjustment of the oscillating depth wheel

The oscillating depth wheels have an opening and closing system to better adapt to terrains with dense stubble or with higher and lower humidity. The oscillating depth wheels leave the factory in the closed position. To open the wheels with oscillating depth, proceed as follows:

01 - Loosen the screw (1), pressure washer (2), flat washer (3), remove the 6 shims (4) and the wheel support (5).


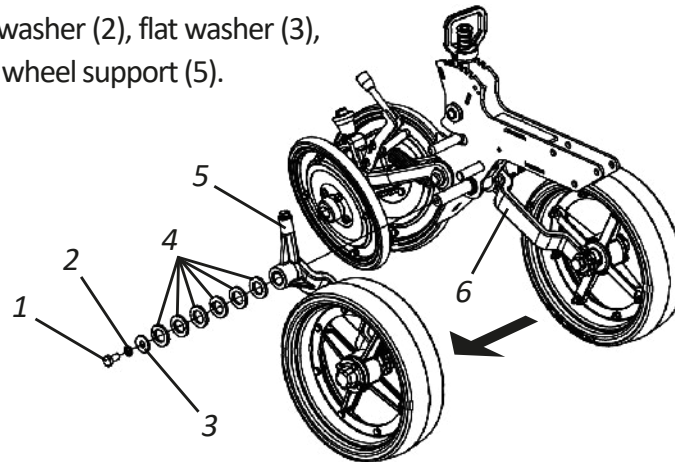


02 - Then, do the reverse process, first placing the (6) blocks (4) then the wheel support (5) and finish by placing the flat washer (3) pressure washer (2) and the screw (1) tightening-o.

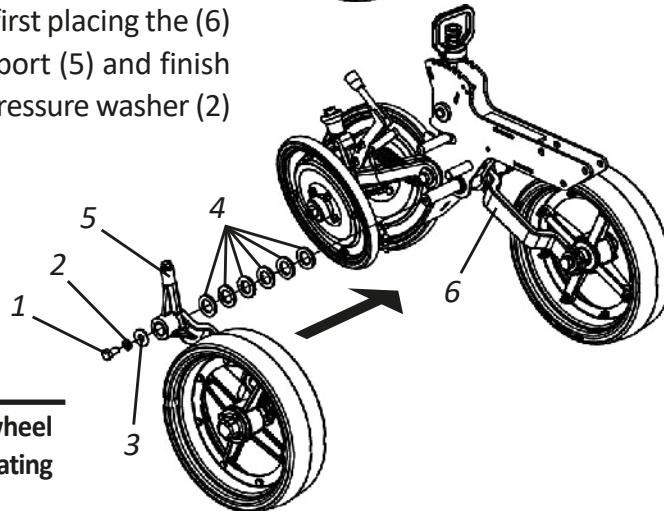

NOTE

Do the same procedure for the other wheel support (6) and for all wheels with oscillating depth.

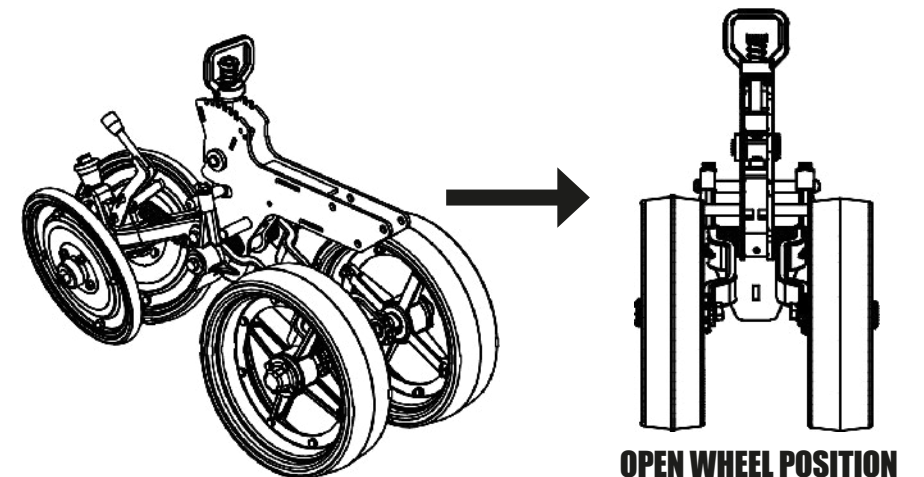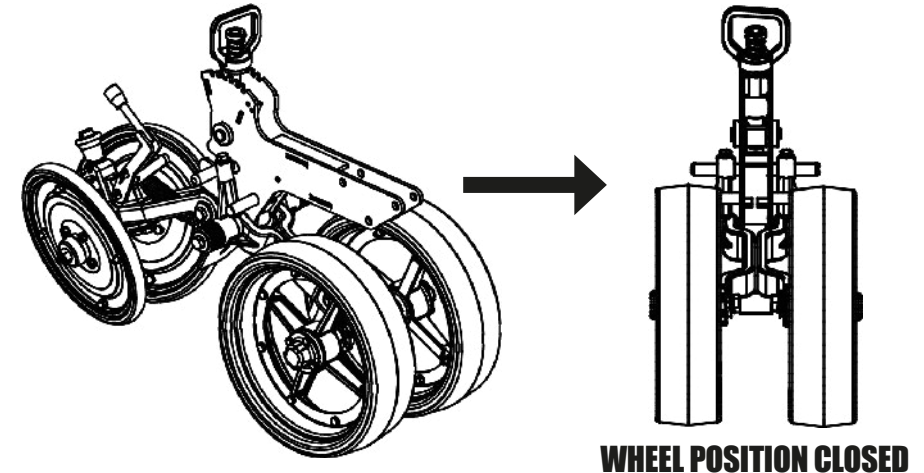

▪ Adjusting the lines

• Adjustment of fertilizer depth and pressure in the seed lines

The depth adjustment of the fertilizer is done through the pressure of the springs exerted on the planting lines. This adjustment is made through the bushings. To adjust the pressure on the springs, proceed as follows:

TO INCREASE DEPTH:

01 - Loosen the screw (1) and place the bushing (2) upwards.

TO DECREASE DEPTH:


01 - Loosen the screw (1) and place the bushing (2) downwards.

TO INCREASE PRESSURE:

01 - Loosen the screw (3) and place the bushing (4) upwards.

⚠ ATTENTION

Always leave a space between the bushing (2) and the rod support (5) for the line to oscillate.

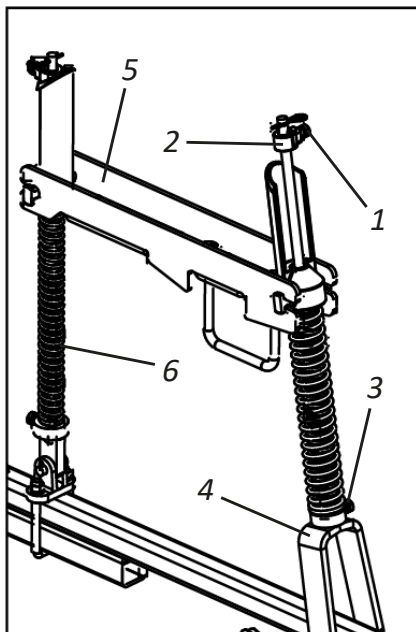

⚠ IMPORTANT

To adjust the pressure in the seed lines, do the same procedure above but now on the rod (6).

📌 NOTE

When finishing the adjustment, repeat this procedure on all lines, avoiding the variation between them.


• Oscillating cart with protection ring (Optional)

The planting lines of the PPSOLO AIR 3rd SEED BOX - VSET, seeder can be purchased with an oscillating trolley with a protective ring (1). The oscillating cart with protection ring was developed for situations of direct planting in which the corn cane was harvested in high cut, preventing it from entering the wheel rims during planting, locking it.

If you have purchased the PPSOLO AIR 3rd SEED BOX - VSET, seeder with the oscillating carts without a protection ring, you can purchase the protection ring (2) to secure it on the wheels. To install the protection ring (2) proceed as follows:

01 - Loosen the screws (3), lock washers (4) and nuts (5).

02 - Then put the protection cover (2) fixing it through the screws (3), pressure washers (4) and nuts (5).

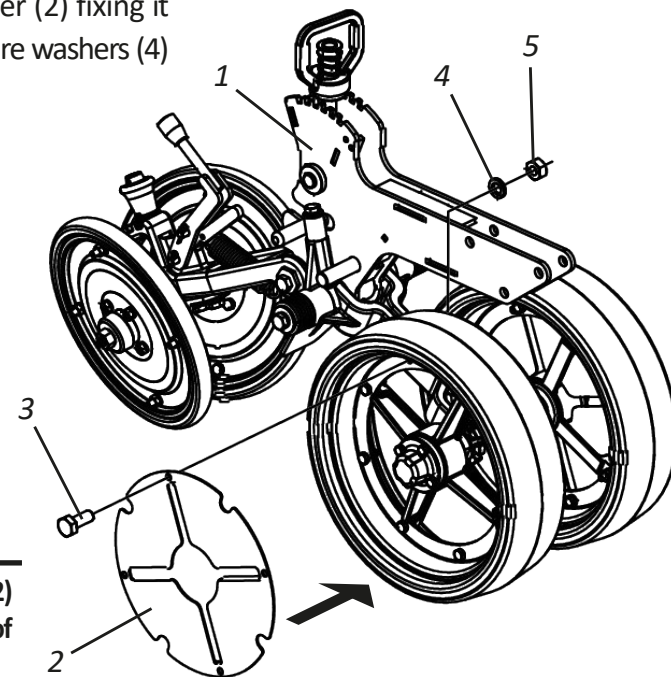

⚠ ATTENTION




If you only buy the protection ring (2) secure it on all the oscillating carts (1) of the seeder.

▪ Adjusting the lines

• Vacuum pressure in the dosers

The **PPSOLO AIR 3rd SPEED BOX - VSET** has in the last row on the left or right side (looking from behind the seeder) a nipple to check the vacuum level in the doser every 20 hours of work. To check the vacuum level in the doser, proceed as follows:

- 01** - Remove the cap (1) from the nipple (2).
- 02** - Then start the turbine at the working speed.
- 03** - Then, take the vacuum gauge (3), attach the end of your hose to the nipple (2) and check the vacuum level, which must be the same as that of work, with minimal variation.
- 04** - After checking the vacuum level, attach the cap (1) to the nipple (2) again.

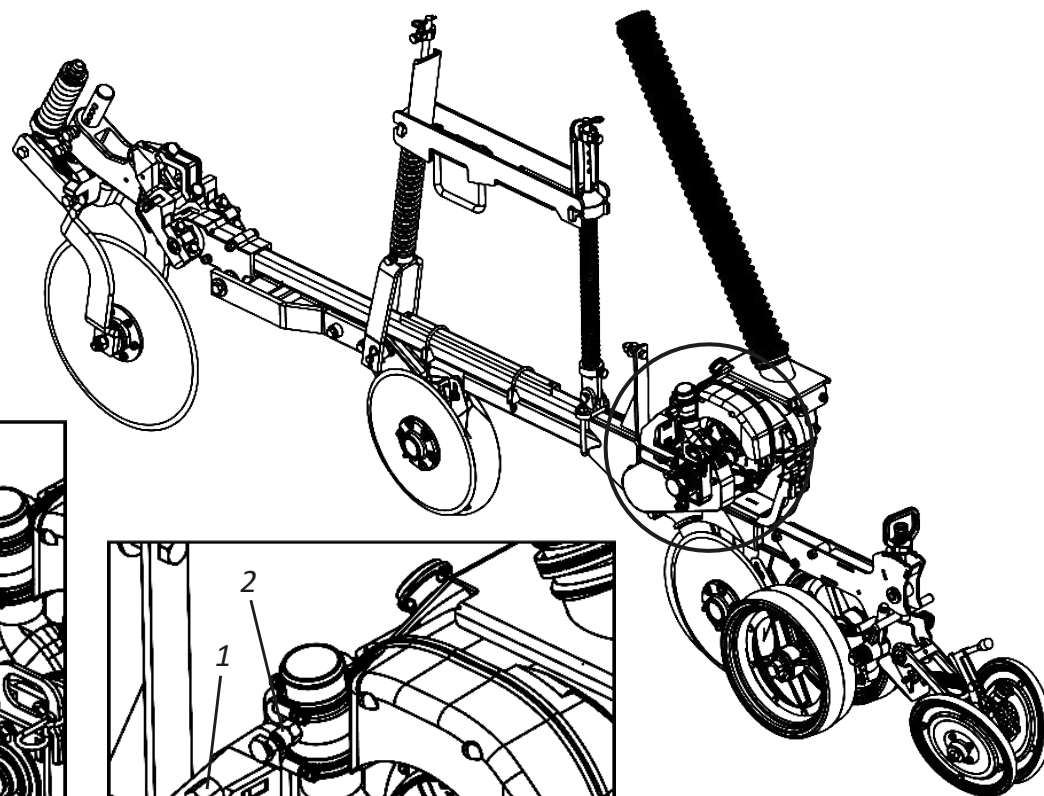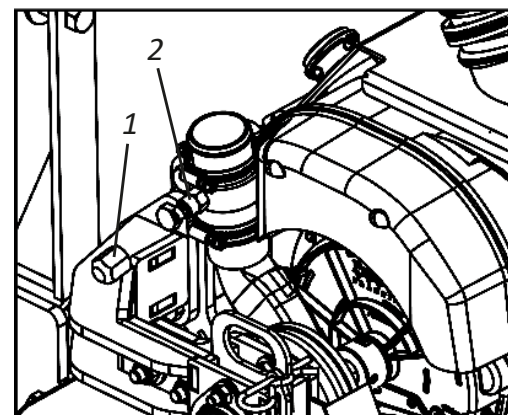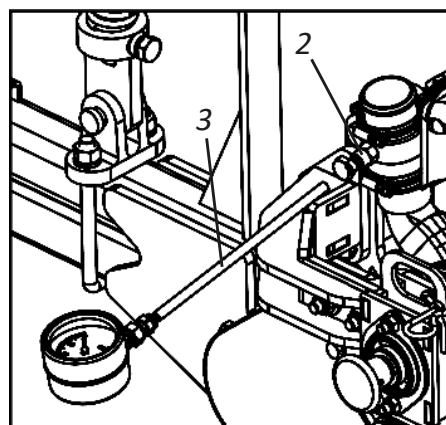


⚠ ATTENTION If you need to adjust the vacuum pressure, adjust the opening or closing of the turbine gate as instructed on page 44.

■ Operations

• **Wheels mounting and articulating system**

The mounting and articulating system of the tires makes them free from the pressure of the springs of the pantographic system on the soil, thus allowing them to oscillate and follow the irregularities of the ground, making the dispensing of fertilizer and seed not interrupted.

- 01** - For conventional planting, lock the wheels with the screw (1), washer pressure (2) and nut (3).
- 02** - For direct planting, the wheels operate free and if necessary, insert 3/4" of water in the tires.
- 03** - The wheels (4) are equipped with traction springs (5), for greater grip to the ground. Do not operate the seeder without it.

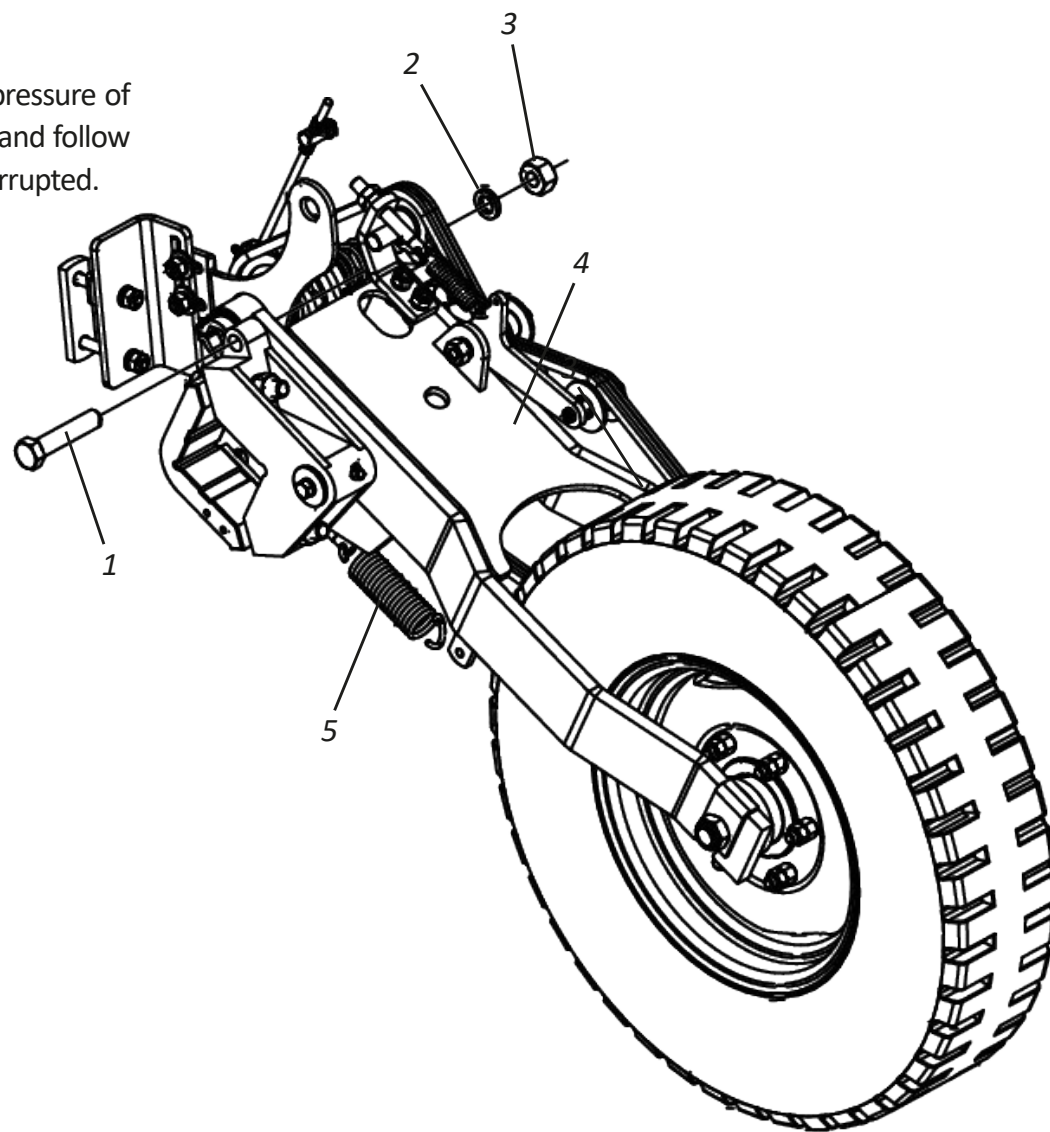

▪ Operations

• Recommendations for operation

Preparing the **PPSOLO AIR 3rd SEED BOX - VSET** and the tractor will allow you to save time and obtain better results in field work. The following suggestions may be helpful to you.

- 01** - After the first day of work with **PPSOLO AIR 3rd SEED BOX - VSET**, retighten all screws and nuts. Check the condition of the pins and locks.
- 02** - Do not maneuver or reverse with the lines lowered to the ground.
- 03** - Observe lubrication intervals.
- 04** - When filling the tanks make sure that there are no objects inside them, such as nuts, bolts, etc. Always use seeds free of impurities.
- 05** - Always observe the functioning of seed dispensing mechanisms and also the regulations established at the beginning of planting.
- 06** - Keep the **PPSOLO AIR 3rd SEED BOX - VSET** always level, the tractor drawbar must remain secured and the working speed must remain constant.
- 07** - Always check seed depth and press wheel pressure.
- 08** - Note the position of the fertilizer in relation to the seed in the soil.
- 09** - Do not make sharp turns with **PPSOLO AIR 3rd SEED BOX - VSET** during work, especially in no till. The components of the lines may be damaged.
- 10** - Do not partially activate the hydraulic cylinders. The drive for both raising and lowering the **PPSOLO AIR 3rd SEED BOX - VSET** must always be complete.
- 11** - Do not disconnect any hose without first relieving circuit pressure. To do this, operate the control levers a few times with the engine off.
- 12** - After coupling and leveling, the next adjustments will be made directly in the field of work, analyzing the terrain in its texture, humidity and the types of operations to be done with **PPSOLO AIR 3rd SEED BOX - VSET**.
- 13** - Respect the working and transport speeds specified on page 12. We do not recommend exceeding speeds to maintain service efficiency and avoid possible damage to **PPSOLO AIR 3rd SEED BOX - VSET**.
- 14** - When carrying out any checks or maintenance on the **PPSOLO AIR 3rd SEED BOX - VSET**, you must lower it to the ground and turn off the tractor engine.
- 15** - **PPSOLO AIR 3rd SEED BOX - VSET** has several adjustments but only local conditions can determine the best adjustment.
- 16** - The indications on the right and left side are made by observing the **PPSOLO AIR 3rd SEED BOX - VSET** from behind.
- 17** - Only fill the **PPSOLO AIR 3rd SEED BOX - VSET** at the workplace.
- 18** - Do not transport or work with excess load on the **PPSOLO AIR 3rd SEED BOX - VSET**.
- 19** - **PPSOLO AIR 3rd SEED BOX - VSET** operates with greater efficiency in the range of 5 to 6 km/h.

In case of doubt, never operate or handle the **PPSOLO AIR 3rd SEED BOX - VSET**, consulte o Pós Venda.

Telephone: 0800-152577 / E-mail: posvenda@baldan.com.br


■ Maintenance

PPSOLO AIR 3rd SEED BOX - VSET was developed to provide you with the maximum performance under terrain conditions. Experience has shown that periodic maintenance of certain parts of **PPSOLO AIR 3rd SEED BOX - VSET** is the best way to help you to avoid problems, so we suggest checking.

• Tire pressure

The tires must always be correctly calibrated, avoiding premature wear due to excess or lack of pressure and ensuring precision in dispensing.

TIRES 700 X 16 10 PLIES

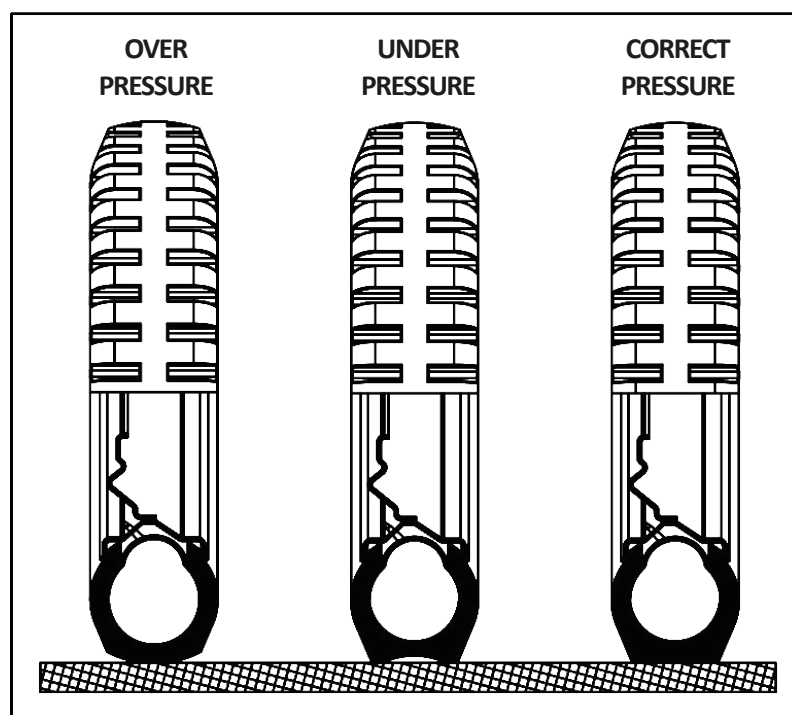

USE: 70 LBS/POL²

ATTENTION

Never weld wire assembled with a tire, the heat can cause an increase in air pressure and cause the tire to explode.

When inflating a tire, position yourself next to the tire, never in front of it.

When inflating the tire, always use a containment device (inflation cage).

Assemble the tires with suitable equipment. The service should be performed only by persons qualified for the job.

IMPORTANT

When calibrating the tires, do not exceed the recommended calibration.

NOTE

Tractor tire pressure should be as recommended by the manufacturer.

■ Maintenance

• Lubrification

Lubrication is indispensable for good performance and greater durability of the **PPSOLO AIR 3rd SEED BOX - VSET**, moving parts, contributing to savings in maintenance costs.

Before starting the operation, carefully lubricate all grease fittings, always observing the greasing intervals on the following page. Make sure of the quality of the lubricant, its efficiency and purity, avoiding the use of products contaminated by water, soil and other agents.

• Grease table and equivalents

Manufacturer	Recommended grease types
Petrobrás	Lubrax GMA-2
Atlantic	Litholine MP 2
Ipiranga	Ipiflex 2
Castrol	LM 2
Mobil	Grease MP
Texaco	Marfak 2
Shell	Alvania EP 2
Esso	Multi H
Bardahl	Maxlub APG-2EP
Valvoline	Palladium MP-2
Petronas	Tutela Jota MP 2 EP
	Tutela Alfa 2K
	Tutela KP 2K


ATTENTION

For manufacturers and or equivalent brands not listed in the table, see the manufacturer's technical manual.

• Centralized lubrication system







PPSOLO AIR 3rd SEED BOX - VSET has a centralized lubrication system that makes maintenance quicker and easier, allowing to lubricate all the lateral and central points of the machine without removing the protections. To lubricate, proceed as follows:

- 01** - Before starting lubrication, clean all grease fittings (1) with a lint free cloth and replace damaged ones.
- 02** - Lubricate all grease fittings (1) of the centralized system (2) every 10 hours of work.

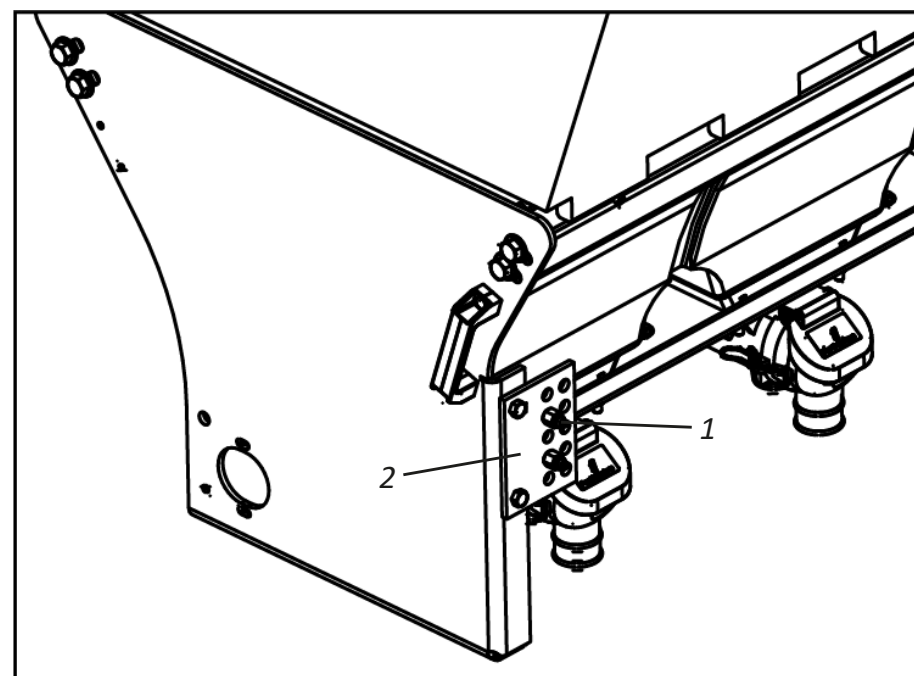

▪ Maintenance

• Lubrification every 10 working hours - Part I

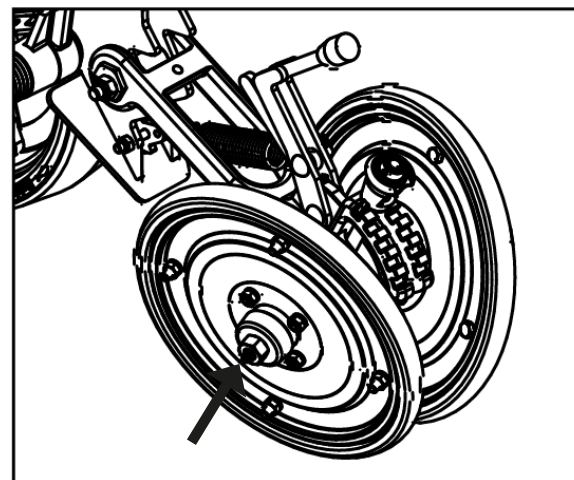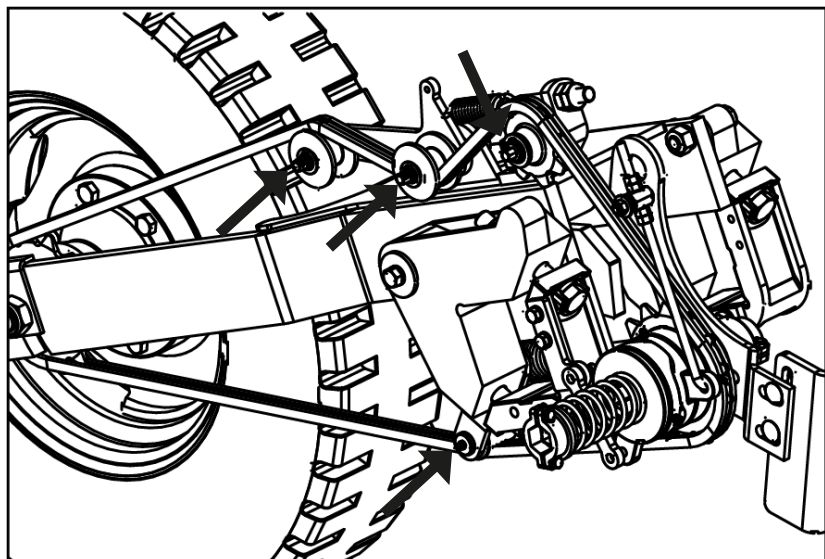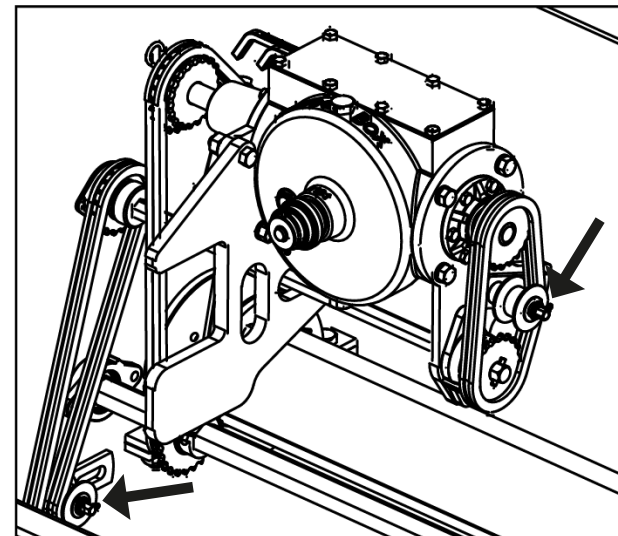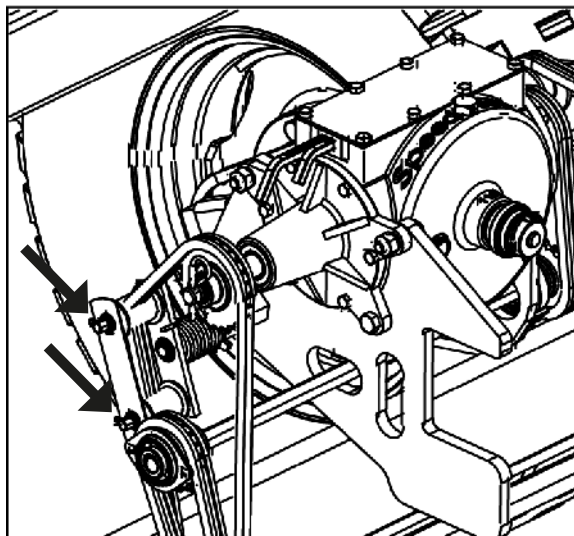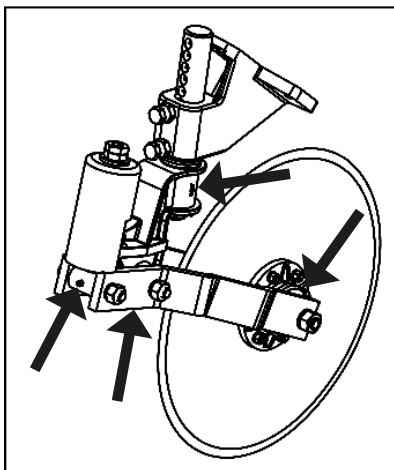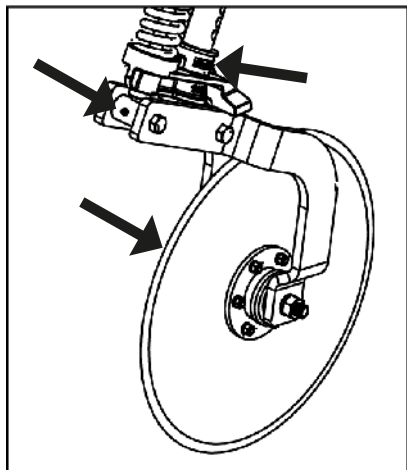


ATTENTION

When lubricating PPSOLO AIR 3rd SEED BOX - VSET, do not exceed the amount of new grease. Insert a sufficient amount.


■ Maintenance

• Lubrification every 10 working hours - Part II

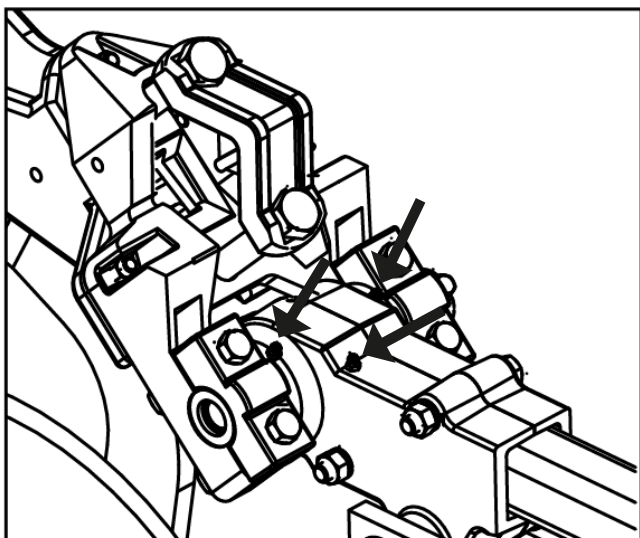


To lubricate the hub of the line markers (1), proceed as follows:

- 01** - Remove the retaining ring (2) and the hub cap (3) from the hub (4).
- 02** - Then, check the bearings if there is any gap, adjust them through the castle nut (5).
- 03** - Insert new grease into the hubcap (3), replace it in the hub (4) fixing it through the retaining ring (2).

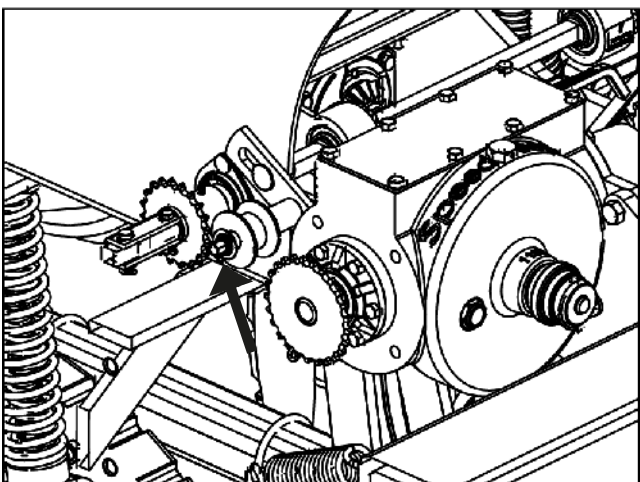



ATTENTION

When lubricating PPSOLO AIR 3rd SEED BOX - VSET, do not exceed the amount of new grease. Insert a sufficient amount.


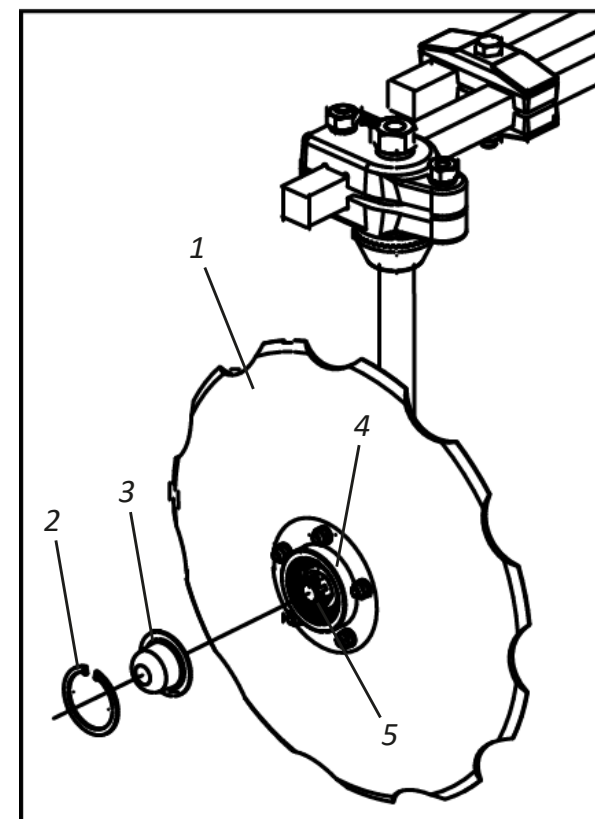


▪ Maintenance

• Lubrification every 10 hours of work - Part III

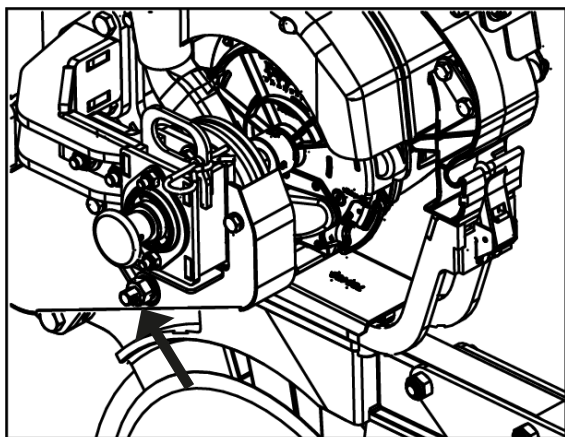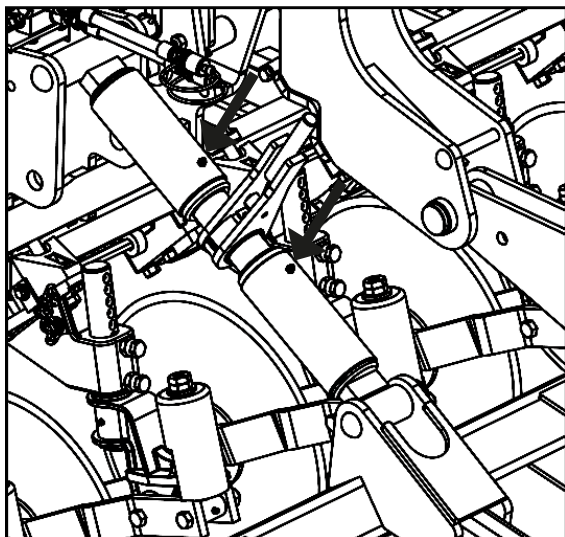

• Lubrification every 30 hours of work

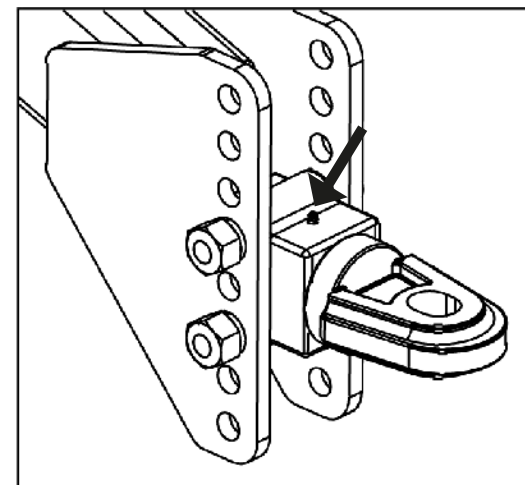
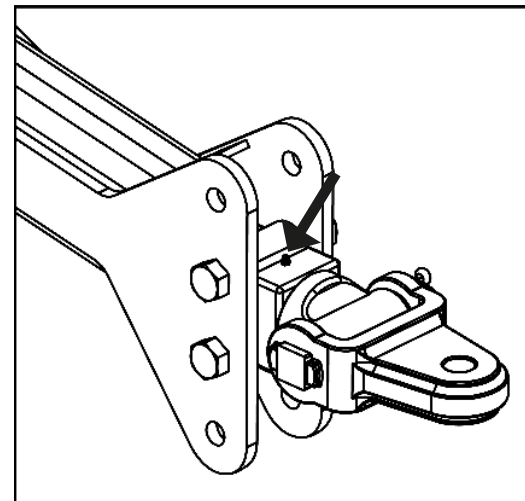


ATTENTION

When lubricating PPSOLO AIR 3rd SEED BOX - VSET, do not exceed the amount of new grease. Insert a sufficient amount.

▪ Maintenance

- Lubrification every 60 hours of work

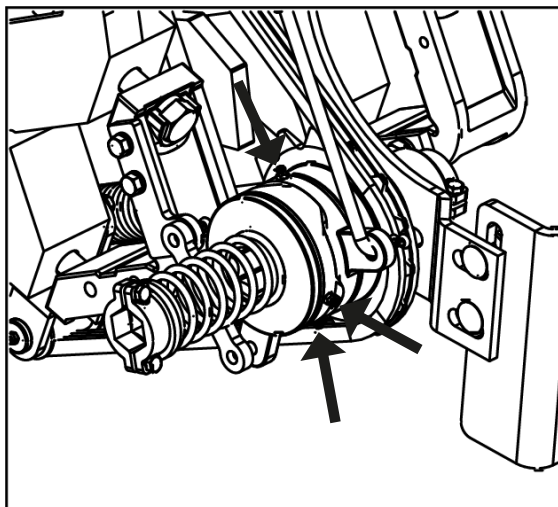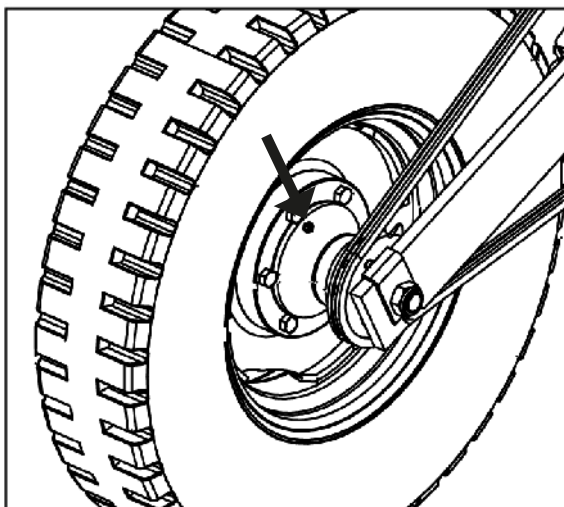


ATTENTION

When lubricating PPSOLO AIR 3rd SEED BOX - VSET, do not exceed the amount of new grease. Insert a sufficient amount.

■ Maintenance

• Lubrification every 200 hours of work

To lubricate the compacting wheels (1) loosen the screws and washers (2) remove the cap (3) and add new grease. Replace the hub (3) on the compactor wheels (1) and secure it with the screws and washers (2).

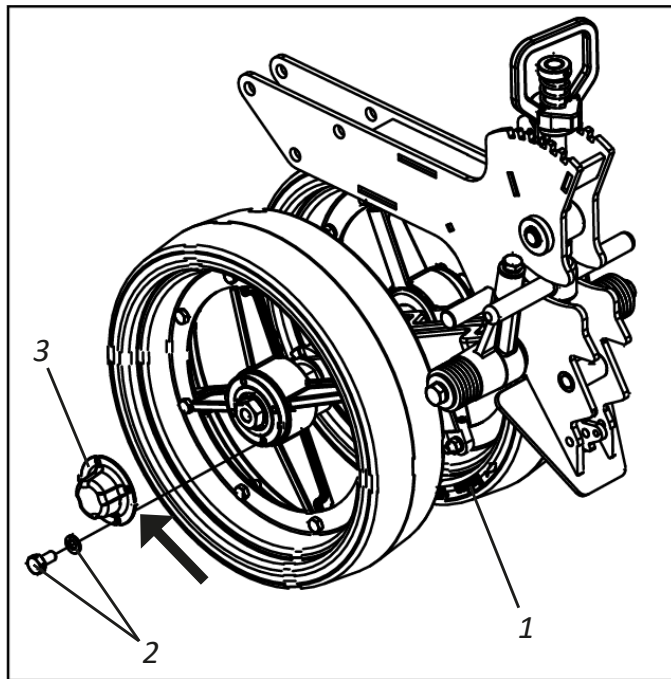

ATTENTION

When lubricating the PPSOLO AIR 3rd SEED BOX - VSET, do not exceed the amount of new grease. Insert a sufficient amount.



IMPORTANT


Before opening the hub (8), clean its external surfaces.

• Chain tension

To tension the chain (1), proceed as follows:

01 - Loosen the nut (2), slide the tensioner (3) adjusting the chain tension (1).

02 - Then, retighten the nut (2).

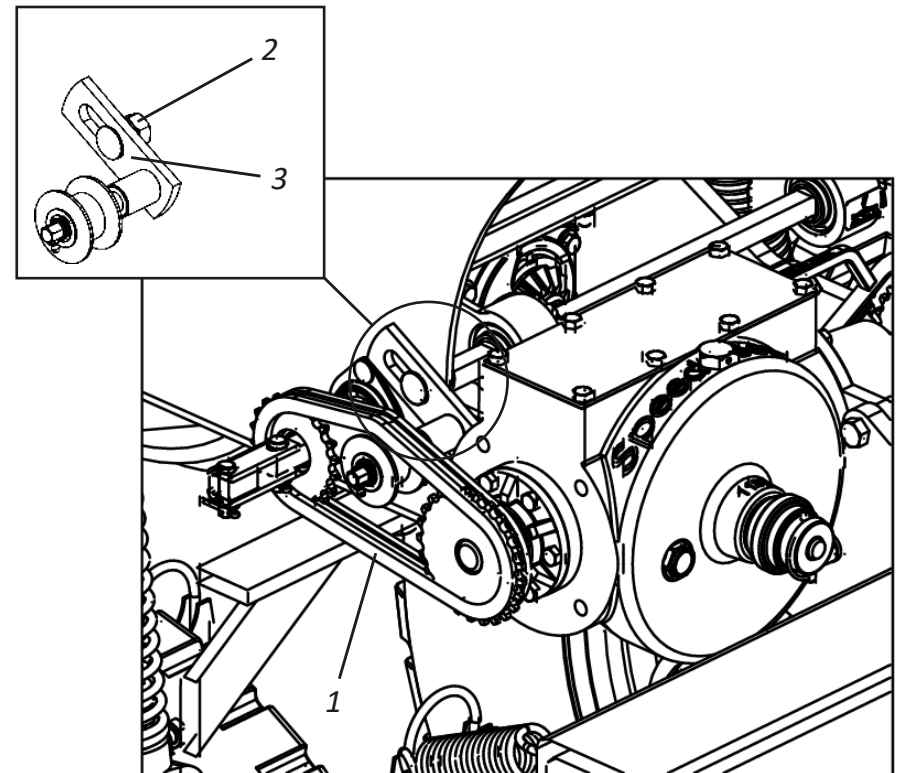

ATTENTION

Check chain tension daily, normal clearance should be ± 1 cm in the center of the chains.


■ Maintenance

• Batcher transmission chain tensioning

When the feeder chain chain is skipping the gear teeth, tension the chain to do this, proceed as follows:

01 - Loosen the screws (1), pull the support (2) adjusting the chain tension (3).

02 - Then, retighten the screws (1).

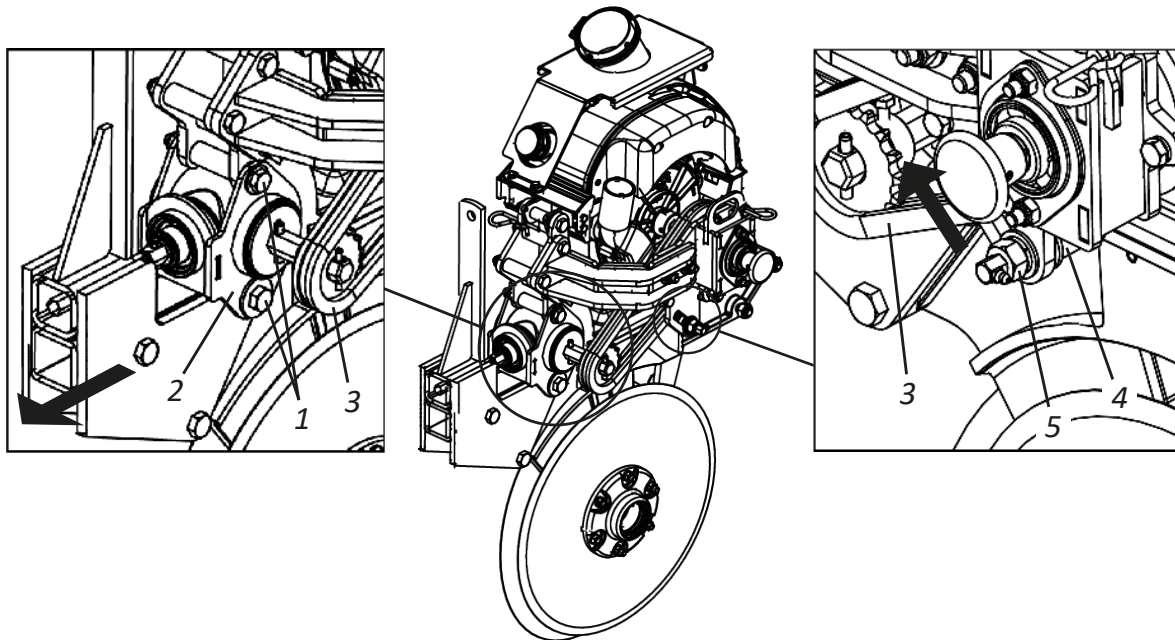

⚠ ATTENTION


If the adjustment of the support (2) does not reach the necessary chain tensioning (3) make the second adjustment using the tensioner (4) by loosening the nut (5).

❗ IMPORTANT

Check chain tension daily, normal clearance should be ± 1 cm in the center of the chains.

• Oscillating stretcher

The tensioner (1) is equipped with a torsion spring (2) for greater flexibility. If more pressure is needed on the tensioner, loosen its inner nut (3), turn the shaft (4) passing the spring coupling (2) to the other tooth of the shaft socket and retighten the inner nut (3) again.

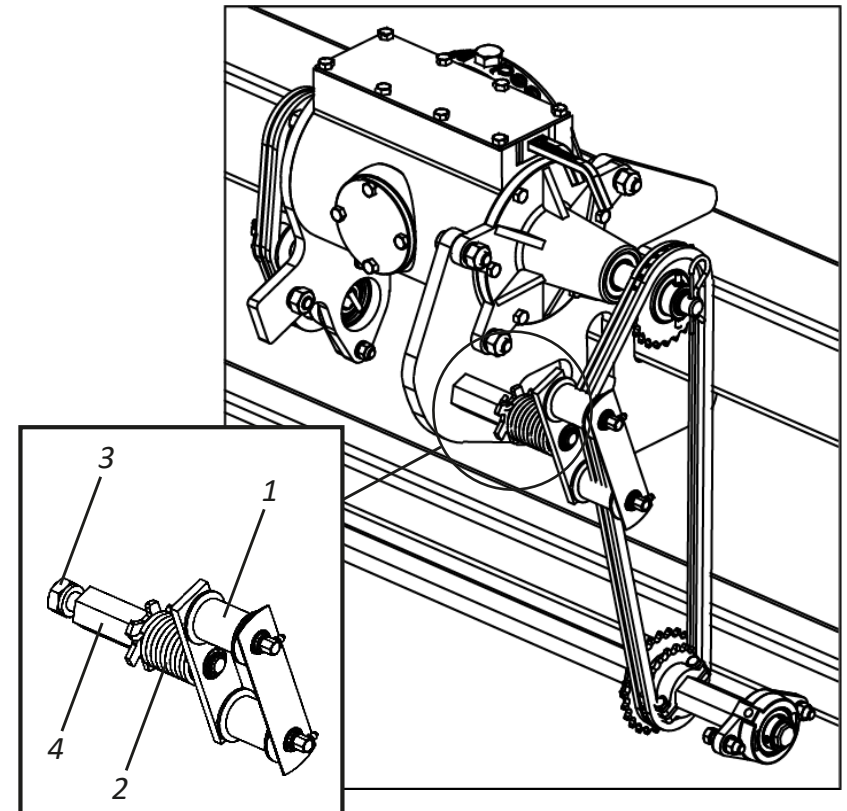

▪ Maintenance

• Batcher disc replacement

To change the VSET 2 disc, proceed as follows:





01 - Remove the lock (1) and pull the lock plate (2) upwards.

02 - Then pull the handle (3) to uncouple the transmission shaft (4).

03 - Then release the lock spring (5) from the batcher cap.

04 - Then remove the batcher cover (6) and replace the disc.

05 - When you have finished changing the disc, reassemble the batcher.

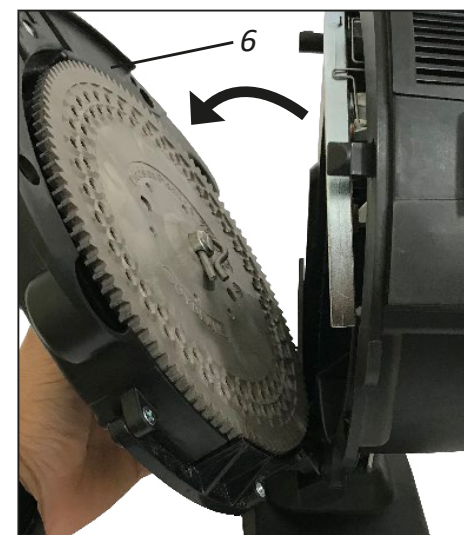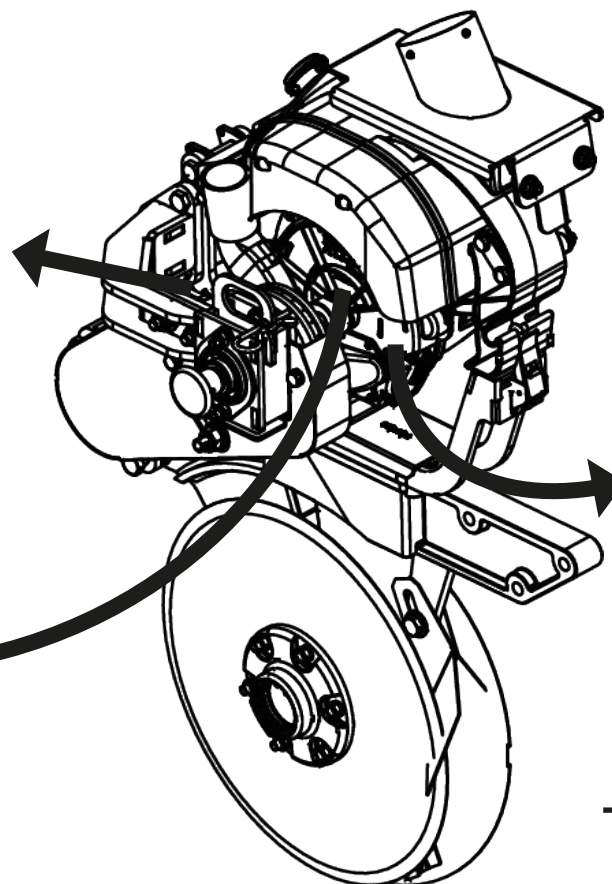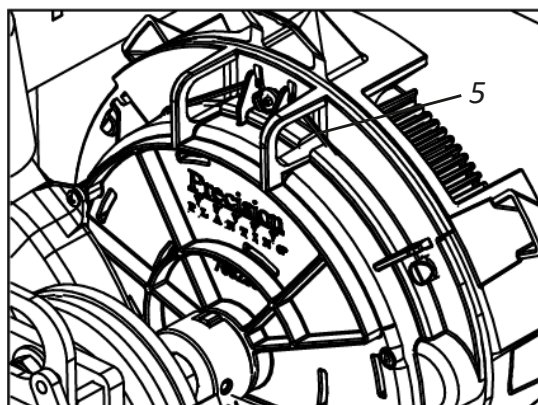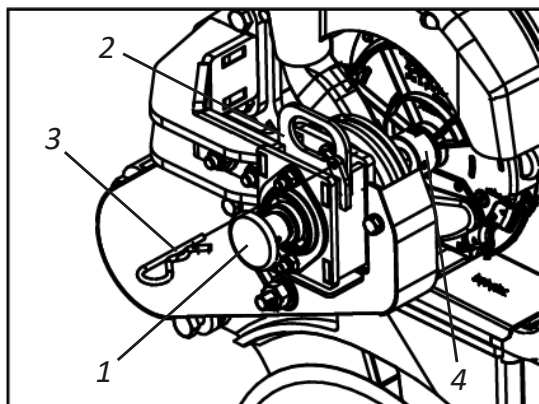

ATTENTION




To change the batcher disc, follow the manufacturer's instructions on pages 48 to 50.

■ Maintenance




• Batcher maintenance or replacement - Part I

To service the batcher or nozzle, proceed as follows:

- 01** - Remove the lock (1) and pull the lock plate (2) upwards.
- 02** - Then pull the handle (3) to uncouple the transmission shaft (4).
- 03** - Then, release the lock (5).

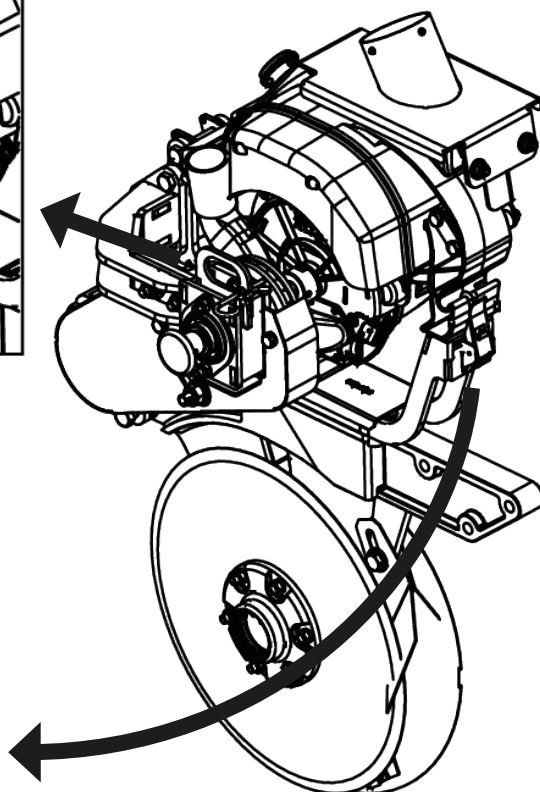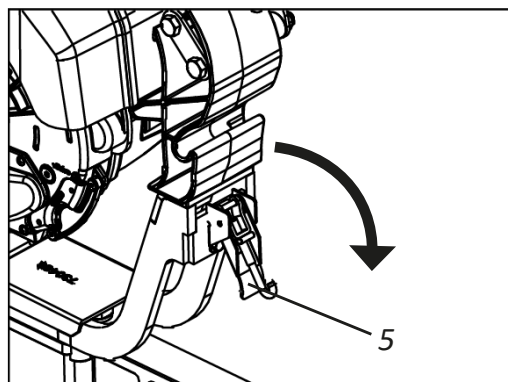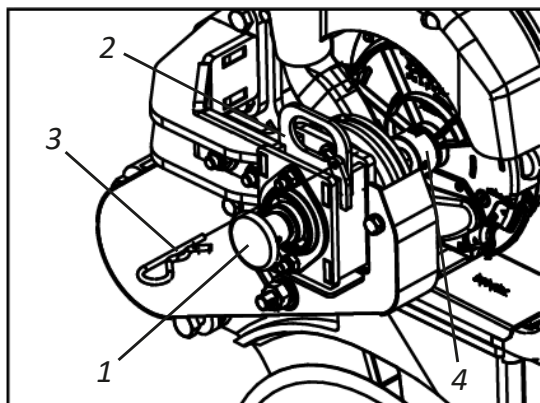

- 04** - Then, remove the lock (6) from point "A", articulate the batcher (7) fixing point "B" in point "A" through the lock (6) passing it partially.

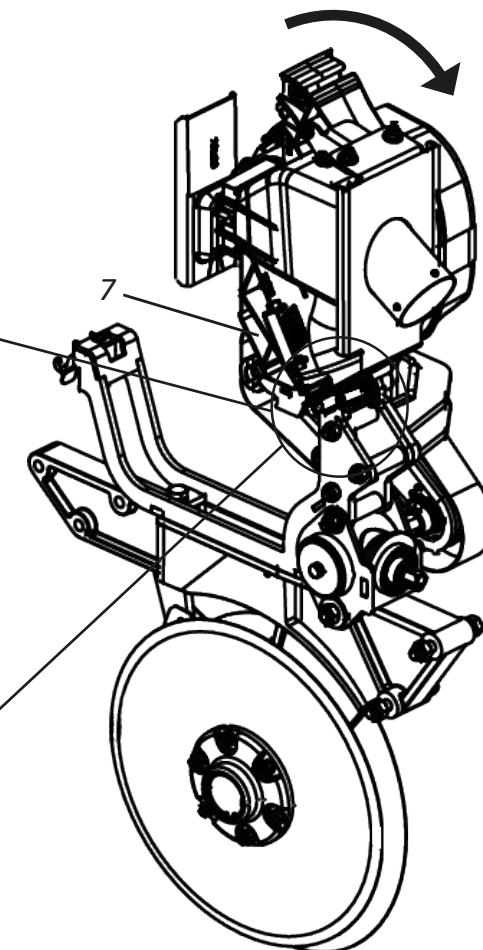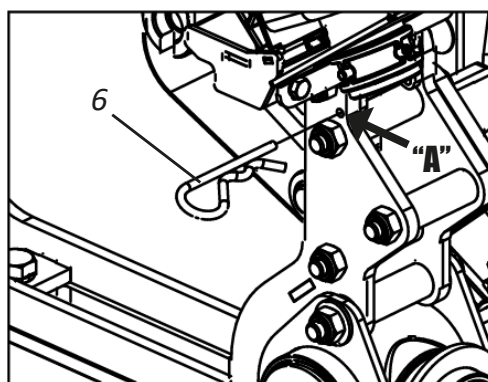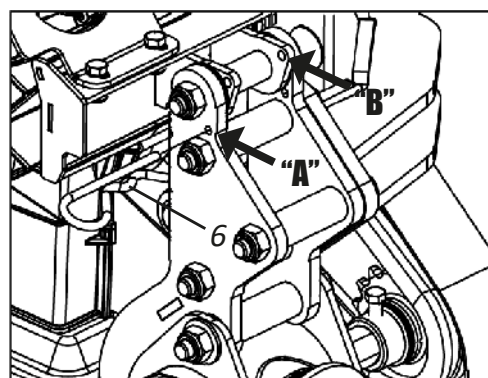


▪ Maintenance

• Batcher maintenance or replacement - Part II

05 - Then, tighten the lock (8) to release the dosing assembly (9) and do the maintenance or replacement.

06 - When servicing or replacing the batcher set (9) is complete, reassemble it.

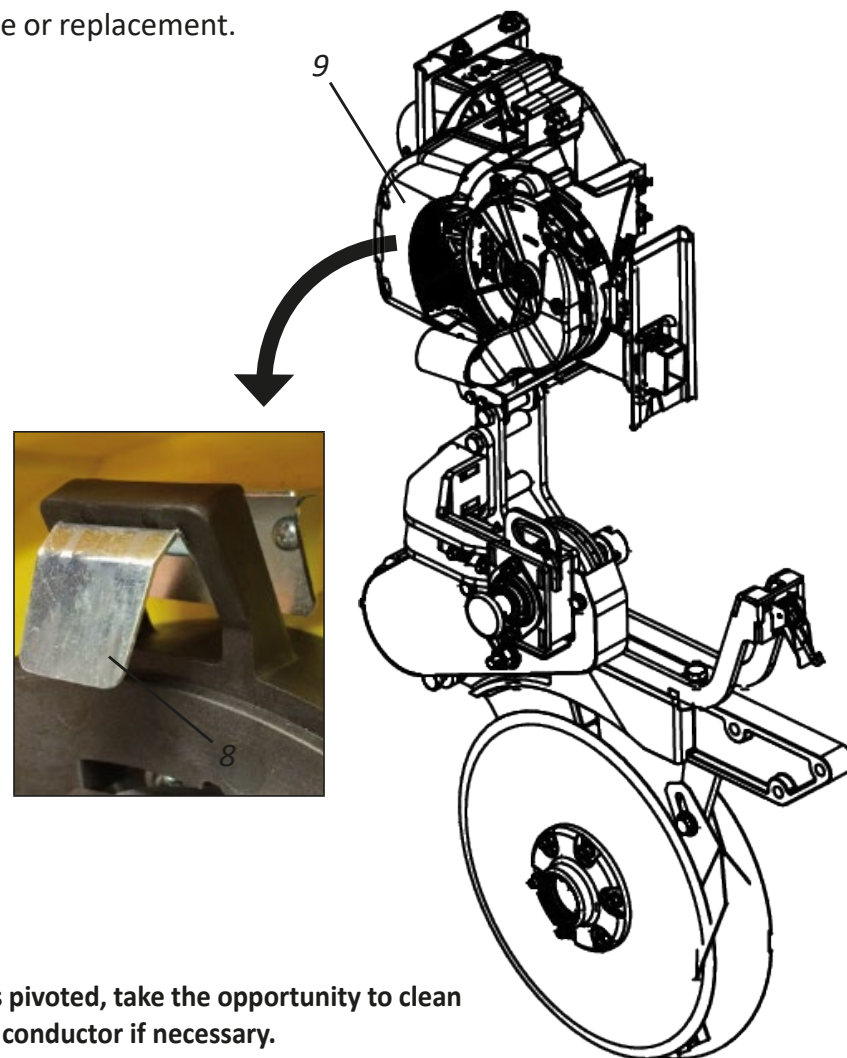

! IMPORTANT

When the batcher (9) is pivoted, take the opportunity to clean the seed sensor on the conductor if necessary.

■ Maintenance

• Operational maintenance - Part I

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
During planting, fertilizer begins to leak from the safety outlets.	Clogged hoses or pieces of plastic in the fertilizer conducting spirals.	Unclog the hose or remove the upper channel that gives access to the spiral, rotate the shaft in the opposite direction until the foreign body that is stuck loosens.
Fertilizer hub shaft does not rotate.	Spiral blocked by wet fertilizer or excess fertilizer in the closed line.	Unclog the spirals, check if you have a loose gutter and the fertilizer may be entering by their sides.
A planting line is less deep than the other.	Different pressure settings on the depth limiting wheels or in the springs of the line.	Set all wheels to equal depth and regulate the pressure of the line springs.
The ridge is too open during planting.	Sticky soil that sticks to the discs or excessive speed of work.	Decreases work speed.
Strange noise when operating or walking with the loaded sower.	Loose wheels or wheel hub.	Re-tighten the wheel nuts. Adjust the wheel hub bearings.
The sower leaves the planting line, sometimes to one side, sometimes to the other, sideways.	Tractor drawbar loose.	Use the pin that comes with the sower. Secure the tractor drawbar in the center hole.
It is not covering the ridge.	Poorly adjusted covering wheels or damp grounds.	Adjust the covering wheel by moving it sideways in relation to the ridge.
The hydraulic cylinders stop operating, lifting the sower and then doesn't lower or vice versa.	Different quick coupler, sphere male type and female needle type or vice versa.	Proceed by changing the quick coupler, placing two of the same type.
Broken seeds.	High planting speed.	Decrease work speed.
	Inadequate disc thickness.	Use suitable disc (hole thickness and diameter).
	Poorly placed disc. The seed sieve is not suitable for the disc used.	Insert the disc properly (note the sentence: THIS SIDE DOWN).
	Using moist seeds.	Use dry seeds.

■ Maintenance

• Operational maintenance - Part II

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
Damaged tires.	Work area with stones, stumps or crop remains with stems that cause tire cutting.	Eliminate the elements that cause damage to the tires before period of use of PPSOLO AIR 3rd SEED BOX - VSET .
	Tires are not inflated, causing deformations.	Maintain proper tire pressure.
Strange noise on wheels.	Loose wheels or wheel set.	Retighten the wheel nuts and adjust the bearing wheel hub.
	Bearings breakage.	Identify the occurrence and replace the damaged parts.
Quick coupling does not fit.	Couplings of different types.	Exchange them for males and females of the same type.
Seeds “double” spaced in dispensing.	Feeder transmission current is skipping the gear teeth.	Adjust chain tension according to the instructions on page 77.
Leak in hydraulic hoses.	Thread sealing material is missing.	Use thread sealant and retighten carefully.
	Insufficient tightening.	Retighten carefully.
	Damaged repairs.	Replace terminals.
Leak in quick couplers.	Insufficient tightening.	Retighten carefully without excess.
	Damaged repairs.	Replace repairs.
Quick couplings do not couple.	Couplings of different brands.	Use couplings of the same brand.
	Mixture of needle couplings with ball couplings.	Always use couplings of the same type.
	System pressure.	Relieve pressure to couple.

▪ Maintenance

• Fertisystem batcher accessories

The Fertisystem feeder is assembled with a level regulator “cross cover” and a worm spring (step 2”).



**LEVEL REGULATOR
CROSS-LID**



**ENDLESS SPRING
(STEP 2’)**

The Fertisystem feeder includes the following accessories: maintenance tube, fixing tube e blocking tube.



**MAINTENANCE
TUBE**




FIXING TUBE



**BLOCKING
TUBE**


• Endless spring

At **PPSOLO AIR 3rd SEED BOX - VSET** the Fertisystem batcher leaves the factory assembled with the endless spring 2” (1).

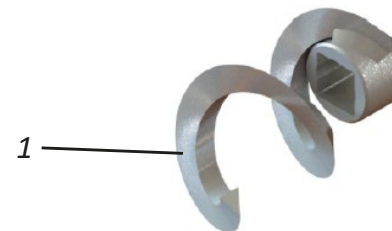

• Level Regulator “Cross Cover”

The Fertisystem dispenser leaves the factory fitted with the “Cross-Lid” level regulator (1). The uniformity and precision in the distribution is due to the level regulator “Cross-Lid” (1), which has the function of canceling the pulsating effect of the endless spring cycle and also controlling the dosage.

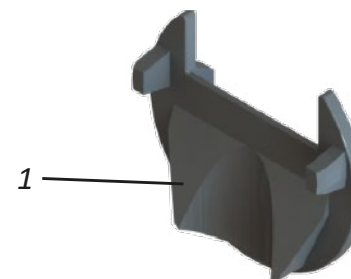

ATTENTION


Never operate without the “Cross-Lid” level regulator (1). Check that it is well positioned in the nozzle.

■ Maintenance


• Maintenance or replacement of the Fertisystem dosing spring

After planting, do not leave fertilizer in the tank. To maintain or replace the worm-spring or to clean or repair the internal part of the Fertisystem batcher, proceed as follows:



01 - Disengage the nozzle (1) through the stainless steel lock (2).

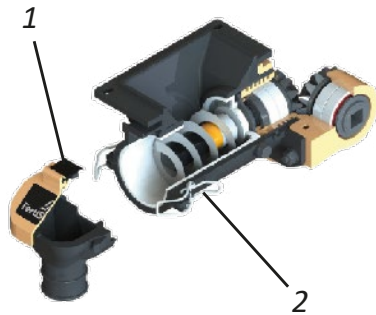

02 - Then, remove the endless spring (3), pulling it through the cord of the fixing tube (4), also removing the locking ring (5).

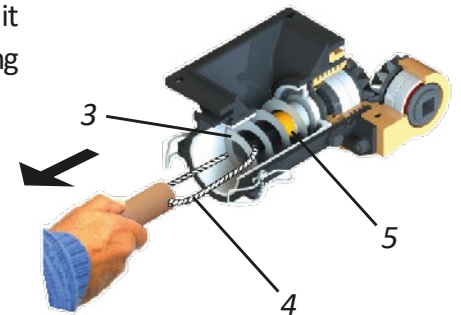

03 - After cleaning, replace the endless spring (3), together with the locking ring (5), through the fixing tube (4), making sure that the endless spring (3) and the locking ring (5) are well positioned at the base of the shaft (6).

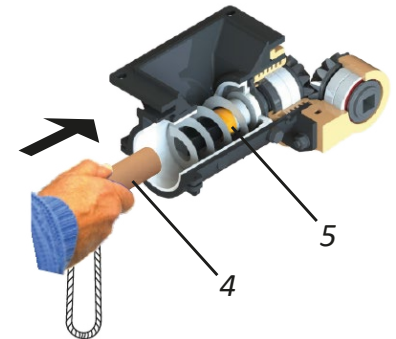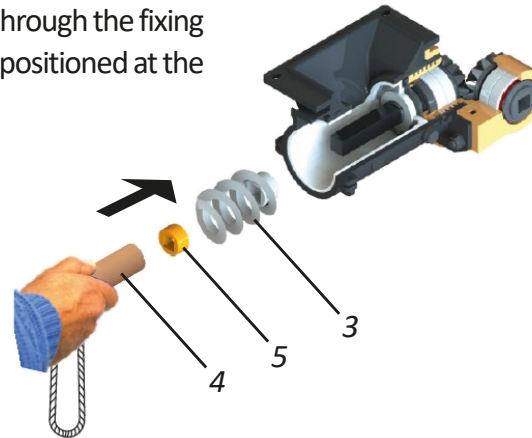


ATTENTION

Keep the worm spring in place with the locking ring. This procedure will avoid damaging the cross cover when not using the seeder with the fertilizer or when transporting the seeder. In case of wear or lack of tightening “pressure” of the lock ring (5), replace it.


▪ Maintenance

• Fertisystem batcher maintenance tube


To maintain or change the endless springs in the Fertisystem feeder without the need to remove the fertilizer from the tank, use the maintenance tube (1), to do this, proceed as follows:

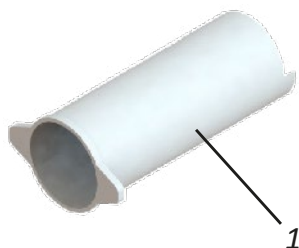

01 - Disengage the nozzle (2) through the stainless steel lock (3).

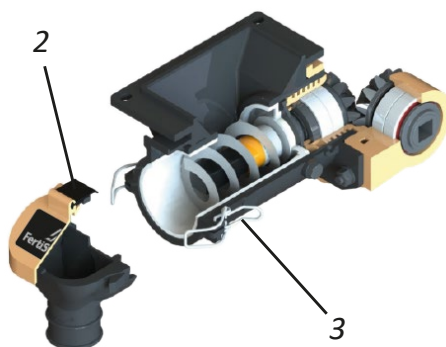

02 - Then, introduce the maintenance tube (1) in rotating movements, promoting the displacement of the fertilizer to the bottom of the batcher. Then perform the necessary maintenance.

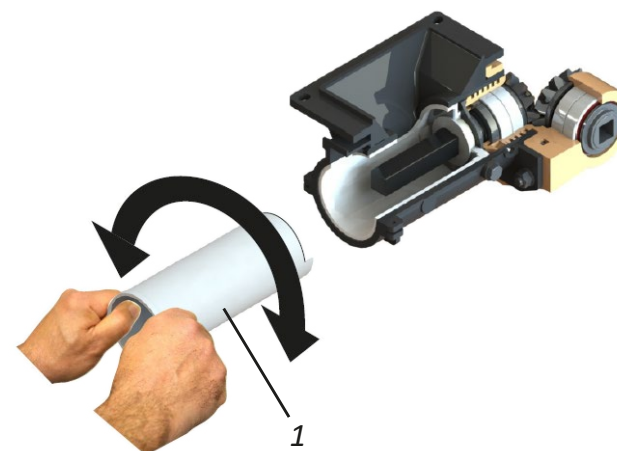

NOTE | The maintenance tube (1) has an end cut angle to facilitate this operation.


■ Maintenance

• Fertisystem Batcher Blocker Tube


PPSOLO AIR 3rd SEED BOX - VSET comes with a blocking tube (1) so that when you need to isolate some planting Rows, fertilizer distribution does not occur.

In order to place the blocking tube (1) into the Fertisystem doser, proceed as follows:

01 - Remove the nozzle (2), the lock ring (3) and the worm spring (4) of the fertisystem conductor (5).

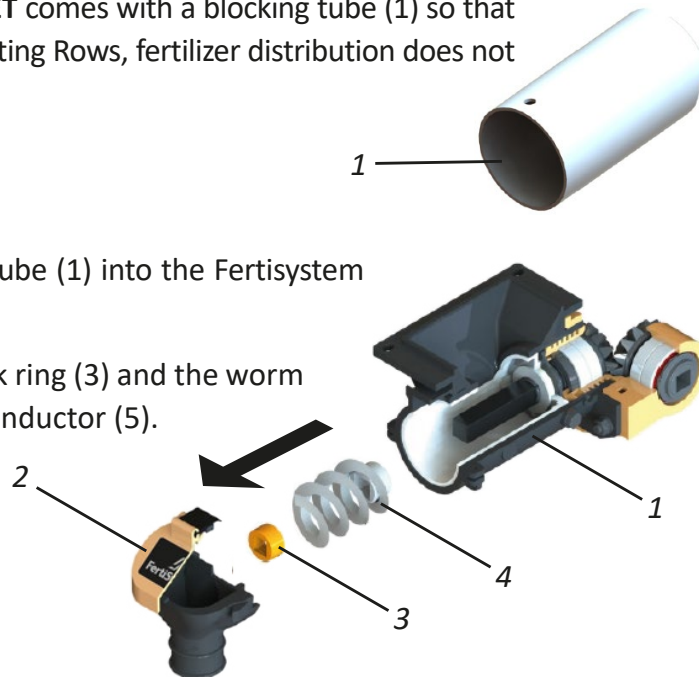

02 - Then insert the locking tube (1).

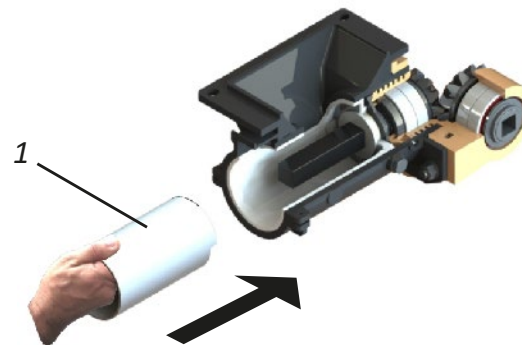

03 - Then, replace the nozzle (2).



• Springs and caps (optional) - Fertisystem batcher

PPSOLO AIR 3rd SEED BOX - VSET leaves the factory with a 2" pitch worm spring and transversal cover (standard), but optionally the seeder can be supplied with a 1" pitch worm spring and a high-flow cover.



**ENDLESS SPRING
(STEP 1')**



HIGH FLOW COVER

NOTE


Always fill the fertilizer tank at the work location. Avoid any kind of impurity in the fertilizer tank. Carry out a measurement of dosage daily.

■ Maintenance

• Cleaning the Fertisystem doser

We consider it mandatory to clean parts and components of the Fertisystem dispenser that maintain direct and indirect contact with fertilizers, since they are highly corrosive and abrasive, and can promote oxidation and destructible chemical reactions, through the effects of acidity, salinization and others, chemical fertilizers.

After planting is complete, disconnect the nozzle (1), the endless springs (2) and wash the sets thoroughly, keeping them free of fertilizers until new use, making the assemblies correctly.

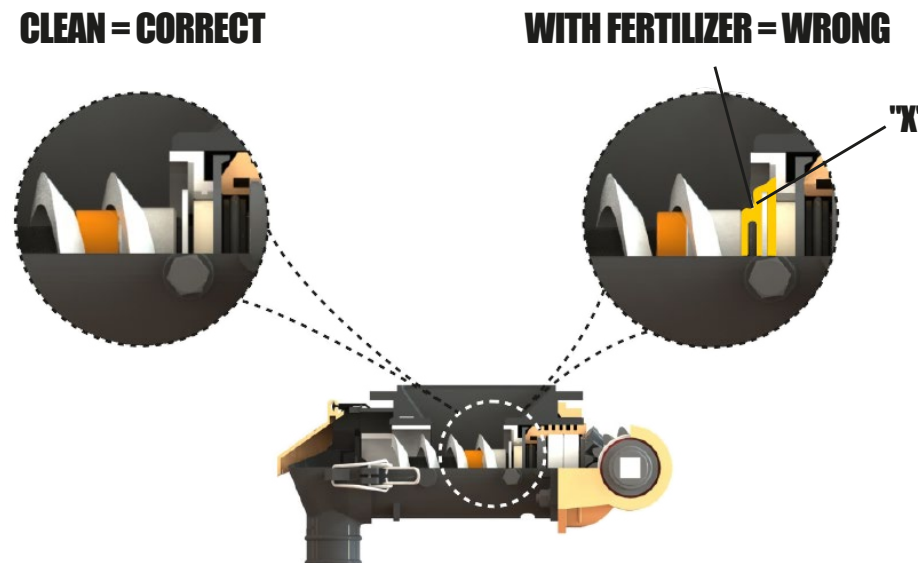

ATTENTION

Make sure that there is no fertilizer in the “X” area between the washers and the sealing felt.



In case of extreme need to use the fertilizer out of specification and/or with excess moisture, perform daily cleaning of the endless springs and other components. Do not carry out maintenance or cleaning in the bearing area, in the endless springs and in the gears while the subsoiler is in motion.

■ Maintenance

• Changing tires

If necessary, change or repair the tires for this, proceed as follows:

01 - First, support the **PPSOLO AIR 3rd SEED BOX - VSET** on its rear through the support bracket (1) so that it is stabilized.

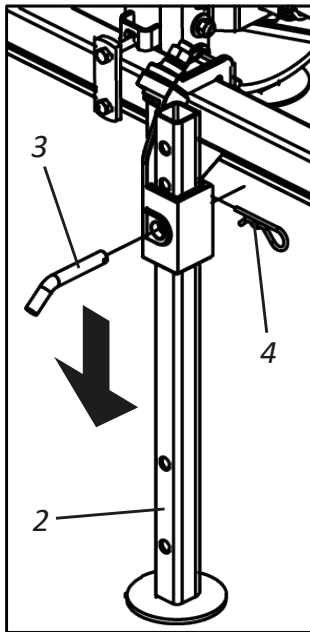
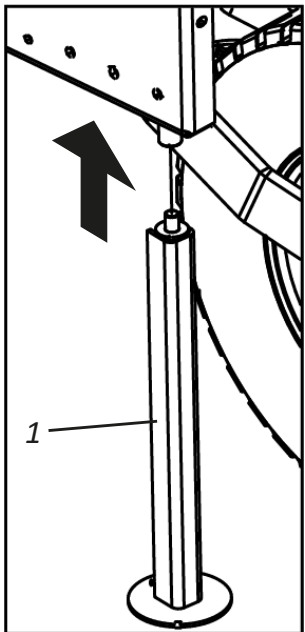


02 - Then, lower the support brackets (2) on the front of the seeder and fix them with the pin (3) and lock (4).

03 - Then, lock the clamp (5) in the wheel support (6) through the screws (7), pressure washer (8) and nut (9).

04 - Then, fully retract the hydraulic cylinder (10) from the central axle (11) to suspend the tire (12) from the ground.

05 - Finally, remove the chain (13), loosen the nuts (14) and the locks (15) to remove the tire (12).

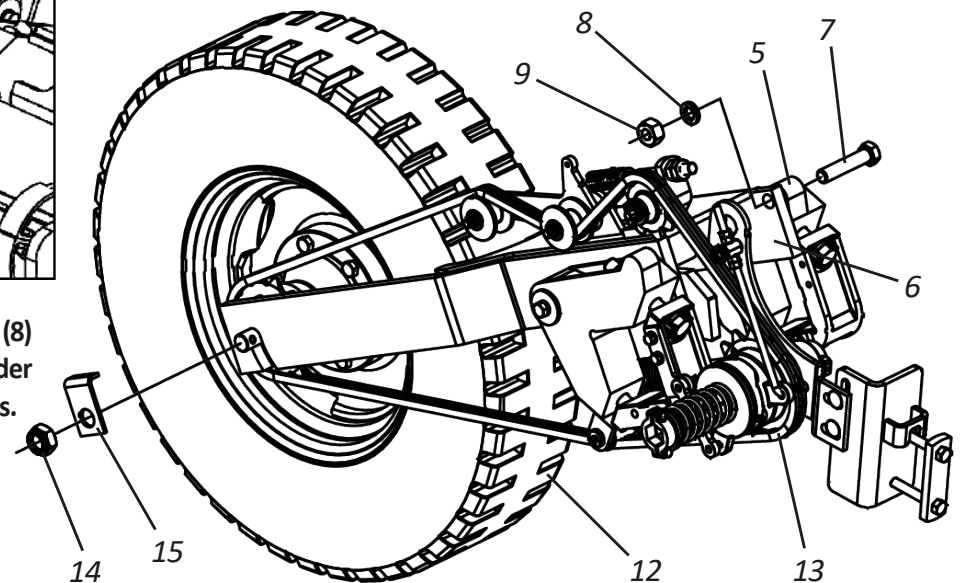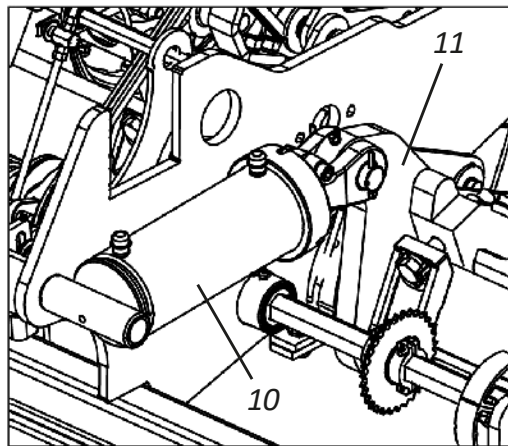

⚠ ATTENTION

At the end of changing the tire, remove the screw (6) lock washer (7) and nut (8) unlocking the clamp (4) of the wheel support (5). Do not work with the seeder without first removing them Ignoring this warning will cause planting failures.

❗ IMPORTANT

Before changing or repairing the tire, make sure that the **PPSOLO AIR 3rd SEED BOX - VSET** is properly supported Failure to do so can cause damage, serious accidents or even death.

▪ Maintenance

• Care

- 01** - Before each work, check the condition of all hoses, pins, screws, bearings, discs, and sections. When necessary, retighten or replace them.
- 02** - The speed of movement must be carefully controlled according to the terrain conditions.
- 03** - **PPSOLO AIR 3rd SEED BOX - VSET** is used in many applications, requiring knowledge and attention during its handling.
- 04** - Only local conditions will be able to determine the best way of operating the **PPSOLO AIR 3rd SEED BOX - VSET**.
- 05** - When assembling or disassembling any part of **PPSOLO AIR 3rd SEED BOX - VSET**, use suitable methods and tools
- 06** - Pay close attention to the lubrication intervals at the different lubrication points of the **PPSOLO AIR 3° DEPÓSITO - VSET**. Observe the lubrication intervals.
- 07** - Always check the parts for wear. If replacement is required, always require original Baldan parts.
- 08** - Keep the **PPSOLO AIR 3rd SEED BOX - VSET** tires calibrated at all times
- 09** - Keep the **PPSOLO AIR 3rd SEED BOX - VSET** discs sharp at all times.

! IMPORTANT

Adequate and periodic maintenance is necessary to guarantee the long life of **PPSOLO AIR 3rd SEED BOX - VSET**.

• Care during planting

- 01** - The fertilizer has great moisture absorption power and this speeds up the oxidation process so, avoid spillage and accumulation of fertilizer during the filling of **PPSOLO AIR 3rd SEED BOX - VSET**.
- 02** - Use a blower, compressed air or broom to remove excess fertilizers from the seeder at the end of the day.
- 03** - To avoid fertilizer effects, protect **PPSOLO AIR 3rd SEED BOX - VSET** by keeping it in the shed or covering it with canvas (in the best possible way) during rain and/or night periods, to protect it from moisture.

■ Maintenance

• General cleaning

- 01** - When storing **PPSOLO AIR 3rd SEED BOX - VSET**, make a general cleaning and wash it completely with water only. Check that the paint has not worn out, if this has happened, apply a general coat, apply protective oil and lubricate the **PPSOLO AIR 3rd SEED BOX - VSET** completely. Do not use burnt oil or other abrasive. At the end of planting, proceed as follows:
- Remove the transmission chains and keep them bathed in oil until the next planting.
 - Remove the hoses by immediately washing them with mild soap and water. Do not use other chemicals.
 - Remove the regulator and articulate the header upwards, locking it.
- 02** - Fully lubricate the **PPSOLO AIR 3rd SEED BOX - VSET**. Check all moving parts of **PPSOLO AIR 3rd SEED BOX - VSET**, if they show wear or looseness, make the necessary adjustment or replacement of the parts, leaving the seeder ready for the next job.
- 03** - After all maintenance work, store the sower in a covered, dry place, properly supported.
- Avoid:
- The discs from directly contacting the ground.
 - That the hydraulic hoses are properly plugged.
- 04** - When connecting or disconnecting hydraulic hoses, do not let the ends touch the ground. Before connecting the hydraulic hoses, clean the connections with a clean cloth without loose threads. **Do not use low!**
- 05** - Replace all damaged or missing stickers, especially warnings. Make everyone aware of their importance and the dangers of accidents when instructions are not followed.
- 06** - After all the maintenance care, store your **PPSOLO AIR 3rd SEED BOX - VSET** on a flat surface, covered and dry place, away from animals and children.
- 07** - Make sure that the deposits are properly covered.
- 08** - We recommend washing the **PPSOLO AIR 3rd SEED BOX - VSET** only with water at the beginning of the work



ATTENTION

Do not use chemicals or abrasives to wash the **PPSOLO AIR 3rd SEED BOX - VSET**, as this may damage its paint and stickers.

▪ Maintenance

• Seeder conservation - Part I


To prolong the life and appearance of the **PPSOLO AIR 3rd SEED BOX - VSET** for longer, follow the instructions below:

- 01** - Fertilizers and their additives are highly corrosive and their formulation is increasingly aggressive to the seeder components
- 02** - Wash and clean all seeder components during and at the end of the work season.
- 03** - Use neutral products to clean the seeder, following the safety and handling guidelines provided by the manufacturer.
- 04** - Always carry out maintenance during the periods indicated this manual.

• Seeder conservation - Part II

The practices and care below if adopted by the owner or operator make a difference to the conservation of the **PPSOLO AIR 3rd SEED BOX - VSET**.

- 01** - Be careful when performing high-pressure washing; do not direct the water jet directly into the connectors and electrical components. Isolate all electrical components;
- 02** - Use only NEUTRAL detergent and water (pH equal to 7);
- 03** - Apply the product, following the manufacturer's instructions strictly, on the wet surface and in the correct sequence, respecting the time of application and washing;
- 04** - Stains and dirt not removed with the products should be removed with the aid of a sponge.
- 05** - Rinse the machine with clean water to remove any chemical residues.
- 06** - Do not use:
 - Detergents with a basic active ingredient (pH greater than 7), can attack/stain the paint on the seeder.
 - **Detergents with acid active ingredient (pH less than 7), act as stripper/remover of zinc coating (the protection of parts against oxidation).**

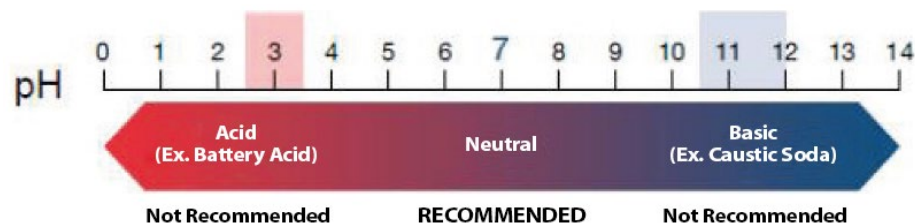

- 07** - Let the machine dry in the shade so that water does not accumulate in its components. Drying too fast can stain your paint.

▪ Maintenance

• Seeder conservation - Part III

08 - After drying, lubricate all chains and greases according to the recommendations in the operator's manual.

09 - Spray all the machine, especially the zinc parts, with protective oil, following the manufacturer's application guidelines. The protective also prevents dirt from adhering to the machine, facilitating subsequent washings.

10 - Observe curing (absorption) time and application intervals as recommended by the manufacturer.

ATTENTION

Do not use any other type of oil to protect the harrow (used hydraulic oil, "burnt" oil, diesel oil castor oil, kerosene, etc.).

IMPORTANT

We recommend the following protective oils:

- Bardahl: Agro protective 200 or 300
- ITWChemical: Zoxol DW - Series 4000


NOTE

Ignoring the above conservation measures may result in the loss of warranty for painted or galvanized components that may be oxidized (rust).

▪ Optional

• Optional accessories - Part I


The PPSOLO AIR 3rd SEED BOX - VSET has optional accessories that can be purchased according to the need for work.

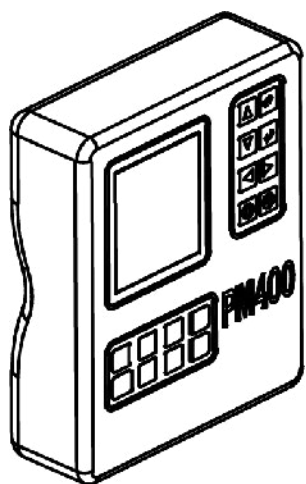


ELECTRICAL SYSTEM - PM 400




**ELECTRONIC DOSING
TABLE - ETD**

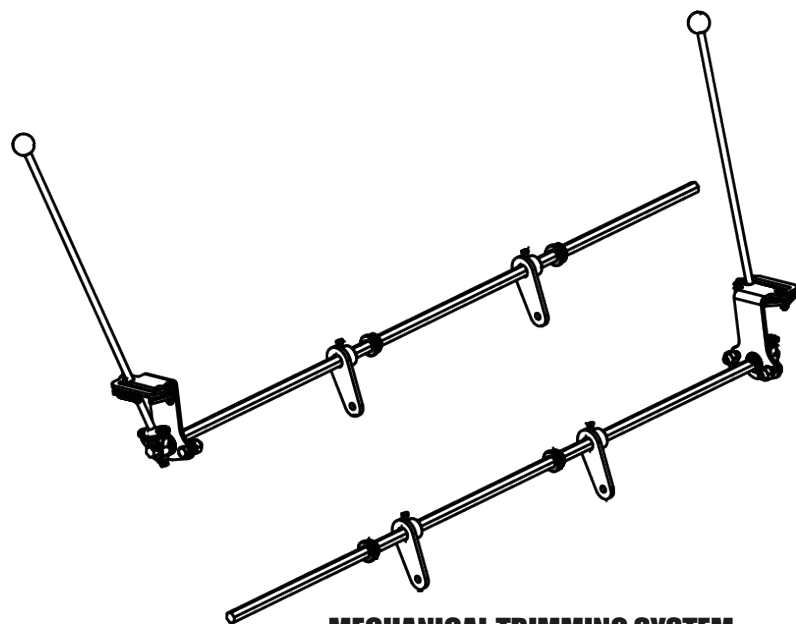

MECHANICAL TRIMMING SYSTEM

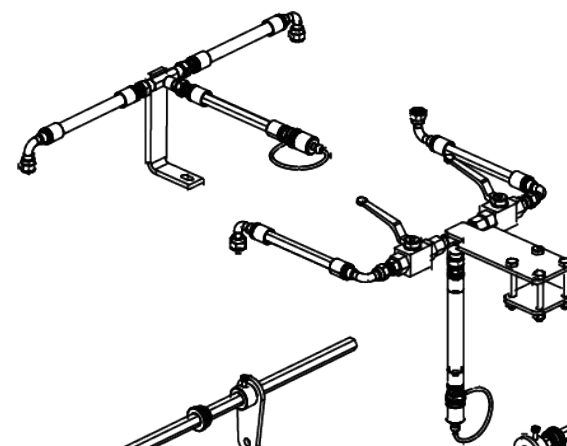


**HYDRAULIC TRIMMING SYSTEM
MECHANICAL RATCHET**

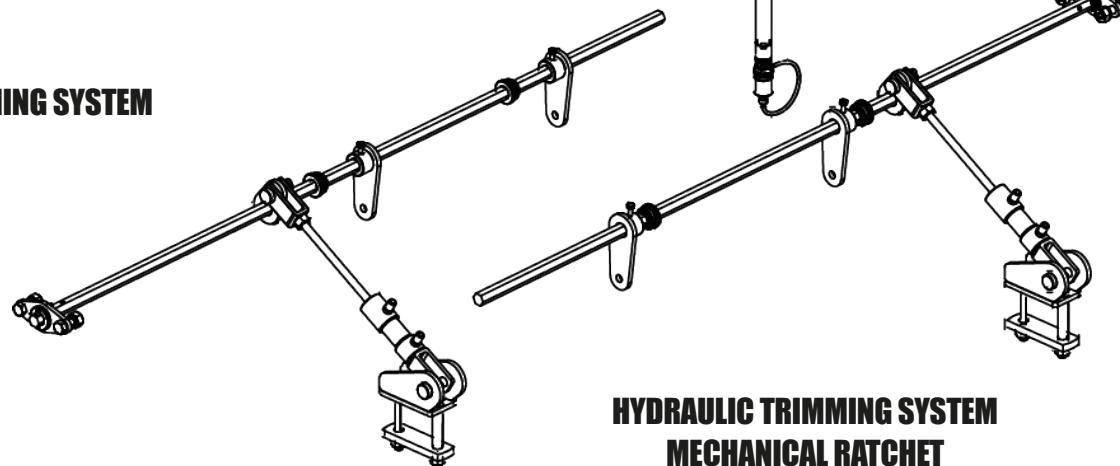


▪ Optional


• Optional accessories - Part II

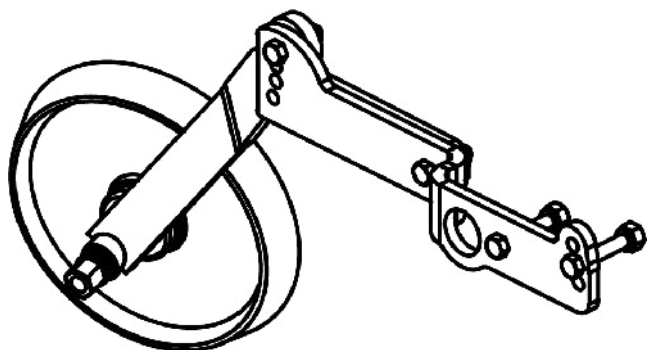


**LEFT COMPACTING WHEEL CPL FOR
DOUBLE DISC**

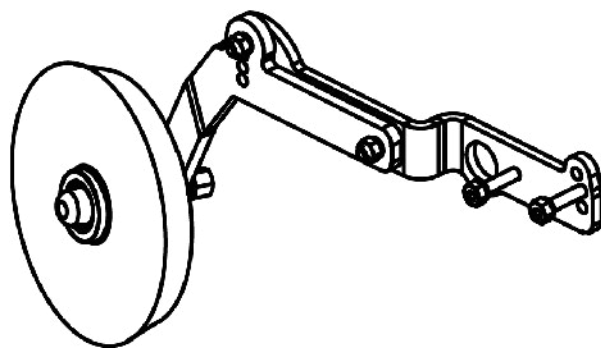


**RIGHT COMPACTING WHEEL CPL
FOR DOUBLE DISC**

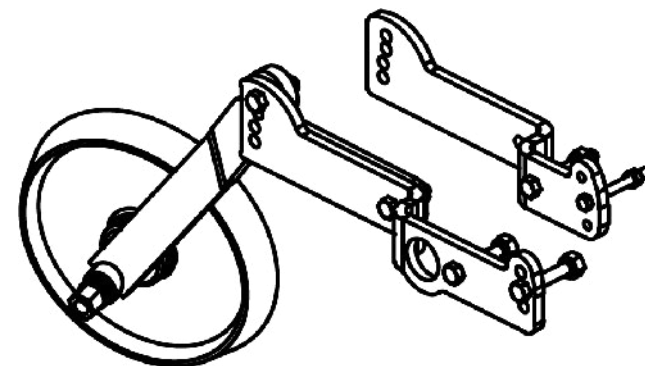


**LEFT COMPACTING WHEEL CPL FOR
DOUBLE DISC AND RIDGER**

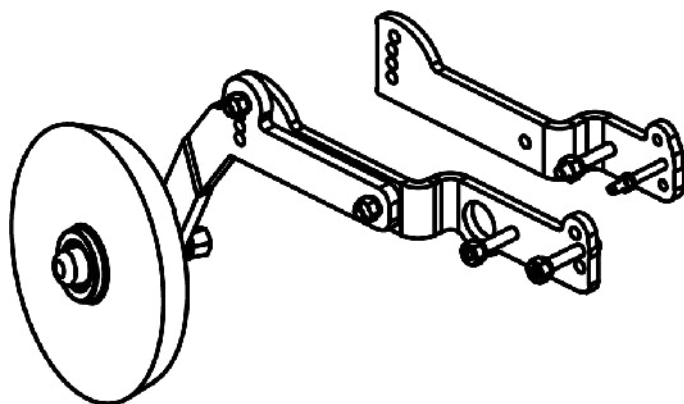


**RIGHT COMPACTING WHEEL CPL
FOR DOUBLE DISC AND RIDGER**

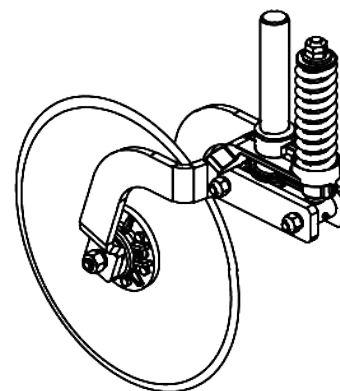


**CUTTING DISC CART
(SMOOTH FLAT DISC 20" X 5 MM)**

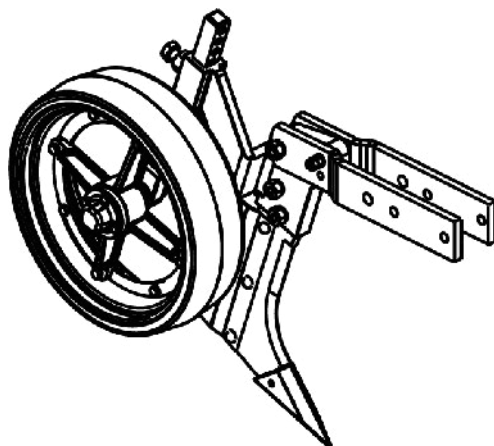▪ Optional**• Optional accessories - Part III**


**RIGHT RIDGER WITH SMALLER BAR
WITH DEPTH WHEEL**

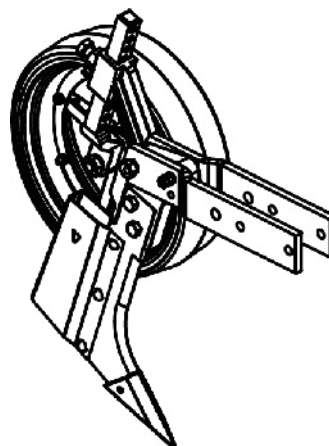


**LEFT RIDGER WITH SMALLER BAR
WITH DEPTH WHEEL**

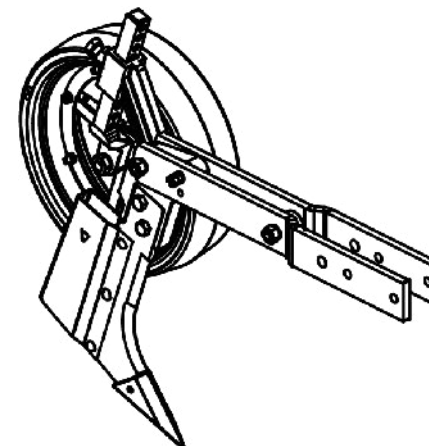

**LEFT RIDGER WITH BIGGER BAR
WITH DEPTH WHEEL**

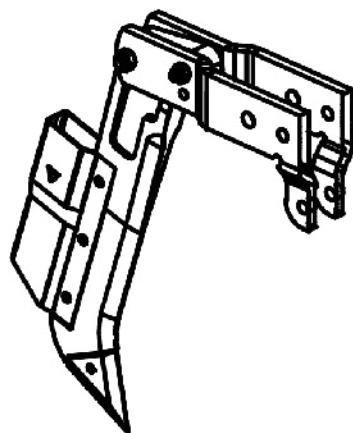


SMALLER ROD RIDGER (THIN)

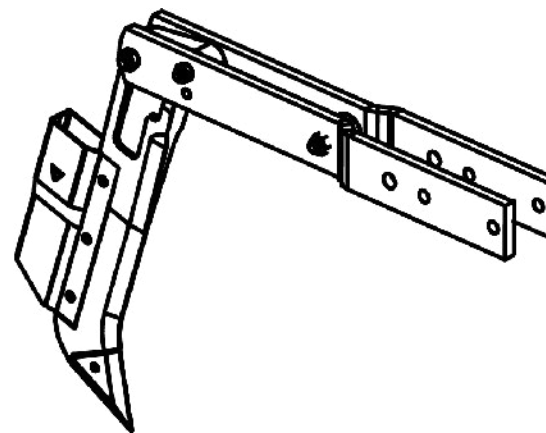


BIGGER ROD RIDGER (THIN)

▪ Optional


• Optional accessories - Part IV

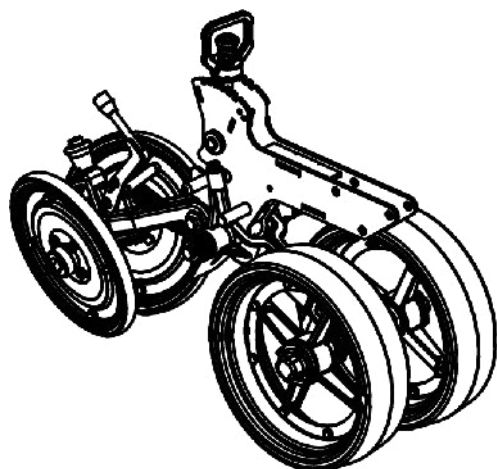

**CART WITH EXCENTRIC/OSCILLATING
DEPTH WHEEL AND "V" WHEEL WITHOUT
PROTECTION RING**

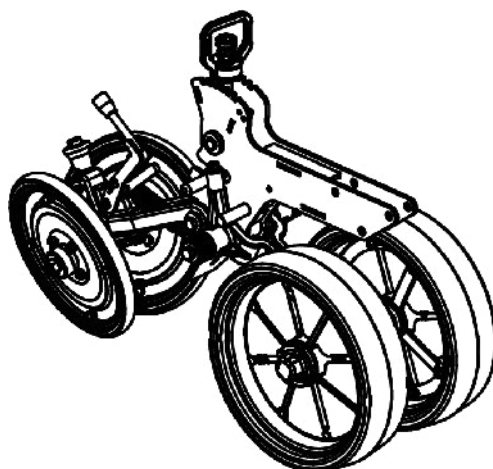

**CART WITH EXCENTRIC/OSCILLATING
DEPTH WHEEL AND "V" WHEEL WITH
PROTECTION RING**

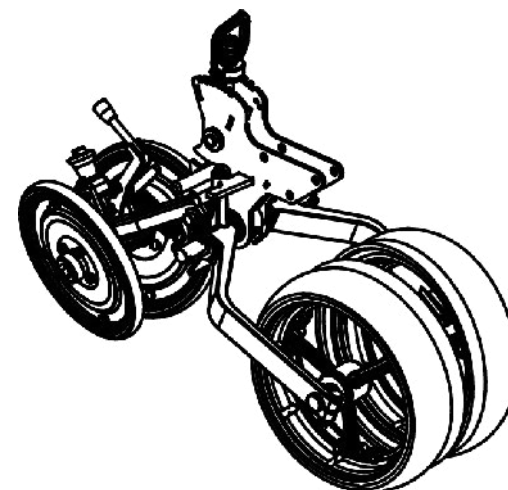

**CART WITH EXCENTRIC/OSCILLATING
DEPTH WHEEL WRAPPING THE HUB AND
"V" WHEEL**

Manual PM 400 - Optional

• PM 400



• Monitor overview




▪ Manual PM 400 - Optional

• Navigation keys - Part I



ON / OFF



Press  to activate the monitor. When turned on, the monitor carries out internal tests, lights up the display, sounds an alarm and determines which sensors are connected to the system.

Pressing the key for one second, when the display is on, the system will be turned off regardless of what is shown on the display.



ALARM CANCELLATION



When pressing the key during normal operation, the monitor recognizes the alarm conditions that are being shown on the display.

When pressing the key during the alarm event, the audible warning will be canceled but the visual information will continue to be displayed.



ENTER



By pressing  you will move from the main operation screen to the main menu or the selected screen. Once the item is selected, when the key  pressed, the navigation mode will be modified to change the data.



NOTE: After having changing the data, the ESC key will accept the change.



▪ Manual PM 400 - Optional

• Navigation keys - Part II



ESC (EXIT)



When pressing the key  for two seconds on the OPERATION SCREEN, the accumulated area located at the top of the screen will be reset. The key  can be used to return to OPERATION mode.



NOTE: After having made the data change, the ESC key will accept the change.



UP ARROW AND DOWN ARROW

On the OPERATION SCREEN the arrow keys are used to manually select the parameters that are being displayed at the top of the display.



NOTE: These keys will be inactive if all configured parameters are being displayed.

When in a settings screen, ARROWS are used to navigate between options or to change a digit/option.



LEFT ARROW AND RIGHT ARROW

On the OPERATION SCREEN the arrow keys are used to manually select the lines that are being displayed at the bottom of the display.



NOTE: These keys will be inactive if all configured parameters are being displayed.

When in a settings screen, ARROWS are used to navigate between options.

▪ Manual PM 400 - Optional

• Settings keys - Part I



SETTING THE PLANTER

This key is used to set:

- Number of lines;
- Line spacing;
- Planter width (optional)
- Line status (seed, fertilizer, blocked or disabled).

See “Planter Configuration” for more information.



SETTING THE TRAVEL SPEED

This key is used to:

- Perform the travel speed calibration;
- Enter the manual travel speed data (used if there is no speed sensor available);
- Configure the speed limit alarm.

See more information in “Setting the Travel Speed”.

▪ Manual PM 400 - Optional

• Settings keys - Part II



LIMIT CONFIGURATION

This key is used to set:

- Maximum / Minimum Population Variation Limits (optional).
- Estimated target population (optional).
- Population adjustment factor, for sensors that comprise less than 100% of the total seeds (optional).
- Response rate, to increase or decrease the response rate (optional).

See more information in “Limits Configuration”.



DISPLAY AND SERVICE CONFIGURATION

This key is used to:

- Access security functions, line indicators, services and sub-menus;
- Selection of Metric / English units;
- Intensity of the display illumination;
- Alarm volume;
- Font and Icon Size;
- Sound Intensity.

See more information in “Setting the Travel Speed”.

▪ Manual PM 400 - Optional

• Settings keys - Part III



OPERATION

This key is used for the user to return to the OPERATION SCREEN.
See “Operation” for more information.



ACCESSORIES SETTINGS

This key is used to configure the selection of Fan (RPM), Shaft (RPM) or Flow (Grains per minute).
See “Setting the Accessories” for more information.



SEED COUNT MODE

This key takes the user to the SEED COUNTING screen.
This mode allows the user to test the planter before operating in the field and shows the seed count for each row in use.
See more information in “Seed Counting Mode”.



AREA, SPEED, AND DISTANCE MODE


This key takes the user to the SPEED, AREA and DISTANCE screen.
This mode allows the user to use the monitor for operations without planting. This mode is also used to start, to clear the three independent area markers (planting area 1, planting area 2 and total area) and distance (linear meter).
See “Speed Area Mode” for more information.

▪ Manual PM 400 - Optional

• Installation and configuration - Part I

Before shipping, the monitor is tested and inspected to ensure that the unit is operating in full condition and meets all measurement specifications. After unpacking the product, inspect for damage that may have occurred during transportation. Save all packing materials until all inspection has been done. If any damage is found, immediately file a claim with the carrier. Also notify your sales representative.

Install the mounting bracket in the chosen location using suitable tools. Then Install the bracket on the console by sliding it into the slots until the lock fits.

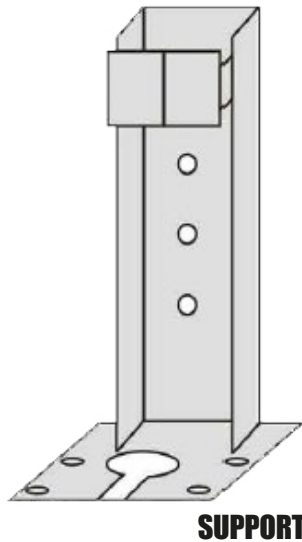

NOTE: The console must not obstruct or interfere with the operation of the tractor.

When mounting on a vertical surface, a strap can be used to retain cables at the bottom of the bracket.



ATTENTION

To prevent damage, make sure that the console is properly seated in the bracket.

▪ Manual PM 400 - Optional

• Installation and Configuration - Part II

The planting monitor has two inputs for connecting the planter's electrical harnesses. Input **(A)** monitors from the 1st to the 24th sensor. Input **(B)** monitors from 25th to 36th sensor.

ATTENTION

The planter configuration and the travel setting the speed are essential for the planting monitor to function.


To perform these settings, see "Setting the Planter" and "Setting the Travel Speed".

If you have an 11-line planter and a monitor with two electrical harnesses with 12 sensors each: The electrical harness for the seed line sensors must be connected to connection **(A)** and the electrical harness for the fertilizer sensors to connection **(B)**.

But if you have an 11-row planter and a monitor with an electrical harness with 24 sensors: You connect the harness to connection **(A)**, sensors 1 to 12 in the seed lines and sensors 13 to 24 in the fertilizer batchers.




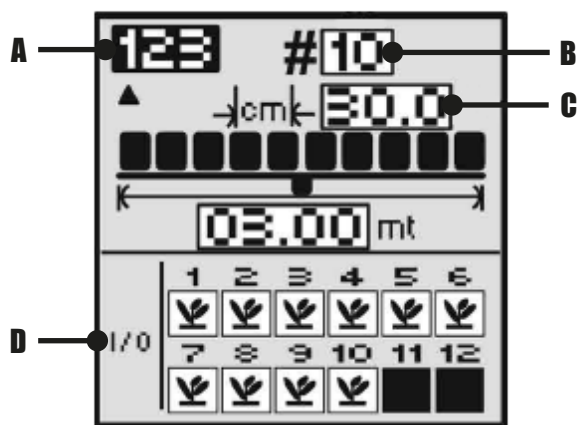
NOTE: You can monitor up to 36 seed lines, using two harnesses or up to 18 seed lines and 18 fertilizer lines.

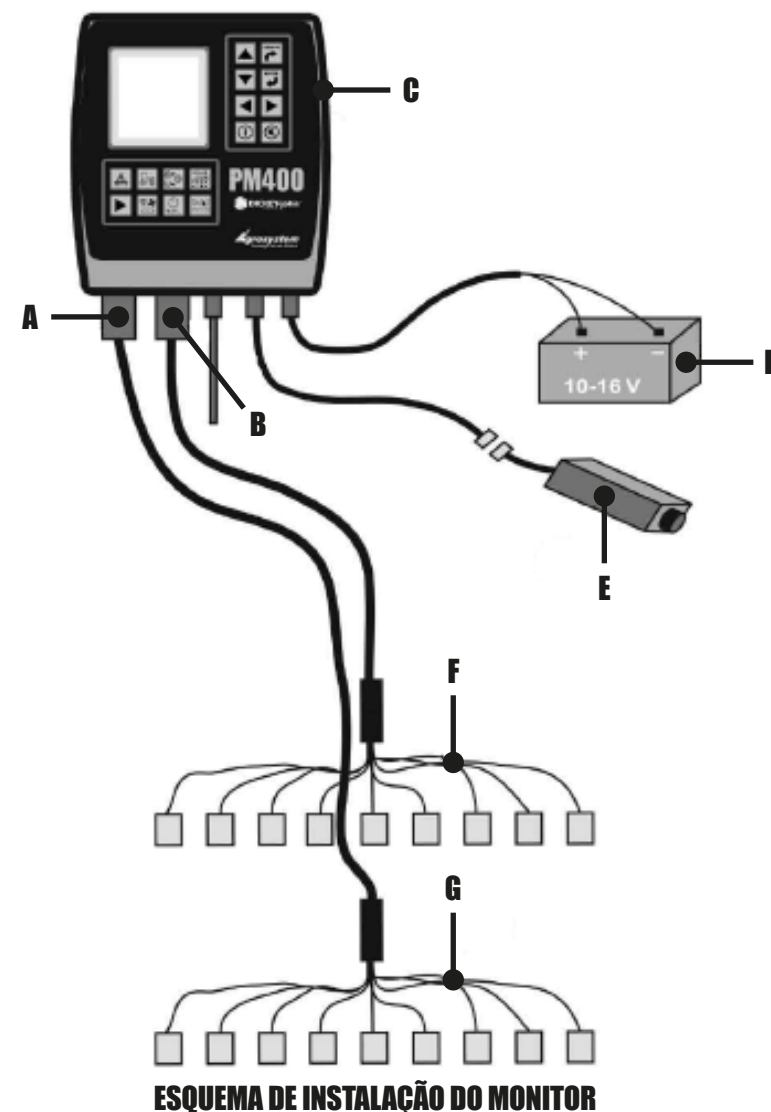





Manual PM 400 - Optional




Setting the planter - Part I


To select the "Planter Configuration" screen, press , and remember that the monitor stores up to 03 different planter configurations.




SCREEN: SETTING THE PLANTER

01 - In field **A** press , select a planter configuration number using   confirm by pressing  again;

02 - In field **B** use   to select the number of lines and press  to change the number of lines;




 **NOTE:** Inform only the number of SEED lines to be monitored.

03 - Use to select digits and   increase or decrease values:

04 - Press  to accept the new number;

05 - In field **C**, line spacing, proceed to field **B**.

06 - In field **D**, use   to select the line to be monitored,

  to specify the type of monitoring and press  to confirm:



- Used to monitor seed dosage;



- Used when the sensor is installed on the line, but it is turned off;




- Used to monitor fertilizer dosage (flow);





- Used when the line is removed.

Manual PM 400 - Optional

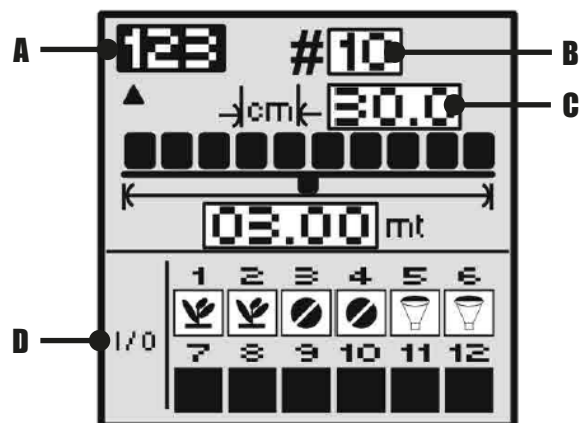Setting the planter - Part II



SCREEN: SETTING THE PLANTER

At the end of the configuration, press  or  (operation) to return to the OPERATION SCREEN.


Setting the travel speed - Part I

To select the Travel SETTING THE SPEED screen, press .

To perform a new setting:


ATTENTION The tractor must be in motion before calibration STARTS.

01 - Select  (B) and press , to start the calibration of 122 meters.

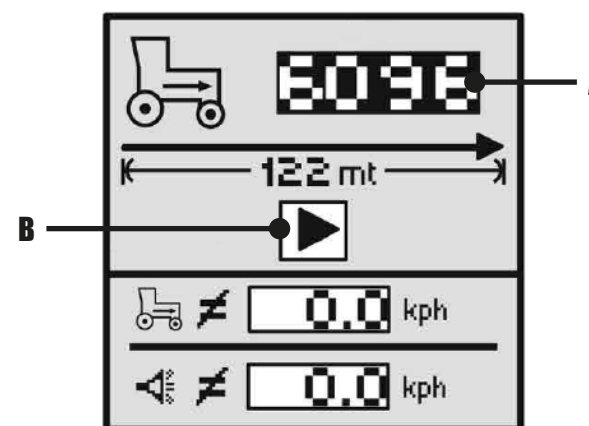


SCREEN: SETTING THE SPEED





NOTE: After calibration has started, the button will switch to  (B).

▪ Manual PM 400 - Optional



• Setting the Travel Speed - Part II


02 - Drive for 122 meters (400 feet) and press  to STOP calibration.



03 - The new calibration factor will be displayed in the window. Press  to accept this value or  to reject the value.


At the end of the configuration press  or  (operation) to return to the PROTECTION SCREEN.



To enter a travel speed constant manually:

01 - Press   to highlight the displacement speed constant value **(A)**.

02 - Press  to modify the constant.

03 - Press   to select the digits, increasing or decreasing the values.

04 - Press  to accept the new number.

When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.



NOTE: It is important to set the travel speed in the planting area.



ATTENTION

Any value other than zero will activate the travel speed. Adjust the speed manually to zero in order to disable.



NOTE: To check if the calibration number obtained is correct, go to the speed/area/distance screen and check the speed indicated on the tractor indicator.

We recommend averaging the values of the 3 calibration constants.



NOTE: Calibration on a smooth soil is different from calibrating a soil with stubble.

Whenever you are planting in soil other than the one performed the calibration, perform the calibration process again.

If your planter is not equipped with a travel speed sensor, the operator can enter a value for planting with simulated speed by manually changing the value of the speed field **(C)**.


In the limit field **(D)**, the operator can enter the limit value for excess travel speed.


▪ Manual PM 400 - Optional

• Setting the Accessories - Part I

To add an auxiliary sensor with its performance characteristics (calibration values, limits, etc.) for monitoring, it must be activated through the calibration constant. If minimum and maximum alarms are desired, limits can be added to the calibrated sensors. The fan, shaft or flow sensor can be monitored with high or low alarm values or no value.

• Shaft and Fan



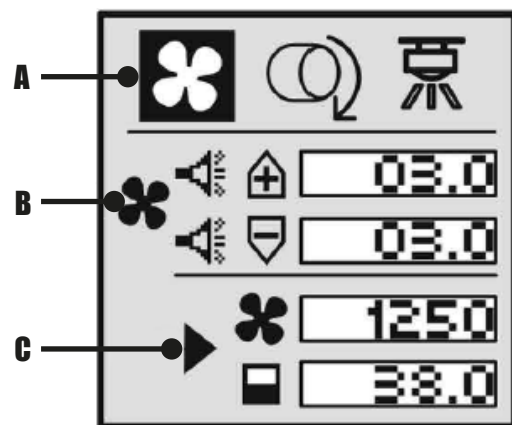

01 - Select the accessory (**A**), go to the START button (**B**) and press . After calibration has started, the button will switch to STOP (**B**) and the factor will start to accumulate.





SCREEN: SETTING THE SPEED

02 - During the rotation count, turn the shaft or fan on the number total rotations.

03 - Stop the calibration by pressing . The factor will stop accumulating.

04 - Using  , select the number of turns box (under the calibration number) and change the number of turns turned with  .

05 - Configure the maximum/minimum limits (**B**).


When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.


▪ Manual PM 400 - Optional

• Setting the Accessories - Part II

• Flow

It is worth remembering that an adequate method is needed to determine the volume of material (scale, graduated glass or a collecting shell) to calibrate the monitor.



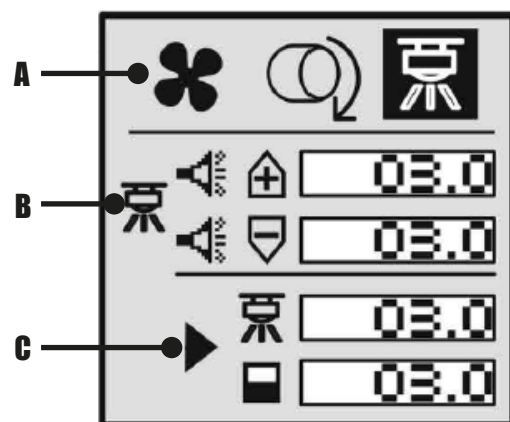

01 - Select the accessory (A), go to the START button (B) and press . After calibration has started, the button will switch to STOP (B) and the factor will start to accumulate.





SCREEN: SETTING THE SPEED

02 - Once the desired quantity is dispensed, stop dispensing. The factor will stop accumulating.

03 - Measure the amount of material that was distributed.

04 - Using  , select the tank volume box (below the calibration number) and change the distributed volume with  .


05 - Configure the maximum/minimum limits (B).

When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.


▪ Manual PM 400 - Optional

• Setting the seed population



Press  to access the SETTING THE SEED POPULATION screen. This screen allows the user to define different population characteristics.

01 - Define the desired target population of seeds **(B)**.

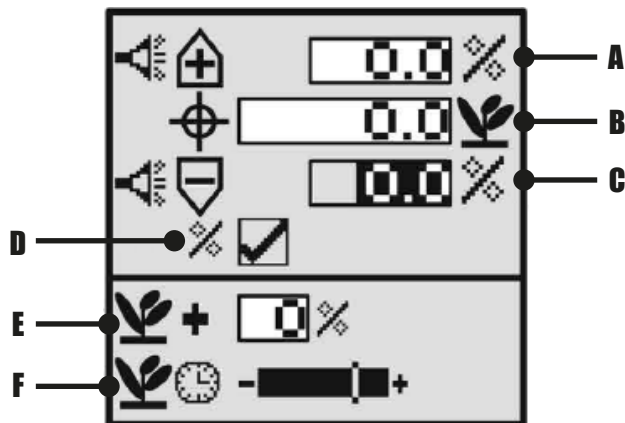

SCREEN: POPULATION CONFIGURATION



NOTE: If no population value is selected, the monitor will use the population average as the calculation basis for alarm and line indicators.

02 - Define the values for the maximum **(A)** and minimum **(C)** limits that be accepted as a percentage or basic values;



NOTE: If you use basic values, it is important to note that the comma indicates thousands.

03 - Define, if necessary, the adjustment factor **(E)** for more or less population;



NOTE: The population adjustment factor is available to provide the result and show the population as close to the real. This is useful when the sensors do not detect double, triple, etc.

04 - In field **(F)**, slide to the right to obtain a high population response rate and to the left for a low population response rate.



NOTE: This feature is used to ensure uniformity in the display of the seed population for planters with few rows versus planters with many rows.

Manual PM 400 - Optional


Setting auxiliary Modes


The lift switch can be used to more accurately monitor the area accumulator. It automatically disables the counter while the planter is not planting, thus avoiding accumulating the non-planted area.



! ATTENTION | Alarms are disabled in these modes.


Speed, Area and Distance

In this mode, the travel speed, the area and the distance covered are displayed. The mode includes start/stop/restart for monitoring.


To enter this mode press the key .


01 - Select button  (B);

02 - Start the count by pressing . After counting has started, the button will switch to  (STOP) and the factor will start to accumulate;

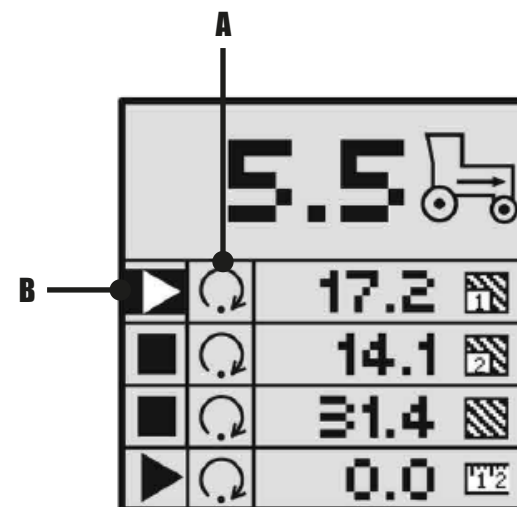




SCREEN: SPEED, AREA AND DISTANCE

03 - Press  (the count will pause).

04 - Press  again. The factor accumulate again.

To reset the counter:

01 - Press   to select the (RESET) button .

02 - Press .

Manual PM 400 - Optional


Seed Count


The seed counting mode can be used to determine the performance of the rows when operating the planter in stationary mode.


To enter this mode press the key  .

01 - Select button  (B);


02 - Start the count by pressing  . After counting has started, the button

will switch to  (STOP) and the factor will start to accumulate;

03 - Press  (the count will pause).



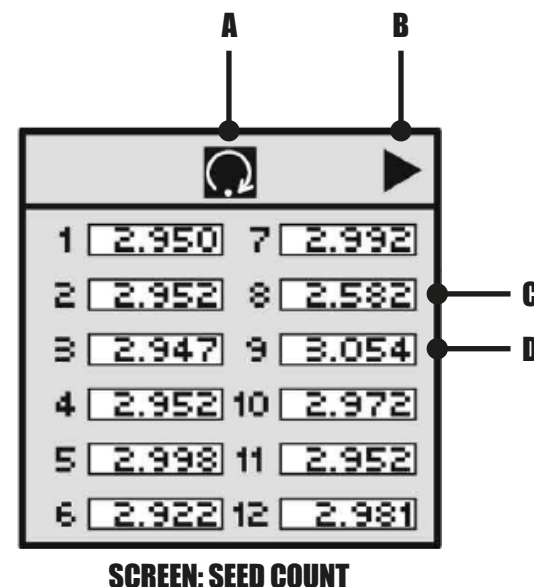

04 - Press  again. The factor accumulate again.



In the example opposite, line 8 (C) is marking less seeds than desired, while in line 9 (D) it is marking more seeds.



To reset the counter:

There are two ways to reset the counter.



01 - Press   to select the (RESET) button  and press  ;

02 - Press  to exit seed counting mode and press  .


Manual PM 400 - Optional

Setting the Display - Top Half of the Operation Screen

Through the user interface settings it is possible to select the functions that can be displayed on the screen. If more functions are selected than the screen availability, then the


keys   are used to scroll between the functions, and it is possible to view up to 25 functions. See the example. If 8 functions are selected:


- Average Plant Population.
- Travel Speed.
- Planting Area 1.
- Total Area.
- Fan RPM.
- Maximum/Average/Minimum Population.
- Spacing between seeds.
- Checking Seed Variation by Distance.

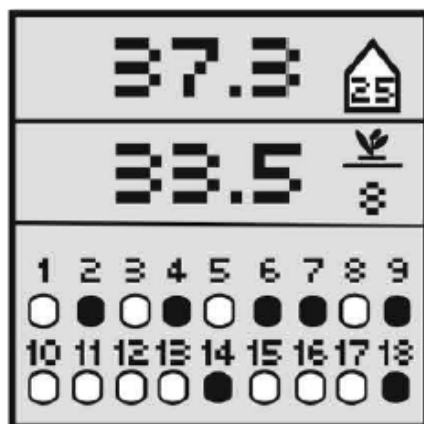


SCREEN: TOP DISPLAY


If the screen is set to display 3 functions, the operation screen will display functions 1, 2 and 3.

When  is pressed, the screen will show functions 2, 3 and 4.

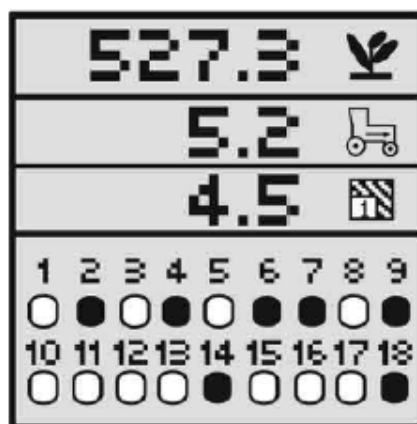

SCREEN: TOP DISPLAY


The next touch on the  screen will show functions 3, 4 and 5. Returning to item 1 when the screen is showing functions 7, 8 and 1.

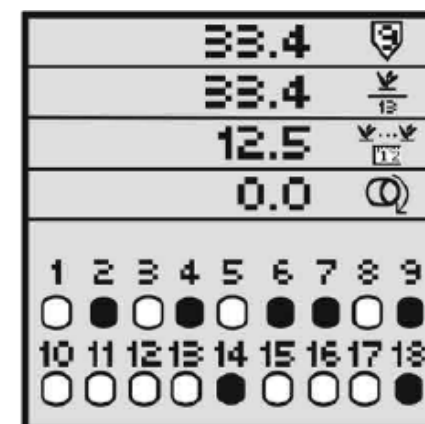


SCREEN: TOP DISPLAY


Manual PM 400 - Optional


• Number of Functions to Display


01 - Press  to enter the display settings screen;

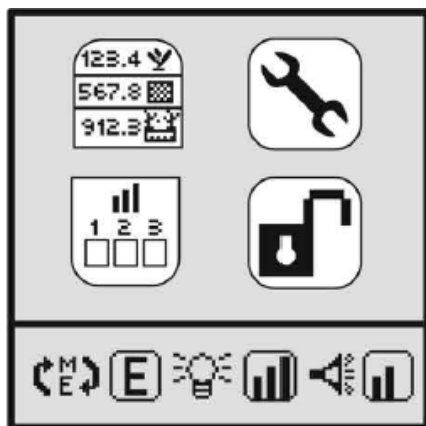



SCREEN: TOP DISPLAY SETTING

02 - Press  to enter the settings screen;

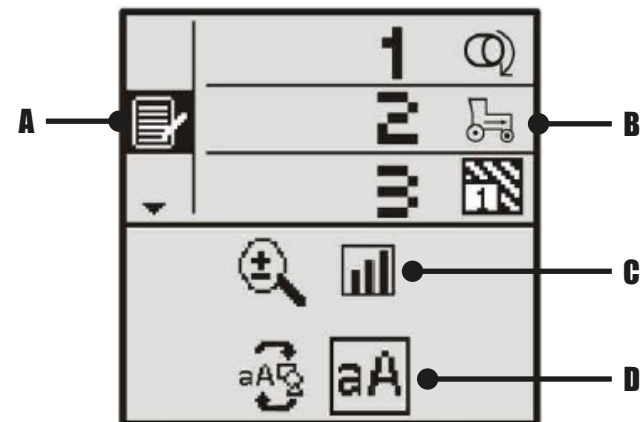03 - Select the functions to display option (A) and press  ;





SCREEN: NUMBER OF FUNCTIONS

04 - Use the arrows   to choose the functions (B) that will be visible on the operation screen;

05 - Select the option of the number of functions to display (C);



06 - Press  ;

07 - Use   to change the number of functions to display on the screen.

08 - Select the graphic/text mode (D);

09 - Press  ;


10 - Use   to change mode.

When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.

Manual PM 400 - Optional


Setting the Display - Lower Half of the Operation Screen

The number of connected lines shown in the lower half of the screen is defined by the user, thus varying the size of the numbers.

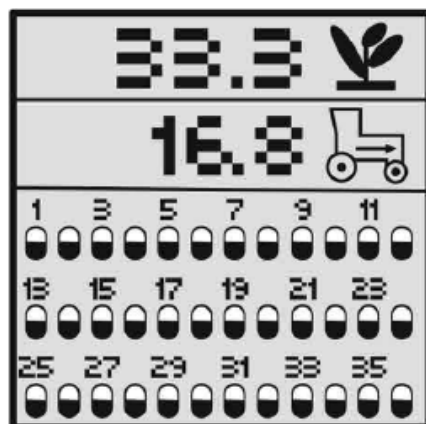

SCREEN: GRAPHIC WITH 36 LINES


The monitor will automatically count through the lines at 3-second intervals when the line is connected.

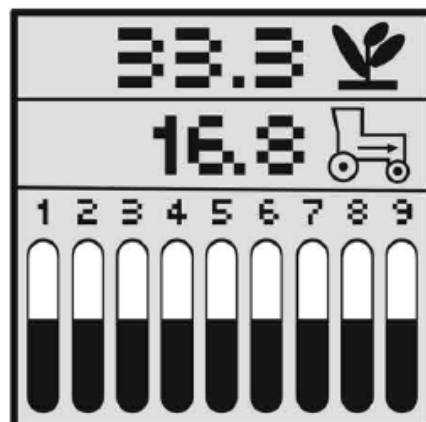

SCREEN: GRAPHIC WITH 09 LINES




The operator can use the navigation buttons to manually select which line to monitor. Automatic counting will restart in 10 seconds after manual selection.

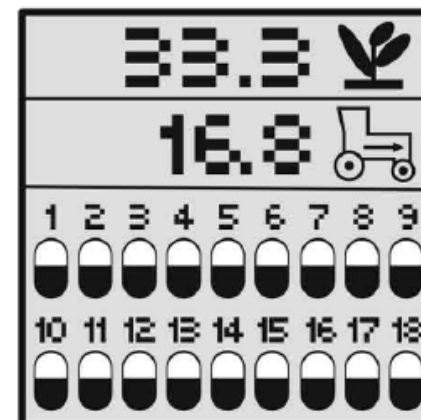


SCREEN: GRAPHIC WITH 18 LINES



▪ Manual PM 400 - Optional

• Indicator type to display

01 - Press  to enter the display settings screen.

02 - Select  to enter the settings screen and choose the option to display the indicator;

03 - Press  ;

04 - Use   to change the indicator mode:



- Bar chart



- Symbols





- Symbols flashing in proportion to the planting rate




- Cleaning pressure gauge

05 - Select the option of the number of indicators to display **(A)** on the operation screen;


06 - Press  ;

07 - Use   to change the number of indicators to display **(A)** on the operation screen.

When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.


Manual PM 400 - Optional


Setting the Measurement System, Display, Lighting and Alarm Volume

Press  to configure the measurement system, display illumination and alarm volume.





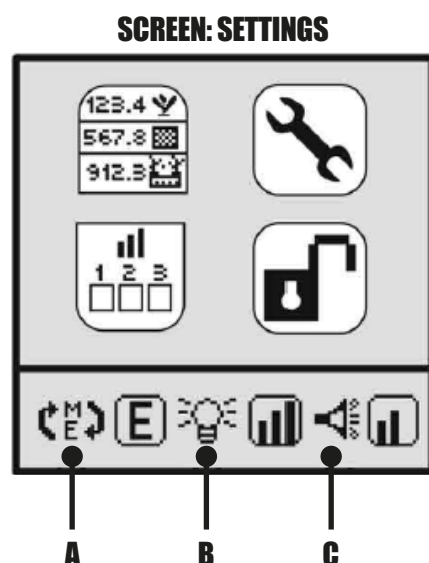

NOTE: At the bottom of the screen are icons for settings.






01 - Press  to configure the measurement system, the display lighting the volume of the alarms.




02 - Switch between METRIC and ENGLISH as desired;



03 - Press  to accept the new configuration;


04 - Select the display lighting icon **(B)** using   and press  ;



05 - Use   to select the lighting level of the display. There are 03 lighting levels that can be chosen.

06 - Press  to accept the new configuration;

07 - Select the alarm volume icon **(c)** using   and press  ;

08 - Use   to select the alarm volume level. There are 03 volume levels that can be chosen;

09 - Press  to accept the new configuration.

When the new values have been entered, press  or  (operation) to return to the OPERATION SCREEN.

Manual PM 400 - Optional

Setting the Security Password - Part I


The monitor's security system allows a security password to be entered, protecting the system from access by unauthorized persons to change settings data.



NOTE: A screen list allows the operator to lock screens individually to ensure they are not modified.




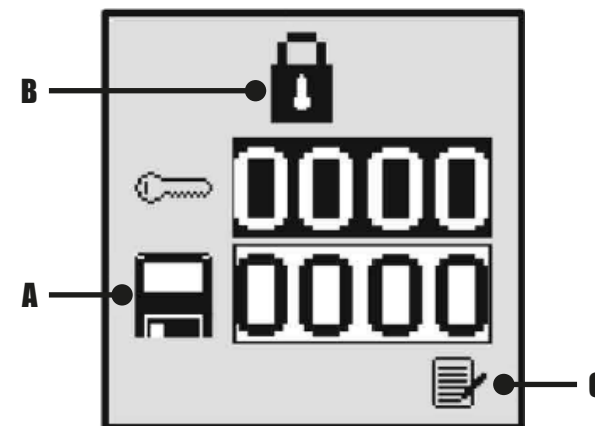
Press  to enter the display settings screen and choose  :

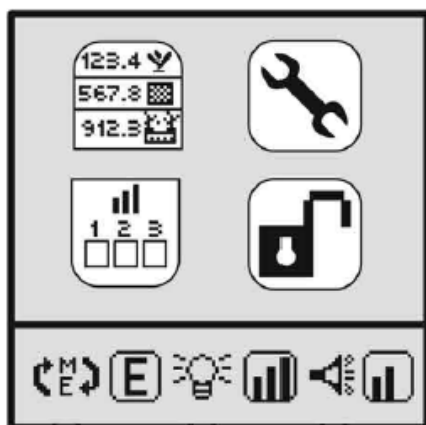

SCREEN: DISPLAY CONFIGURATION




01 - Select the disk icon (A) using   ;



SCREEN: PASSWORD SETTING




02 - Press  to enter the password;




03 - Modify the digits with   and press  to accept the new password;





04 - To lock the screens individually, select the icon (B) and press  to enter the list of screens;


Manual PM 400 - Optional

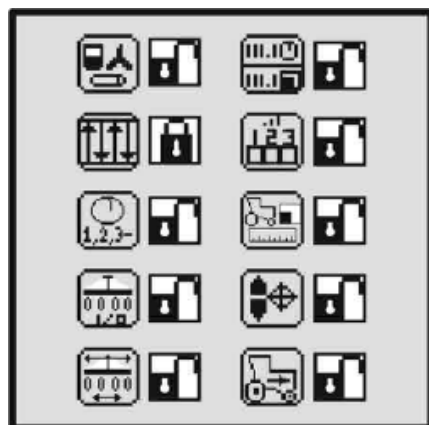
Setting the Security Password - Part II



SCREEN: PASSWORDS BY FUNCTION


05 - Using   , lock or unlock the desired screens, closing or opening the lock icon next to each screen;

06 - Press  to return to the password screen;

07 - Select the lock (c) and press  to switch from unlocked to locked. The selected screens will be locked and you will need to enter the password to make the changes.


General Information on Function Monitoring - Part I

The operator can choose 2, 3 or 4 functions for simultaneous monitoring and can select several others to be viewed.

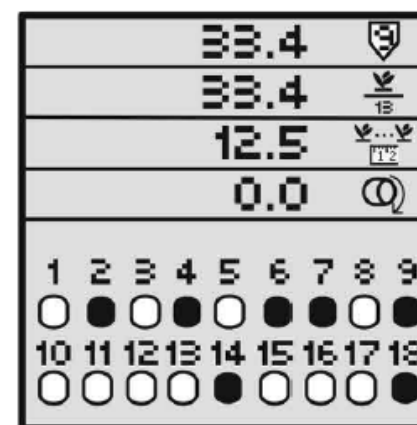

SCREEN: DISPLAY

The monitor's operation screen provides monitoring functions. No matter where the user has navigated in the settings screens, security or

auxiliary modes, pressing the key  repeatedly the system will return to the operation screen. The operation screen is divided into two halves, upper and lower.

The upper half provides the user-definable output parameters (population, area, speed, etc.) while the lower half is dedicated to line information.

▪ Manual PM 400 - Optional

• General Information on Function Monitoring - Part II



NOTE: For more information and how to configure the operation screen, see “Settings on the Operation Screen”.



AVERAGE PLANT POPULATION

The function shows the average plants per row in seeds per hectare or seeds per acre that are set for population. The population response rate and population adjustment can be modified on the target settings screen.



NOTE: This function can be identified with a symbol or text, depending on the text/graphic setting.



MAXIMUM/AVERAGE/MINIMUM POPULATION

The function alternates the display in minimum, average and maximum population every 2 seconds, indicating the corresponding line.

When maximum or minimum populations are being shown, the corresponding symbol is shown with the line number.



LINE POPULATION CHECK

The function shows the population of each row of the planter. The monitor switches between the active lines every 2 seconds. After the last line is displayed, the monitor returns to the first active line and starts another verification sequence.



SPACE BETWEEN SEEDS

The function shows variation in seed spacing.

This function can be identified with a symbol or text, depending on the text/graphic setting.



MAXIMUM/AVERAGE/MINIMUM SPACING

The function switches the display in minimum, medium and maximum spacing every 2 seconds.

When maximum or minimum spacing is being shown, the corresponding symbol is shown with the line number.

▪ Manual PM 400 - Optional

• General Information on Function Monitoring - Part III



CHECKING SPACE BETWEEN SEEDS

The function shows the spacing between the seeds of each row. The monitor switches between the active lines every 2 seconds. After the last line is displayed, the monitor returns to the first active line and starts another verification sequence.



SEED VARIATION BY DISTANCE


The function shows the variation of the seed population of each row of the planter in spacing of seeds by distance according to the configuration. This function can be identified with a symbol or text, depending on the text/graphic setting.



MAXIMUM/AVERAGE/MINIMUM SEED VARIATION BY DISTANCE

The function switches the display in minimum, average and maximum variation every 2 seconds.

When maximum or minimum variations are being shown, the corresponding symbol is shown with the line number.

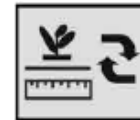

CHECKING SEED VARIATION BY DISTANCE

The function shows the variation between the seeds of each row. The monitor switches between the active lines every 2 seconds. After the last line is displayed, the monitor returns to the first active line and starts another verification sequence.



PLANTING AREA 1

The function shows the planting area in hectares or acres, depending on the selected unit.

This function will identify a planting area chosen for marking, where it can be reset or stored.

It can be identified with a symbol or text, depending on the text/graphic setting.

▪ Manual PM 400 - Optional

• General Information on Function Monitoring - Part IV



PLANTING AREA 2

The function shows the planting area in hectares or acres, depending on the selected unit.

This function will identify another planting area chosen for marking, as the operator will be able to choose any area, regardless of Planting Area 1, and may also zero or store that area.

It can be identified with a symbol or text, depending on the text/graphic setting.



TOTAL PLANTING AREA


The function shows the total planting area in hectares or acres, depending on the selected unit.

The Total Area can also be reset to zero, and can start marking again.

This function can be identified with a symbol or text, depending on the text/graphic setting.



NOTE: The Total Planting Area is stored in the Tools option in the “Display

and Service Settings” menu  .



DISPLACEMENT SPEED

The function shows the displacement speed of the planter in Miles per hour (mph) or Kilometers per hour (Km/h), depending on the selected unit.

This function can be identified with a symbol or text, depending on the text/graphic setting.



AREA PER HOUR

The function shows the area rate per hour in hectares per hour (Ha/h) or acres per hour (AC/h), depending on the selected unit.

This function can be identified with a symbol or text, depending on the text/graphic setting.




FAN RPM

The function shows the fan speed in revolutions per minute (rpm).

This function can be identified with a symbol or text, depending on the text/graphic setting.

▪ Manual PM 400 - Optional

• General Information on Function Monitoring - Part V

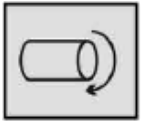

SHAFT RPM

The function shows the rotation of the shaft in revolutions per minute (rpm). This function can be identified with a symbol or text, depending on the text/graphic setting.



FLOW

The function shows the material flow rate in gallons per acre (g/ac) or liters per hectare (l/ha).

This function can be identified with a symbol or text, depending on the text/graphic setting.

• Alarms

Two audible alarm beeps are emitted during navigation or data entry indicating some illegal operation or wrong keystroke.

The warning screen for illegal operation appears on the display, informing the operator of the type of problem.

Every audible alarm is accompanied by a visual alarm, which informs the type of problem that is occurring

Whenever an audible warning or a warning screen appears on the display, it indicates that a problem is occurring. Correct the problem before continuing planting.

ATTENTION




The key  can be used to cancel this alarm, but not to solve the problem.

• Alarm Types - Part I

• Line Block

When the fertilizer line becomes clogged or the seed falls is blocked, two alarm beeps are emitted and the warning screen shows the lines that are in trouble.

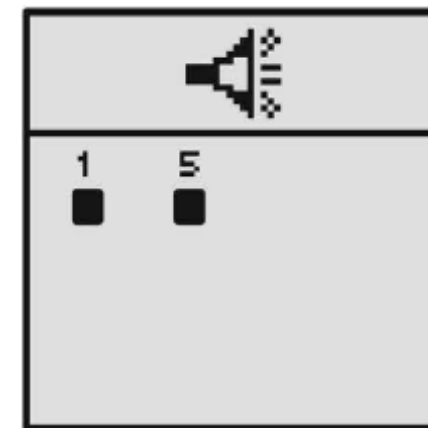


SCREEN: LINE BLOCK

▪ Manual PM 400 - Optional

• Alarm Types - Part II

• Failure on All Lines


Eight audible alarm beeps are heard and the failure warning screen on all lines will be displayed, which may indicate the planter's lift.

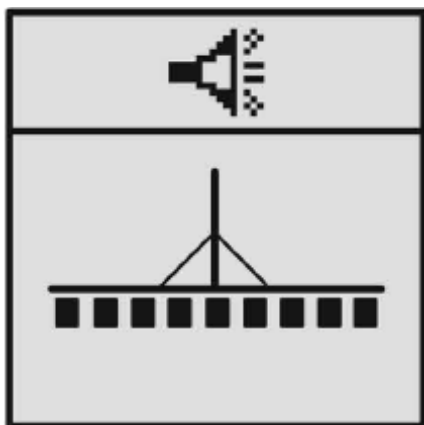



SCREEN: LINE FAILURE

• High/Low Population Limits Exceeded

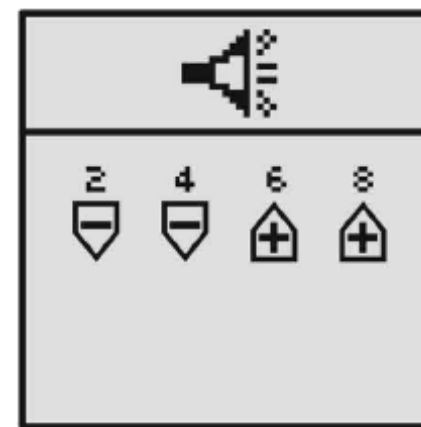The alarm sounds a whistle-like sound and the limit exceeded warning screen is displayed.



SCREEN: UPPER AND LOWER LIMITS

The symbols shown on the screen alert you if the limit has been exceeded  for (more) or for  (less) and the numbers indicate which seed lines have exceeded the limits.


▪ Manual PM 400 - Optional

• Alarm Types - Part III

• Accessory High/Low Exceeded (Optional)


The alarm sounds constantly until the symptom is resolved and the limit exceeded warning screen is displayed:

- Warning display of fan speed limit exceeded;

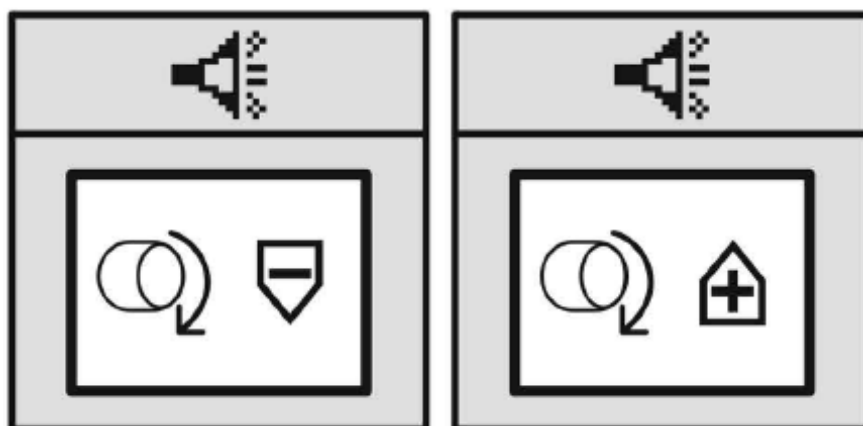


SCREEN: FAN ROTATION LIMIT

- Warning display of shaft rotation limit exceeded;

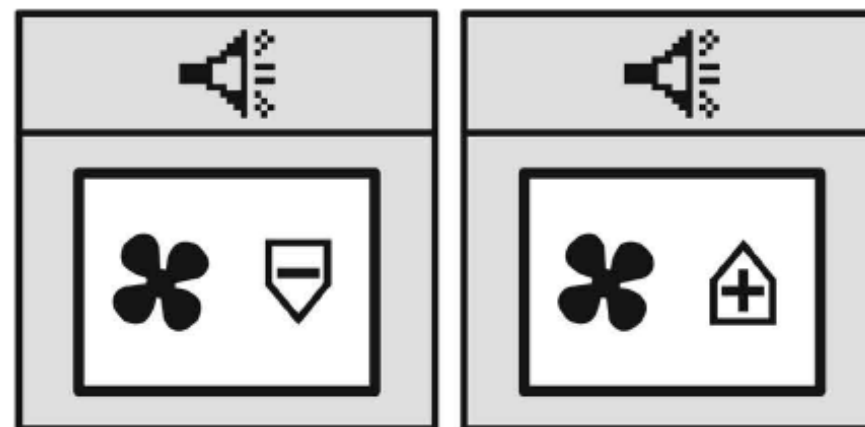

SCREEN: SHAFT ROTATION LIMIT

- Pressure limit warning display exceeded;

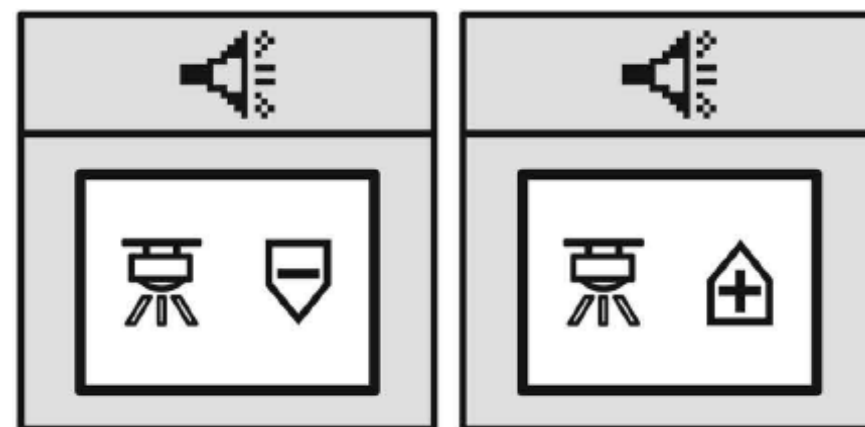


SCREEN: PRESSURE LIMIT

▪ Manual PM 400 - Optional

- Alarm Types - Part IV
- Lack of Travel Speed

When planting without marking the machine's travel is detected, the alarm sounds until the problem is solved. The travel speed warning screen will be displayed.

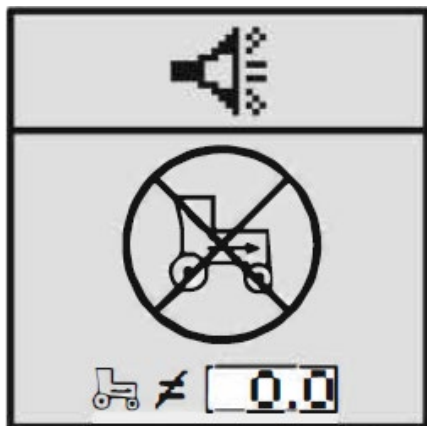

SCREEN: LACK OF SPEED

- Self-test Failure

When it is detected that the battery voltage is insufficient or exceeds the maximum voltage limit, the self-test alarm sounds. The self-test failure warning screen will be displayed.



SCREEN: SELF-TEST FAILURE

- Maximum Travel Speed Exceeded (Optional)

When detected, the audible alarm sounds until the travel speed is adjusted within the configured range. The Maximum Speed Exceeded warning screen will be displayed.



SCREEN: SPEED FAILURE

▪ Manual PM 400 - Optional

• Troubleshooting - Part I

ERROR: THE MONITOR DOES NOT TURN ON.

PROBABLE CAUSE: Monitor fuse blown.

CORRECTIVE ACTION: Inspect the fuse (located near the battery). If necessary, replace with a fuse of a maximum of 7.5 A. If the fuse blows again, inspect all harnesses for dents or breaks that could cause a short circuit with the grounding.

PROBABLE CAUSE: Bad battery connection.

CORRECTIVE ACTION: Make sure that the connections are clean and tightened correctly. Inspect the harnesses for damage.

PROBABLE CAUSE: Low battery voltage.

CORRECTIVE ACTION: The monitor voltage must be at least 10V. If it is lower, recharge or replace the battery.

ERROR: LINE FAILURE OR HIGH/LOW ALARM IN LINE PLANTING PROPERLY.

PROBABLE CAUSE: Seed sensor covered with dirt.

CORRECTIVE ACTION: Clean the sensor using the brush that came with the equipment.

PROBABLE CAUSE: Defect in the sensor or harness.

CORRECTIVE ACTION: Turn on the sensor and see the troubleshooting LED. If the sensor does not have an LED, replace the harness connection with a nearby sensor to determine if the sensor is damaged.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

▪ Manual PM 400 - Optional

• Troubleshooting - Part II

ERROR: TANK ALARM DOES NOT SOUND WHEN EMPTY.

PROBABLE CAUSE: Tank sensor covered with dirt.

CORRECTIVE ACTION: Clean the sensor using the brush that came with the equipment.

PROBABLE CAUSE: Short-circuit sensor or harness failure.

CORRECTIVE ACTION: Change the harness connection with another sensor to determine if the problem is with the sensor or the harness.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

ERROR: TANK ALARM SOUNDS WHEN FULL.

PROBABLE CAUSE: Broken sensor or harness failure.

CORRECTIVE ACTION: Monitor detected a different number of sensors than the I/O line configuration. Make sure that all lines are being detected during the self test. Replace defective sensors.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

▪ Manual PM 400 - Optional

• Troubleshooting - Part III

ERROR: SYSTEM VOLTAGE ALARM.

PROBABLE CAUSE: Low battery voltage.

CORRECTIVE ACTION: The monitor voltage must be at least 10V. If it is lower, recharge or replace the battery.

PROBABLE CAUSE: Battery faulty contact.

CORRECTIVE ACTION: Check that the connections are clean and tight.

PROBABLE CAUSE: Damaged harness.

CORRECTIVE ACTION: Inspect all harnesses for damage or breakage that can cause a short circuit.

ERROE: AUXILIARY MODE ALARM SOUND WHEN THE SHAFT, FAN, OR FLOW ARE IN PROGRESS.

PROBABLE CAUSE: Sensor failure.

CORRECTIVE ACTION: Shaft, fan, or flow sensor not operating. Replace the defective sensor.

PROBABLE CAUSE: Wrong calibration number.

CORRECTIVE ACTION: Incorrect calibration sensor number. Check the calibration number on the accessories setup screen.

PROBABLE CAUSE: Incorrect sensor limits.

CORRECTIVE ACTION: Sensor limits are incorrect. Check the limits on the setting the accessories screen.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

▪ Manual PM 400 - Optional

• Troubleshooting - Part IV

ERROR: TRAVEL SPEED ALARM SOUND WITH THE MACHINE IN MOTION.

PROBABLE CAUSE: Travel speed sensor failure.

CORRECTIVE ACTION: Travel speed sensor is not detected. Replace the defective sensor.

ERROR: MONITOR FAILURE.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

ERROR: ALARME DE VELOCIDADE MÁXIMA EXCEDIDA SOANDO.

PROBABLE CAUSE: Maximum travel speed alarm set to slow.

CORRECTIVE ACTION: Set the travel speed limit to faster or zero to disable.

PROBABLE CAUSE: Incorrect speed constant.

CORRECTIVE ACTION: Speed sensor has not been calibrated, RADAR sensor angle has been changed, or an incorrect constant has been entered. Use SPEED - AREA - DISTANCE mode to determine if the speed is correct. If it is incorrect, re-calibrate the speed constant.

ERROR: SELF-TEST ALARM.

PROBABLE CAUSE: Defective monitor.

CORRECTIVE ACTION: Contact Agrosytem.

▪ Manual ETD (Electronic Dosing Table) - Optional

• Presentation



The **ETD** is an electronic device that can be connected to planters, seeders, and fertilizers to assist the operator in configuring the best gear ratio so that the correct dosage of seeds and fertilizers occurs, according to the needs of each area/plot, based on the adjustments previously done in the field and calibrations before planting. It allows to perform other additional functions such as the registration of planted hectares, hours actually worked and planting speeds above specified, and this important information is recorded and shown on the **ETD** electronic device display.




ATTENTION

To use the ETD (Electronic Dosing Table), refer to the instruction manual on the following pages.

▪ Manual ETD (Electronic Dosing Table) - Optional


• Assembling the magnets on the main shaft

The magnets (1) must be installed on the planter's primary shaft, after the shutdown ratchet, as this way, hours and hectares of when the machine is in transport will not be counted. A magnet must be installed on each face of the shaft (3), securing them with two nylon clamps (4) so that whoever is properly fixed and positioned (4).

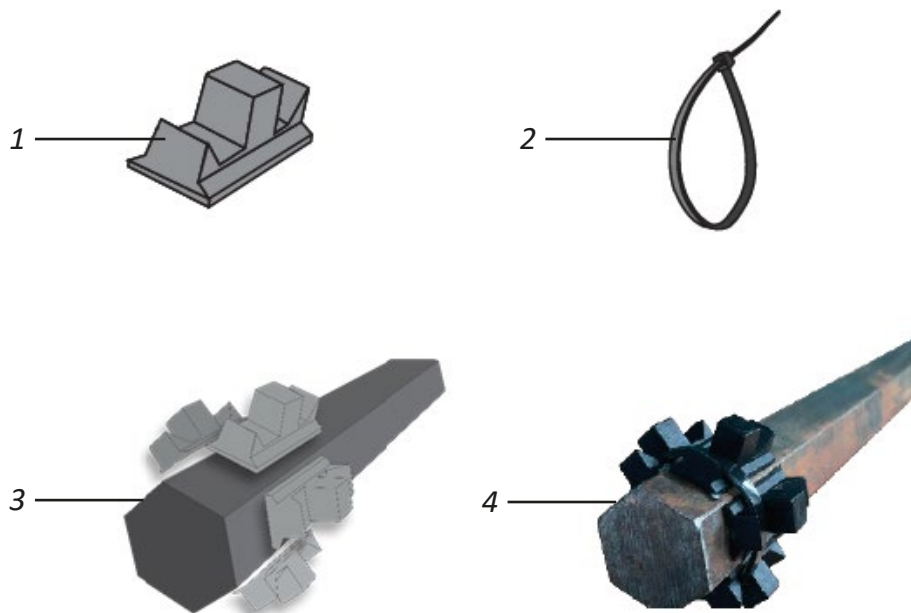

• Assembling the speed sensor


Mount the sensor (1) on the support (2) fixing by the nuts (3) according to the image (4).

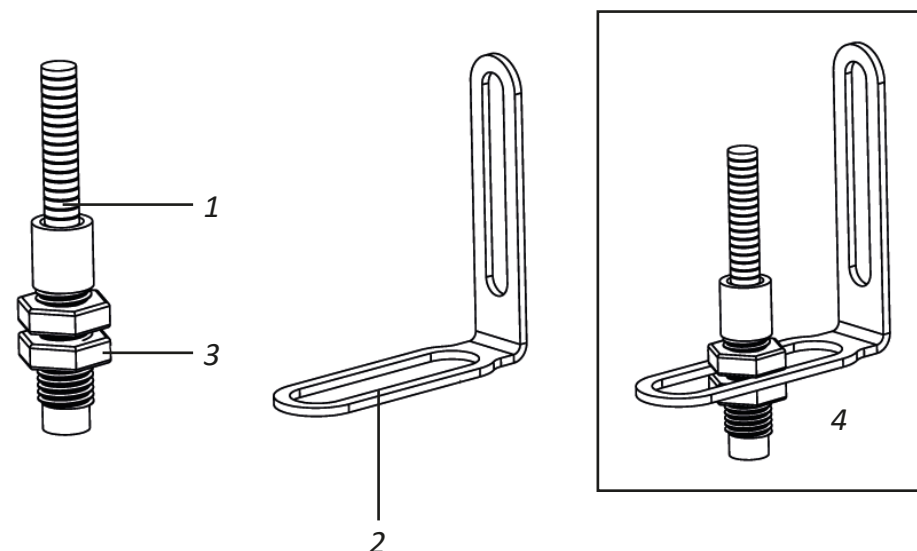

Manual ETD (Electronic Dosing Table) - Optional

• Speed sensor installation

Attach the sensor support (1) to the machine chassis (2) using the M8x30 screw (3) making sure that the distance between the sensor and the magnets is less than 3 mm (4). It is extremely important to align the speed sensor and the magnets on the primary shaft (5).

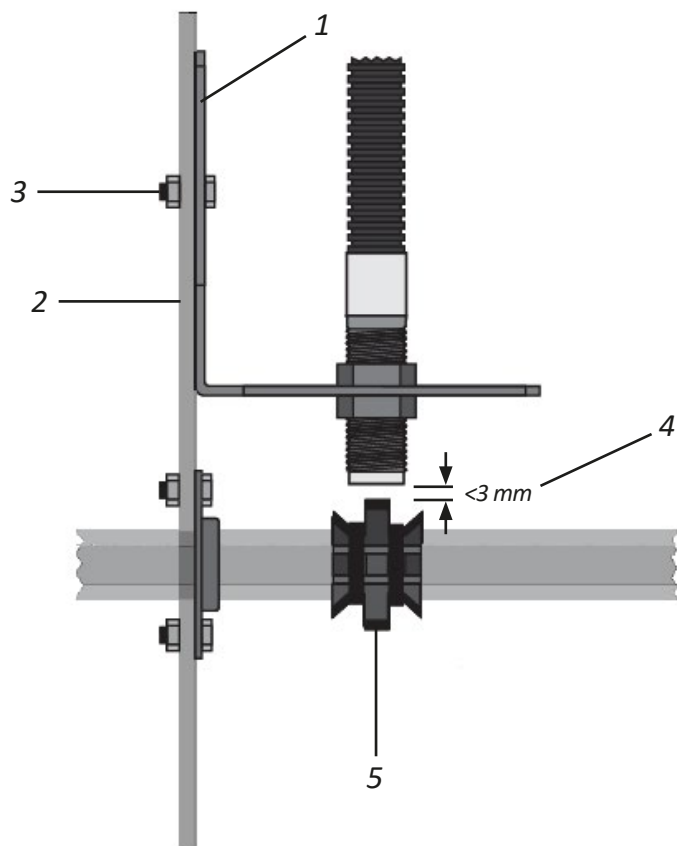

• Identification



- A - Display
- B - Function key
- C - Decrease item
- D - Login
- E - Increase item

The ETD has four keys

Function F key

The Function F key is used to change between the four main functions of the ETD, which are:

- F1: Seed Rate
- F2: Fertilizer Rate
- F3: Hobbs Meter
- F4: Hectometer

Within the menus, the Function F key assumes the “back” function, which facilitates navigation.

Teclas

The keys ▼ and ▲ are used to increase the numeric items of the interface. The icon with arrows above and below the interface indicates the item to be controlled by the keys.




Keys ▶

The key ▶ is used as a “enter” function. This key allows you to enter the options that are shown in the lower right corner of the interface.


▪ Manual ETD (Electronic Dosing Table) - Optional

• Settings menu


The settings menu (1) can be accessed through the Function F key, when pressed for more than 2 seconds.

The settings menu has 7 items. The keys  (2) are used to navigate between menu items.



The Select key  (3) is used to select the highlighted item. Just click on the “F” key (4) to exit the settings menu




To select the start of the calibration click ‘Yes’  (1).

• Sensor calibration



When starting the sensor calibration (2), the machine must be moved for exactly 100 meters (3) and stopped.


The number of pulses (4) counted by the sensor is shown on the screen. To complete the calibration, the operator must press  the (5) “Ready” key.

The calibration of the sensor is important for the ETD to determine the number of hectares worked, the machine’s working speed and also the distance covered in the fertilizer calibration.

If, during displacement, the number of pulses corresponding to the end of the 100m is not displayed, the displacement of the sensor or magnets may have occurred, making it impossible to read the pulses during the displacement. In this case, it is necessary to carry out the adjustment of these components according to the assembly diagram, item 4 “INSTALLING THE SPEED SENSOR”, previous page.

▪ Manual ETD (Electronic Dosing Table) - Optional

• Machine

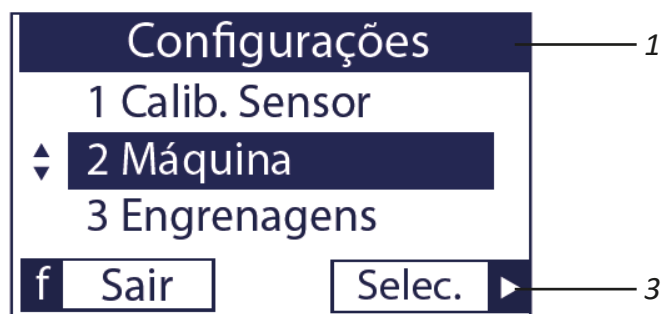

In the machine configuration (1), click 'Select' ► (2) to enter the number of Rows using the buttons ▲▼ (3).



Number of Rows, range of values: 01 ~ 80.

After selecting the number of Rows contained in the machine, press the 'Next' key ► (4) to select the Row spacing using the buttons ▲▼ (5).

• Sensor calibration



When clicking on "Save" ► (6), the system saves the settings and displays the following message.




This information is very important for the presentation of the worked hectares and also for the calibration of fertilizer rates.


▪ Manual ETD (Electronic Dosing Table) - Optional

• Seed rate - Part I

1) Select Seed Rate and click Select.

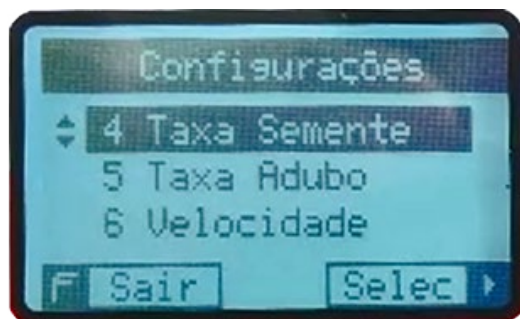


2) Then select CD Gears and click Select.

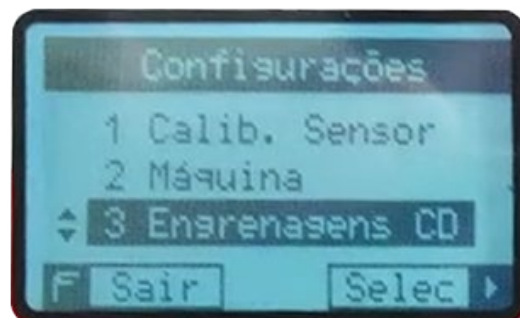


3) Then keep the list below.




4) Click Fn to save.

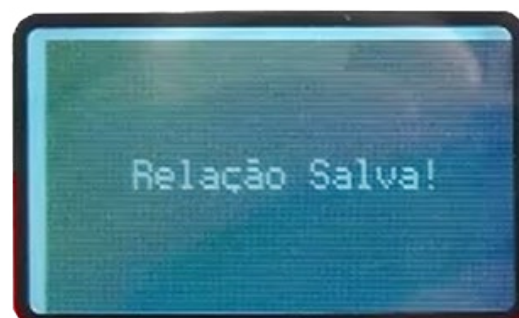

5) Then select CD Gears and click Select.

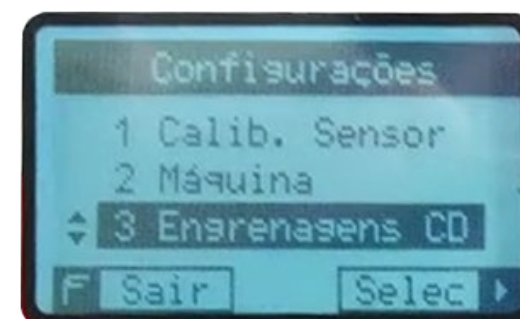

6) Then select Seed Rate and click Select.

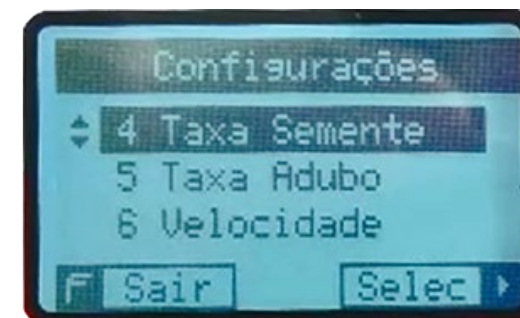

▪ Manual ETD (Electronic Dosing Table) - Optional

• Seed rate - Part II

7) Then select Change Disk and click Select.



8) Then, insert the number of holes in the disc according to the crop to be worked.



9) Then click save.



10) Next, select Register Table and click Select.



11) IMPORTANT: Look in the Seed physical table on the disk you will be working on and choose the average value. **Example:** B1.



12) Then type B1 and click Next.



▪ Manual ETD (Electronic Dosing Table) - Optional

• Seed rate - Part III

13) Then keep the CxD Ratio and click next.




14) Then keep the amount of holes placed previously and click next.



15) **NOTE:** Note that the seed rate value 4.9 corresponds to relation B1 in the SPEED BOX table; if it is different, redo the previous steps.




16) Then, if the value is correct, click on save.

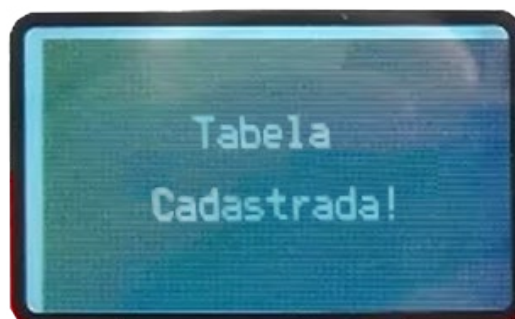

Then select Fn (exit) and go to the FERTILIZER settings as instructed on the following pages.


Manual ETD (Electronic Dosing Table) - Optional

Fertilizer rate

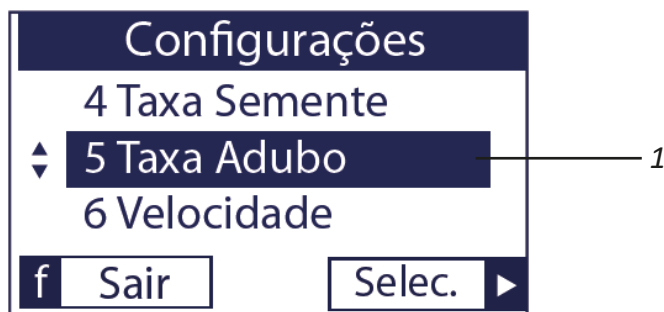


The F2 (1) screen indicates the fertilizer rate (2) in kg per hectare obtained with a specific gear ratio. Fertilizer rates are calculated according to the fertilizer calibration, the gear configuration (3) and the spacing between Rows. The ▼ and ▲ keys (4) allow the user to navigate between the rate options in Kg/ha.

Fertilizer Rate: ETD

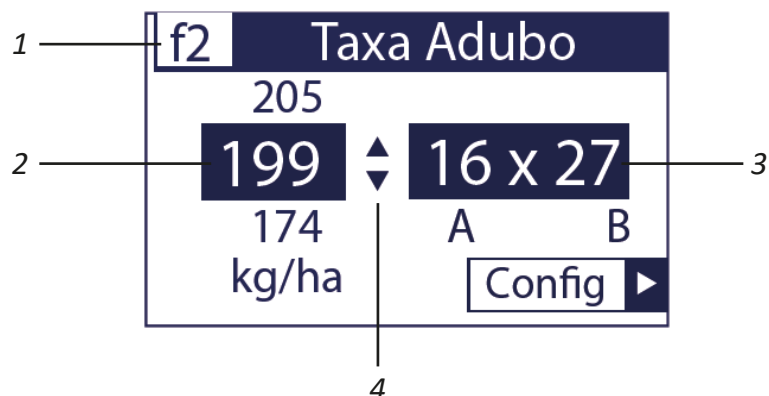

The fertilizer rate menu has two items: Total Calculation (5) and Calibrate Fertilizer (6).

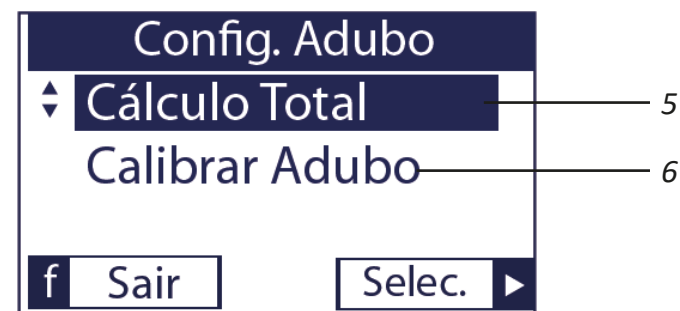

Total calculation


In total calculation (5), the user can calculate the amount of total fertilizer in tons (8) required for planting a given area, in hectares. The last fertilizer rate selected on the function screen F2 (9), selected using the key ▲ (10) is used as a reference for the calculation.




▪ Manual ETD (Electronic Dosing Table) - Optional

• Calibrate fertilizer - Part I

The fertilizer calibration (11) has 3 steps. First, you must inform the gear ratio (12) used on the machine at the time of calibration. **EXAMPLE:** In the SPEED BOX, configure the option Mot **6** and Mov **F**, then inform the same configuration in the ETD; then walk 50 m collecting at least 3 fertilizer outlets, make the average and enter the value in the electronic table).

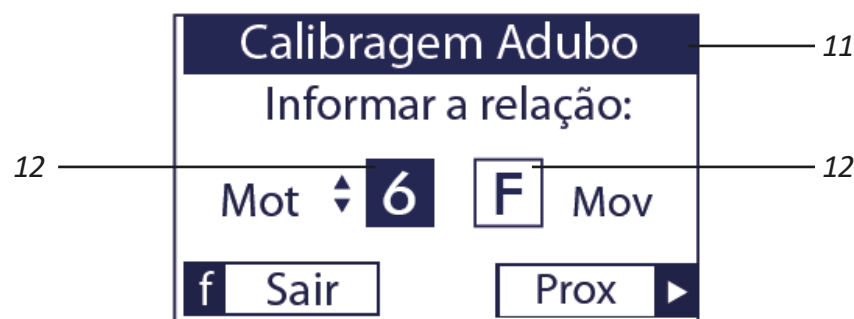


On the next screen, the operator must walk with the machine collecting the fertilizer over a distance greater than 50 meters (1). It is important that the sensor is already calibrated so that the distance covered is measured correctly. The distance traveled is displayed instantly (2).

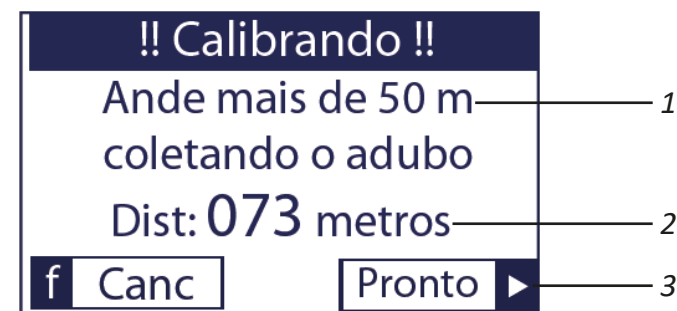

After covering the required distance, click on Ready (3).


NOTE: The minimum distance to be covered is 50 meters, if this distance is insufficient, the screen for entering the weight of the collection will not be enabled and the following warning will be displayed:

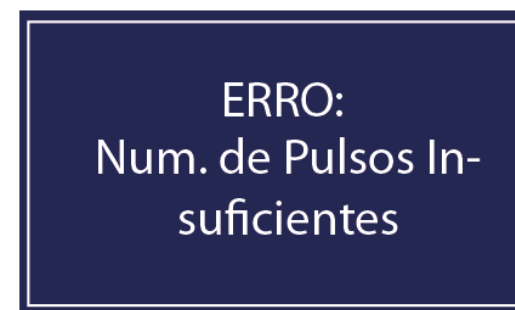

▪ Manual ETD (Electronic Dosing Table) - Optional


• Calibrate fertilizer - Part II

On the next screen (1), the total weight of the collected fertilizer (2) in a row or the average of the collection, always in grams, is reported.

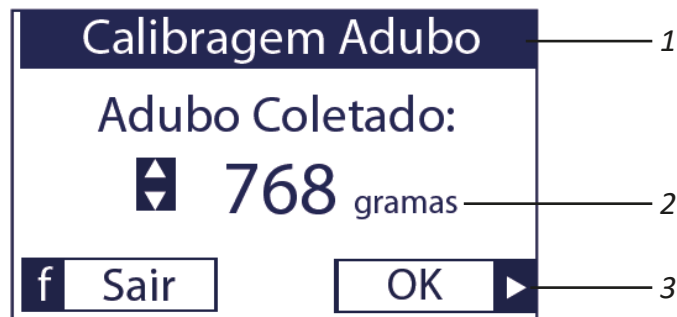



Fertilizer collected, value range: 10 ~ 9000 Grams.

Click on 'OK' (3) the 'calibration completed' message is displayed.

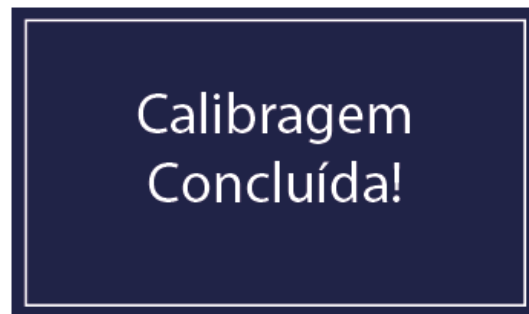

• F3 Hobbs Meter

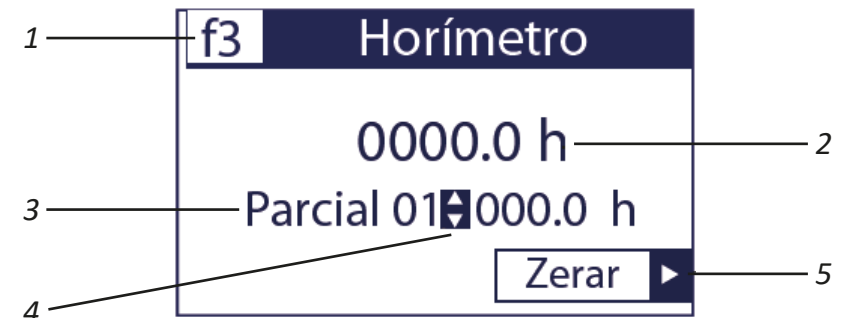


The F3 screen (1) indicates the total number of hours (2) of work with the ETD in three partials (3), which can be related to the keys  (4)


To reset a certain partial, the Reset key (5) must be held down for more than 2 seconds.

The hours counted refer only to the time that the machine was in effective work, that is, with the ratchet turned on. Thus, hours of handling the ETD or traveling with the machine in the transport position will not be counted.

▪ Manual ETD (Electronic Dosing Table) - Optional


• F4 Hectometer

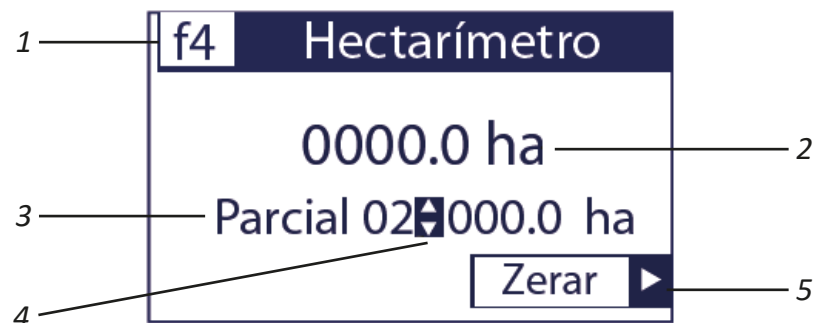


Screen F4 (1) indicates the total number of hectares worked (2) with the ETD, also in 3 partial ones (3), which can be selected using the keys  (4).

• Settings menu - Part I

The settings menu (1) can be accessed through the Function F key, when pressed for more than 2 seconds.


The settings menu has 7 items. The keys  (2) are used to navigate between menu items.



The Select key  (3) is used to select the highlighted item. Just click on the "F" key (4) to exit the settings menu.

▪ Manual ETD (Electronic Dosing Table) - Optional

• Settings menu - Part II

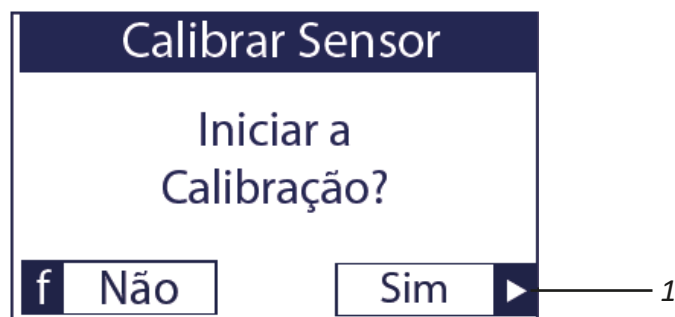

To select the start of the calibration click 'Yes' ► (1).

• Sensor calibration



When starting the sensor calibration (2), the machine must be moved for exactly 100 meters (3) and stopped.


The number of pulses (4) counted by the sensor is shown on the screen. To complete the calibration, the operator must press the (5) "Ready" key ►.

The calibration of the sensor is important for the ETD to determine the number of hectares worked, the machine's working speed and also the distance covered in the fertilizer calibration.

If, during displacement, the number of pulses corresponding to the end of the 100m is not displayed, the displacement of the sensor or magnets may have occurred, making it impossible to read the pulses during the displacement. In this case, it is necessary to carry out the adjustment of these components according to the assembly diagram, item 4 "INSTALLING THE SPEED SENSOR", page 143.

▪ Manual ETD (Electronic Dosing Table) - Optional

• Machine

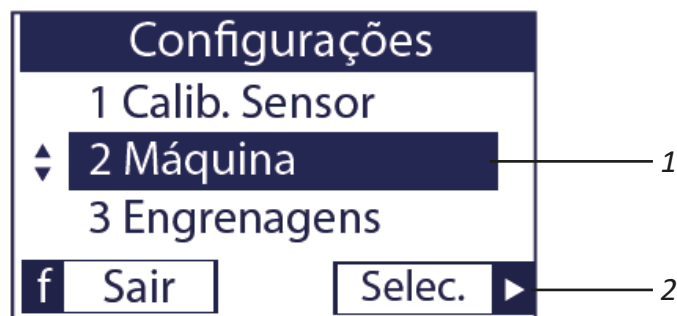

In the machine configuration (1), click 'Select' ► (2) to enter the number of Rows using the buttons ▲▼ (3).



Number of Rows, range of values: 01 ~ 80.

After selecting the number of Rows contained in the machine, press the 'Next' key ► (4) to select the Row spacing using the buttons ▲▼ (5).



Spacing, range of values: 01 ~ 99 cm.


When clicking on "Save" ► (6), the system saves the settings and displays the following message.




This information is very important for presenting the hectares worked and also for calibrating fertilizer rates.

▪ Manual ETD (Electronic Dosing Table) - Optional

- Time above maximum speed

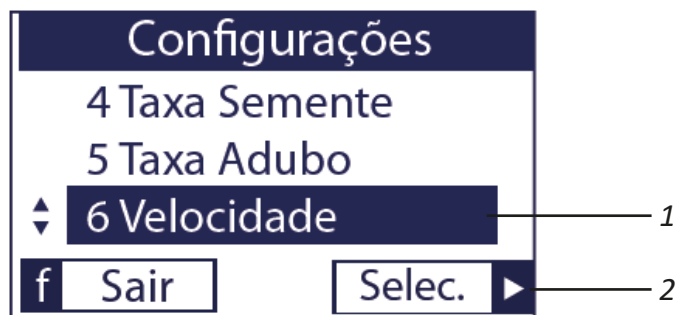

By clicking on 'Select.' ► (2) in the 'Speed' setting (1) it will be shown for how many hours (4) the machine has been working above the limit speed (3).

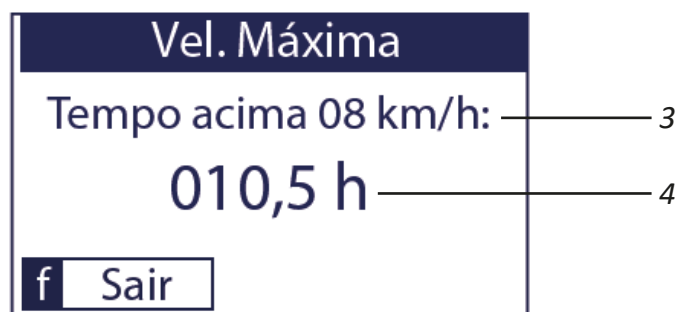

■ Identification

• Identification plate

To see the parts catalog or to request technical assistance from Baldan, always inform model (01), serial number (02) and date of manufacture (03), which is on your **PPSOLO AIR 3rd SEED BOX - VSET** nameplate.



ATTENTION

The drawings in this Instruction Manual are merely illustrative.

CONTACT

In case of doubts, never operate or handle your equipment without referring to Post-Sales.
Telephone: 0800-152577
e-mail: posvenda@baldan.com.br

PUBLICATIONS

Code: 60550108804 | CPT: PPSAIR15218

• Product Identification

Please make the correct identification of the data below, to always have information about the service life of your equipment.

Owner: _____

Dealer: _____

Property: _____

City: _____

State: _____

Certificate of Warranty no.: _____

Implement: _____

Serial No: _____

Purchase Date: _____

Invoice: _____



■ Notes:

■ Certificate of Warranty

BALDAN IMPLEMENTOS AGRÍCOLAS S/A ensures the dealer normal performance of the implement for a period of six (6) months as of the delivery date on the retail invoice to the first final consumer. During this period, **BALDAN** undertakes to repair defects in material and/or of manufacture of its liability, including labor, freight and other expenses of the dealer's liability.

In the warranty period, request and replacement of eventual defective parts shall be made to the dealer of the area, who will submit the faulty piece for **BALDAN** analysis.

When this procedure is not possible and the resolving capacity of the dealer is exhausted, the dealer will request the support of **BALDAN Technical Assistance** through a specific form distributed to dealers. After analyzing the replaced items by Baldan Technical Assistance, and concluding that it is not a warranty, then the dealer will be responsible for the costs related to the replacement; as well as material expenses, travel including accommodation and meals, accessories, lubricant used and other expenses arising from the call out to Technical Assistance, and Baldan company is authorized to carry the respective invoice in the name of the resale. Any repair carried in the product within the dealer warranty deadline will only be authorized by **BALDAN** upon previous budget presentation describing parts and work to be performed.

The product is excluded from this term if it is repaired or modified by representatives not belonging to the **BALDAN** dealer network, as well as the application of non-genuine parts or components to the user's product. This warranty is void where it is found that the defect or damage is caused by improper use of the product, failure to follow instructions or inexperience of the operator.

It is agreed that this warranty does not cover tires, polyethylene tanks, cardan, hydraulic components, etc., which are equipment guaranteed by their manufacturers. Manufacturing and/or material defects, object of this warranty term, will not constitute, under any circumstances, grounds for termination of a purchase agreement, or for indemnification of any nature.

BALDAN reserves the right to change and/or perfect the technical characteristics of its products, without previous notice, and without obligation to proceed in the same way with the products previously manufactured.

■ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sale organization, with all its parts inspected according to the manufacturing prescriptions.

DELIVERY SERVICE: The user was informed about the current warranty terms and instructed on the usage maintenance precautions.

I confirm that the user has been informed about the current warranty terms and instructed on the usage maintenance precautions.

Implement: _____ Serial Number: _____

Date: _____ Tax Number: _____

Dealer: _____

Telephone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Telephone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Sale date: _____

Signature / Dealer Stamp _____

1st copy - Owner

■ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sale organization, with all its parts inspected according to the manufacturing prescriptions.

DELIVERY SERVICE: The user was informed about the current warranty terms and instructed on the usage maintenance precautions.

I confirm that the user has been informed about the current warranty terms and instructed on the usage maintenance precautions.

Implement: _____ Serial Number: _____

Date: _____ Tax Number: _____

Dealer: _____

Telephone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Telephone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Sale date: _____

Signature / Dealer Stamp _____

2nd copy - Dealer

■ Inspection and Delivery Certificate

SERVICE BEFORE DELIVERY: This implement was carefully prepared by the sale organization, with all its parts inspected according to the manufacturing prescriptions.

DELIVERY SERVICE: The user was informed about the current warranty terms and instructed on the usage maintenance precautions.

I confirm that the user has been informed about the current warranty terms and instructed on the usage maintenance precautions.

Implement: _____ Serial Number: _____

Date: _____ Tax Number: _____

Dealer: _____

Telephone: _____ CEP: _____

City: _____ State: _____

Owner: _____

Telephone: _____

Address: _____ Number: _____

City: _____ State: _____

E-mail: _____

Sale date: _____

Signature / Dealer Stamp _____

3rd copy - Manufacturer (Please send completed within 15 days).



BALDAN IMPLEMENTOS AGRÍCOLAS S/A.

Av. Baldan, 1500 | Nova Matão | CEP: 15993-900 | Matão-SP | Brasil
Phone: (0**16) 3221-6500 | Fax: (0**16) 3382-6500
Home Page: www.baldan.com.br | e-mail: sac@baldan.com.br
Export: Phone: 55 16 3321-6500 | Fax: 55 16 3382-4212 | 3382-2480
e-mail: export@baldan.com.br

THE STAMP WILL BE PAID BY:

RESPONSE CARD
NO STAMPING IS REQUIRED

1.74.05.0059-5
AC MATÃO
ECT/DR/SP



Avenida Baldan, 1500
Nova Matão
15.993-900
Matão/SP - Brasil
sac@baldan.com.br
export@baldan.com.br

+55 16 3221 6500
baldan.com.br